



Wynn Marine Ltd

2-4 Merse Road, North Moons Moat, Redditch, Worcestershire B98 9HL, United Kingdom

Tel: +44 (0) 1527 61243, Fax: +44 (0) 1527 66836

Email: customerservice@b-hepworth.com, website www.b-hepworth.co.uk

Installation & Maintenance Manual

Type C Straight Line Wiper - Inside Motor

With

Series 8000 Network Control System

Issue 10

WARNING: A suitably qualified person should perform all installation and maintenance. All electrical wiring should be carried out in accordance with relevant regulations. Ensure all products are correctly earthed and all connections are made in accordance with the wiring diagram. Non-compliance may result in damage, malfunction or personal injury. Before commencing any installation or maintenance work, ensure that the electrical supply is disconnected.

Index

Safety Summary	1
Wiper Description	2
Wiper Installation	4
Wiper Installation Drawing	12
Wiper Installation Drawing	14
Wiper Installation Drawing	16
Wiper Installation Drawing Twin	18
Wiper Motor Installation	20
Parvalux Wiring Diagram	21
Wiper Fault Finding	22
Wiper Maintenance	25
Wiper Inspection and Renewal	27
Wiper Spares List	31
Wiper Spares Drawing	34
Wiper Spares Drawing Twin	35
Wiper Arm	37
Wiper Arm	38
Double Wiper Arm	39
Double Wiper Arm	40
SLW Part Number Calculator	43
Controller Description	45
Typical Bridge Layout	50
Controller Bus Connections	51
Controller Bus Connections	52
Bus Cable Installation	53

Controller Keypad Installation	56
Controller Keypad Operation	60
Controller Keypad User Programming	62
Module Installation	66
Module Electrical Drawing	74
19 Inch Rack Installation	75
Module Electrical Drawing	84
Module Electrical Drawing	85
Connector Information	86
Controller Troubleshooting	87
Documentation	95

GENERAL INFORMATION AND SAFETY SUMMARY

As we will have no influence on the installation of complete windscreen wiper systems if installation is to be carried out by the customer, we are unable to accept liability for installation errors.

If you require any additional information or any special problems arise which the installation/maintenance instructions do not treat in sufficient detail please contact Customer Service at B. Hepworth and Co Ltd directly.

Safety Precautions

CAUTION! BEWARE OF INJURY!

BEFORE WORKING ON THE WIPER SYSTEM, OBSERVE THE FOLLOWING REMARKS WITHOUT FAIL!

Most wiper motors have a park setting, which permits them to default to the parked position if connected to the vehicle electrical system, even when the wiper is switched off. FOR THIS REASON, AT THIS POINT IN TIME, NEITHER MAY THE WIPER ARM BE MOUNTED, NOR MAY ANY PERSON HAVE HANDS, FINGERS, ETC ANYWHERE NEAR THE WIPER SYSTEM. Even small wiper motors can neither be braked nor stopped by hand.

NEVER REACH INTO THE AREA OF THE DRIVE BELT WHEN THE SYSTEM IS RUNNING!

When putting into service (i.e. when connecting the wiper motor to the vehicle electrical system, even if the wiper switch is in the off position), never leave any loose items such as screwdrivers in the area of the wiper system, as flying objects could lead to injury.

Please ensure the equipment is handled with care. Do not drop or bang the equipment down on a hard surface taking extra care around the area where the motor shaft is situated. Do not hammer the motor shaft when installing the equipment, as this will cause the motor gear plate to deform causing premature failure of the unit.

Wipers should be wrapped in protective material after installation to protect them from damage. Type of material depends on work done in the vicinity, for instance, if welding or grinding work needs to be done near the wipers then a fire resistant blanket should be used. If no welding or grinding work is required near the wipers then bubble is sufficient.

Introduction

The Windscreen Wiper system utilised is detailed on the following pages. The primary components that form the Windscreen Wiper System are the wiper case assembly, the wiper arm assemblies and the wiper blades.

TYPE C WIPER DESCRIPTION AND SPECIFICATION

The 'Type C' is a Heavy Duty Straight Line Wiper with an electric motor mounted internally. The wiper can be mounted either above or below the window.

All electric motors incorporate a worm reduction gearbox. Windings are to Class F insulation.

The variable frequency AC motor option is for 3 speed operation and must be used with the 8000 Series Controller. Complies with the EMC Directive according to the following: EN 60945:2002

Motor Specifications

Motor	Type	Nominal Voltage	Full load current at 50/60 Hz	Fusing Value 50/60 Hz	Speed	Compass Safe Distance	Protection Rating
PARV81	Induction	115V AC	1.5 A	8000 Controller	0.7/1.1/1.4	0.5 m	IP20
PARV82	Induction	220V AC	1.1 A	8000 Controller	0.7/1.1/1.4	0.5 m	IP20

For protection it is recommended that the wiper system have fuses fitted. The fuses will not blow in normal conditions, however if the wiper is jammed, then the fuses are designed to blow before the motor is damaged. Each wiper requires its own fuse. Fuse values shown above.

Compass safe distances, BSH (Germany) certified, have the values shown above. The distance quoted is the maximum figure for 'Magnet-Regelkompass'.

Drive shaft lengths are optional. These are available in standard and gas tight versions. The standard length is 84 mm. Other lengths available are 35mm, 140mm, 200mm and 220mm. The Certificate of Conformity will advise which option has been fitted.

Spray nozzles & water connections

A fresh water supply can be plumbed directly to the wiper into a 6mm overall diameter compression fitting. On stroke lengths below 1015mm, 1 nozzle is fitted, above 1015mm, 2 nozzles are fitted at ¼ stroke + 137mm from either end. The installer needs to provide pressurised water supply and the interconnecting plumbing. When the wash option is installed, the maximum pressure for the system is 8 bar or 118 PSI and the minimum pressure for adequate spray reach is 1 bar or 15 PSI. Example flow rates for a single spray jet are shown below.

Water System Pressure And Flow Rates

Pressure		Flow rate	
Bar	Psi	Litres/min	Gallons/min
1.0	15	0.95	0.20
1.5	22	1.20	0.25
2.0	29	1.40	0.30
3.0	44	1.75	0.40

De-icing Heaters

Optional de-icing heaters may be fitted inside the wiper case to ensure effective operation in cold conditions. Standard cable length is 2M. Optional lengths are 5M, 10M, 15M and 20M. Power consumption is according to the wiper stroke length, shown below.

Heater Power Ratings – Single Wipers

STROKE (mm)	STROKE (inch)	HEATER SIZE	WATTS	STROKE (mm)	STROKE (inch)	HEATER SIZE	WATTS
305 up to 430	12 up to 17	1	97	1500 up to 1800	59 up to 71	8	390
457 up to 735	18 up to 29	2	135	1930 up to 2100	76 up to 83	10	485
760 up to 1095	30 up to 42	4	211	2260	89	12	574
1118 up to 1450	43 up to 57	6	301				

Quoted Power is for nominal 115 or 230 Volts.

Heater Power Ratings – Twin Wipers

OVERALL STROKE (mm)	STROKE (inch)	HEATER SIZE	WATTS	OVERALL STROKE (mm)	STROKE (inch)	HEATER SIZE	WATTS
585 up to 685	2 x 12 – 2 x 15	2	135	1855 up to 2165	2 x 37 – 2 x 43	10	485
735 up to 1042	2 x 16 – 2 x 21	4	211	2210 up to 2565	2 x 44 – 2 x 51	12	574
1091 up to 1445	2 x 22 – 2 x 29	6	301	2645 and above	2x 53 – 2 x 89	14	663
1495 up to 1805	2 x 30 – 2 x 36	8	390				

Quoted Power is for nominal 115 or 230 Volts.

TYPE C WIPER INSTALLATION




CAUTION: Ensure that the correct wiper, blade and arms are selected for each window.


CAUTION: Before drilling, ensure that there are no obstructions / hazards at the chosen mounting position. The main frame should be mounted on a flat surface that will not bend or twist the casing, as this will prevent correct operation of the wiper.

CAUTION: Where more than one wiper unit is to be mounted close together, allow a distance of 70mm minimum between the wiper units.

Stud or Bracket Mounting

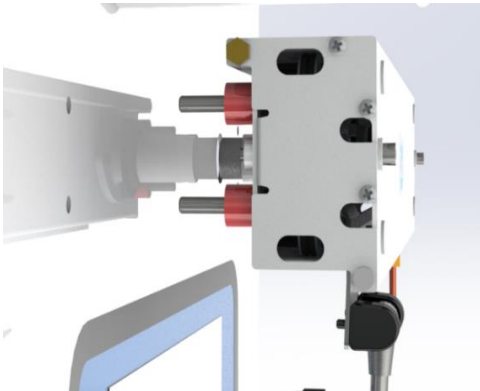

Stud Mounting

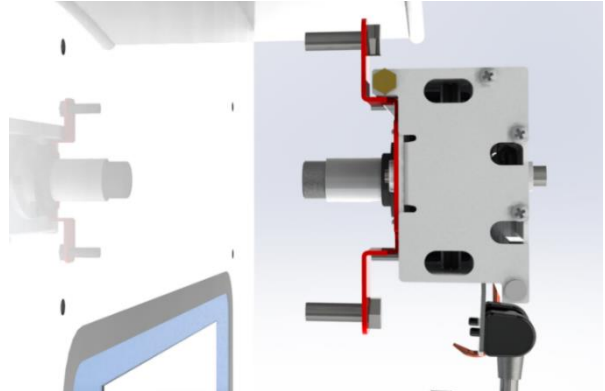

Bracket Mounting

1. Locate the self-adhesive template in the correct mounting position on the outside of bulkhead (stud mounting only).

NOTE: For motors mounted at the opposite end, the template should be inverted.

2. Drill the wiper 2 off fixing holes (11 mm diameter) and the drive shaft housing hole (57mm diameter).
3. Detach the front cover from main unit. Hold the back casing in the required position and mark-out the remaining fixing holes, or calculate their position from the drawing i.e. stroke length plus 266 mm.
4. Drill the remaining wiper fixing & cable holes for the heater and park sensor, ensuring that all holes are circular and carefully de-burred. Treat bare metal to prevent corrosion.
5. Fit the wiper case into position and secure with M10 bolts. Ensure that the bolts are sealed where they pass through the bulkhead.
6. Push the drive shaft seals into place. It is advisable to use a suitable sealant to prevent water ingress.
7. Using the supplied M6 x 10mm screws, secure the wiper arm to the carriage plate.




CAUTION: Ensure the correct length screws are used, as supplied. Longer screws will cause the carriage assembly to jam.

8. Bolt the front cover to the back case using the 2 off M8 bolts fitted.



CAUTION: Do not overtighten the cover bolts. There should be 3mm clearance between arm mounting plate and inside of wiper cover.

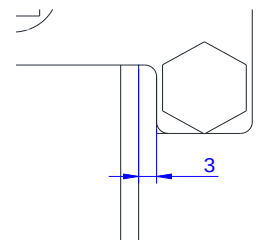

9. If necessary, slacken the screws on the wiper blade attachment clip, move the blade up or down for optimum position and then retighten screws.
10. Move the wiper arm/blade assembly over its full stroke and check that there is no restriction to movement (the motor will offer some resistance, but should not jam the wiper). Investigate and rectify any restrictions. If necessary adjust the wiper blade up or down on the arm to avoid the window frame.
11. Pass the cables through the bulkhead, leaving sufficient spare cable to allow the front cover to be lifted away from the rear case during the maintenance period. Ensure the wiper is correctly earthed.

NOTE: If a heater is fitted pass the heater cable through the bulkhead, leaving a loop as required, and seal.


12. Ensure that wherever the cable passes through the bulkhead a suitable cable gland or seal is used to prevent water ingress and cable chaffing.
13. Put a small amount of grease on drive shaft body.



14. Slide motor onto the drive shaft making sure the drive gear on the motor fully engages with drive gear on drive shaft.



Universal Carrier & Bracket Mounting

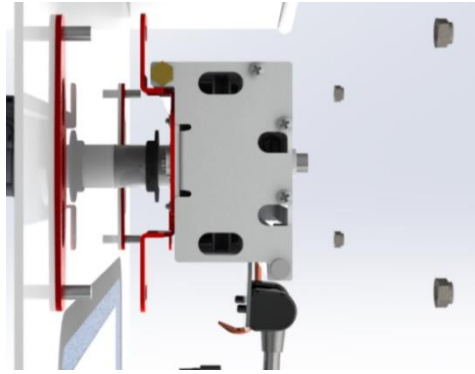

Universal Bracket Mounting

1. Carefully mark the position of the drive shaft housing hole and 2 (3 for longer wipers) universal carrier plates.
2. Drill the drive shaft housing hole (57mm diameter).
3. Prepare the bulkhead and universal carrier plates carefully and weld the 2 (or 3 for longer wipers) universal mounting brackets into position. Treat bare metal to prevent corrosion.
4. Drill the remaining wiper fixing & cable holes for the heater and park sensor, ensuring that all holes are circular and carefully de-burred. Treat bare metal to prevent corrosion.
5. Fit the wiper case into position on the Universal Carrier studs and secure with supplied M10 spring washers, M10 flat washers and M10 nuts.
6. Push the drive shaft seals into place. It is advisable to use a suitable sealant to prevent water ingress.
7. Using the supplied M6 x 10mm screws, secure the wiper arm to the carriage plate.




CAUTION: Ensure the correct length screws are used, as supplied. Longer screws will cause the carriage assembly to jam.

8. Bolt the front cover to the back case using the 2 off M8 bolts fitted.



CAUTION: Do not overtighten the cover bolts. There should be 3mm clearance between arm mounting plate and inside of wiper cover.

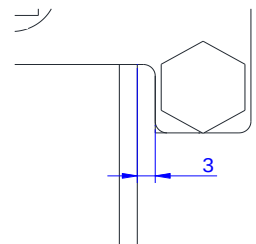

9. If necessary, slacken the screws on the wiper blade attachment clip, move the blade up or down for optimum position and then retighten screws.
10. Move the wiper arm/blade assembly over its full stroke and check that there is no restriction to movement (the motor will offer some resistance, but should not jam the wiper). Investigate and rectify any restrictions. If necessary adjust the wiper blade up or down on the arm to avoid the window frame.
11. Pass the cables through the bulkhead, leaving sufficient spare cable to allow the front assembly to be lifted away from the rear case during the maintenance period. Ensure the wiper is correctly earthed.

NOTE: If a heater is fitted pass the heater cable through the bulkhead, leaving a loop as required, and seal.


12. Ensure that wherever the cable passes through the bulkhead a suitable cable gland or seal is used to prevent water ingress and cable chaffing.
13. Put a small amount of grease on drive shaft body.



14. Slide motor onto the drive shaft making sure the drive gear on the motor fully engages with drive gear on drive shaft.




Bracket Mounting – Quick Release Arms

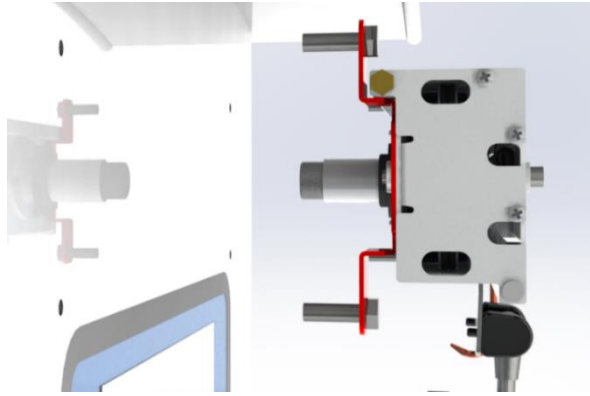


Bracket Mounting

1. Mark out and drill the 4 (6 for longer wiper units) off fixing holes (11 mm diameter) and the drive shaft housing hole (57mm diameter).
2. Mark out and drill the cable holes for the for the heater and park sensor, ensuring that all holes are circular and carefully de-burred. Treat bare metal to prevent corrosion.
3. The wiper unit should be supplied with the arm mounting plate (4) already fitted. If it is not fitted, remove 2 x ¼ UNF Thin Nuts (2) and 2 x M6 washers (3) from the pivot block threads and remove the wiper arm sub assembly (5) from the arm mounting plate (4). Fit the arm mounting plate (4) to the wiper unit before installing the wiper unit using the supplied M6 x 10mm screws.

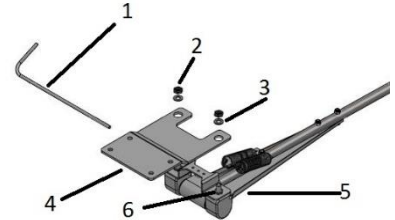


CAUTION: Ensure the correct length screws are used, as supplied. Longer screws will cause the carriage assembly to jam.

4. Fit the wiper blade to the wiper arm sub assembly (5), ensuring that the captive end of the wiper blade is at the top.
5. Bolt the front cover to the back case using the 2 off M8 bolts fitted.

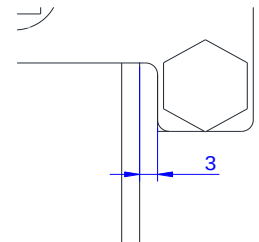

CAUTION: Do not overtighten the cover bolts. There should be 3mm clearance between arm mounting plate and inside of wiper cover.

6. Fit the wiper case into position and secure with M10 bolts. Ensure that the bolts are sealed where they pass through the bulkhead.
7. Push the drive shaft seals into place. It is advisable to use a suitable sealant to prevent water ingress.
8. Fit the wiper arm sub assembly (5) to the arm mounting plate (4) ensuring that the wiper arm sub assembly pivot block nuts (6) sit inside the holes in the arm mounting plate (4). Refit the 2 x M6 washers (3) and 2 x ¼ UNF Thin Nuts (2) to the pivot block threads and tighten.
9. Gently lift the wiper arm away from the window and remove the spring retaining pin (1). Keep safe for future use.
10. Pass the cables through the bulkhead, leaving sufficient spare cable to allow the front cover to be lifted away from the rear case during the maintenance period. Ensure the wiper is correctly earthed.

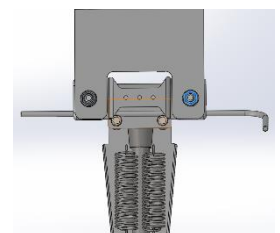

NOTE: If a heater is fitted pass the heater cable through the bulkhead, leaving a loop as required, and seal.


11. Ensure that wherever the cable passes through the bulkhead a suitable cable gland or seal is used to prevent water ingress and cable chaffing.
12. Put a small amount of grease on drive shaft body.



13. Slide motor onto the drive shaft making sure the drive gear on the motor fully engages with drive gear on drive shaft.




Universal Carrier & Bracket Mounting – Quick Release Arms

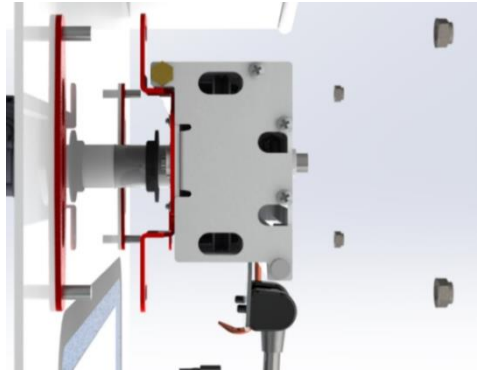

Universal Bracket Mounting

1. Carefully mark the position of the drive shaft housing hole and 2 (3 for longer wipers) universal carrier plates.
2. Drill the drive shaft housing hole (57mm diameter).
3. Prepare the bulkhead and universal carrier plates carefully and weld the 2 (or 3 for longer wipers) universal mounting brackets into position. Treat bare metal to prevent corrosion.
4. Mark out and drill the cable holes for the heater and park sensor, ensuring that all holes are circular and carefully de-burred. Treat bare metal to prevent corrosion.
5. The wiper unit should be supplied with the arm mounting plate (4) already fitted. If it is not fitted, remove 2 x ¼ UNF Thin Nuts (2) and 2 x M6 washers (3) from the pivot block threads and remove the wiper arm sub assembly (5) from the arm mounting plate (4). Fit the arm mounting plate (4) to the wiper unit before installing the wiper unit using the supplied M6 x 10mm screws.

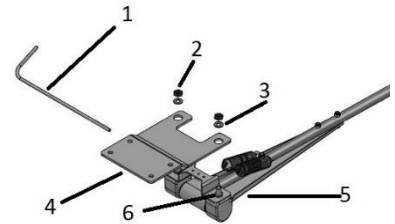


CAUTION: Ensure the correct length screws are used, as supplied. Longer screws will cause the carriage assembly to jam.

6. Fit the wiper blade to the wiper arm sub assembly (5), ensuring that the captive end of the wiper blade is at the top.
7. Bolt the front cover to the back case using the 2 off M8 bolts fitted.




CAUTION: Do not overtighten the cover bolts. There should be 3mm clearance between arm mounting plate and inside of wiper cover.

8. Fit the wiper case into position on the Universal Carrier studs and secure with supplied M10 spring washers, M10 flat washers and M10 nuts.
9. Push the drive shaft seals into place. It is advisable to use a suitable sealant to prevent water ingress.

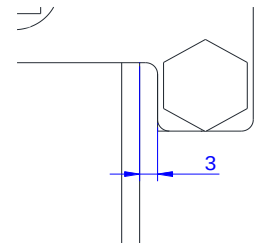

10. Fit the wiper arm sub assembly (5) to the arm mounting plate (4) ensuring that the wiper arm sub assembly pivot block nuts (6) sit inside the holes in the arm mounting plate (4). Refit the 2 x M6 washers (3) and 2 x ¼ UNF Thin Nuts (2) to the pivot block threads and tighten.
11. Gently lift the wiper arm away from the window and remove the spring retaining pin (1). Keep safe for future use.
12. Pass the cables through the bulkhead, leaving sufficient spare cable to allow the front cover to be lifted away from the rear case during the maintenance period. Ensure the wiper is correctly earthed.

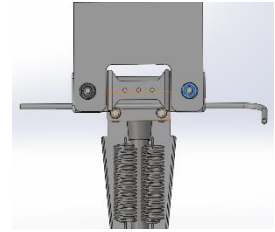


NOTE: If a heater is fitted pass the heater cable through the bulkhead, leaving a loop as required, and seal.

13. Ensure that wherever the cable passes through the bulkhead a suitable cable gland or seal is used to prevent water ingress and cable chaffing.
14. Put a small amount of grease on drive shaft body.



15. Slide motor onto the drive shaft making sure the drive gear on the motor fully engages with drive gear on drive shaft.




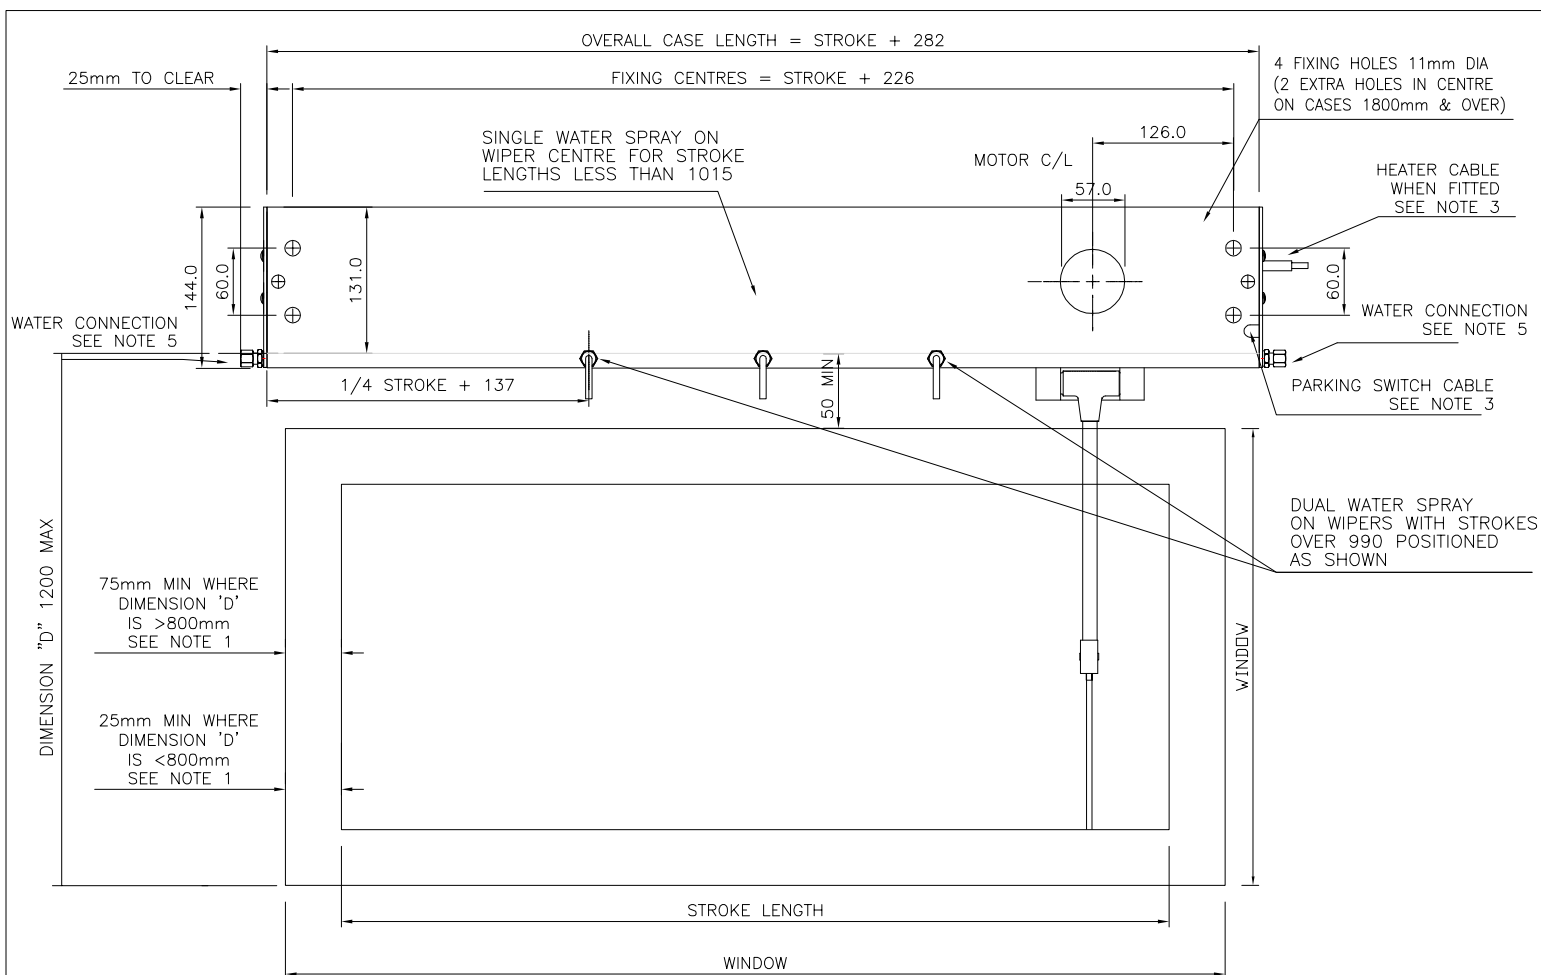

NOTES

1. THESE MINIMUM DIMENSIONS ARE LIMITED BY THE SIZE OF THE CORNER RADII ON THE WINDOW.
2. THE BLADE ARM MAY BE CRANKED WHERE DIMENSION "R" IS GREATER THAN 75.
3. OPTIONAL HEATER AND PARKING SWITCH STANDARD CABLE LENGTH 2 METRES. PARKING SWITCH POSITIONED AT MOTOR END WHEN FITTED.
4. THE HEATER AND PARK SWITCH CABLING TO RUN THROUGH THE BULKHEAD.
5. THE WATER CONNECTION BLANKING PLUG CAN BE FITTED AT EITHER END.
6. RIGID WIPER BLADE LENGTHS RANGE FROM 300 TO 800 AND ARTICULATED WIPER BLADE LENGTHS RANGE FROM 500 TO 1000 BOTH IN 50 INCREMENTS.
7. SEE MANUAL HEATER POWER RATINGS TABLE FOR STROKE OPTIONS AND HEATER DETAILS.
8. THE MOTOR CAN BE POSITIONED RADIALLY THROUGH 360 DEGREES AROUND THE DRIVE SHAFT CENTRE-LINE TO SUIT THE INSTALLATION. ENSURE THAT THE ACCESS SPACE AROUND THE MOTOR SHOWN ON THE DRAWING IS MAINTAINED.

ALL DIMENSIONS IN MM FOR REFERENCE ONLY

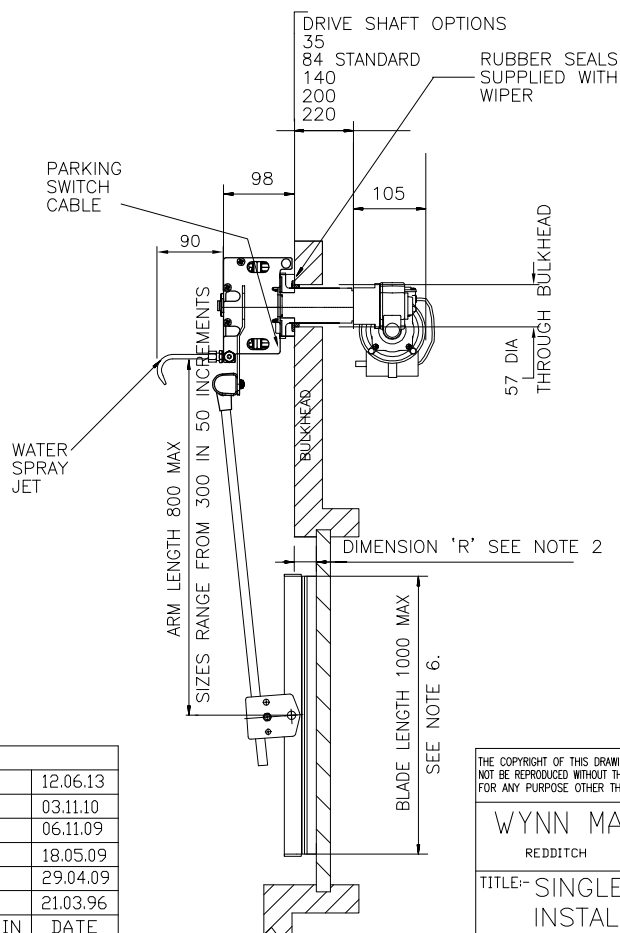


CAD FILENAME+DIRECTORY	M:\DRAW\1588\1588-01-CCOVER						
3rd ANGLE PRO.						6	12.06.13
						5	03.11.10
						4	06.11.09
			9	25.10.18	3		18.05.09
			8	19.01.16	2		29.04.09
			7	25.11.13	1		21.03.96
MAT'L:-	ISS.	DIN	DATE	ISS.	DIN	DATE	
FINISH:-	SCALE:-	NTS	DRAWN:-	DD	CHKD:-	CHANGED:-	

THE COPYRIGHT OF THIS DRAWING IS VESTED IN WYNN MARINE LTD. AND MUST NOT BE REPRODUCED WITHOUT THE WRITTEN PERMISSION OF THE COMPANY OR USED FOR ANY PURPOSE OTHER THAN THAT FOR WHICH IT HAS BEEN SUPPLIED.

WYNN MARINE LIMITED
REDDITCH ENGLAND

TITLE:- SINGLE TYPE C
INSTALLATION DRG.


DRAWING No. 1588-01-CCOVER

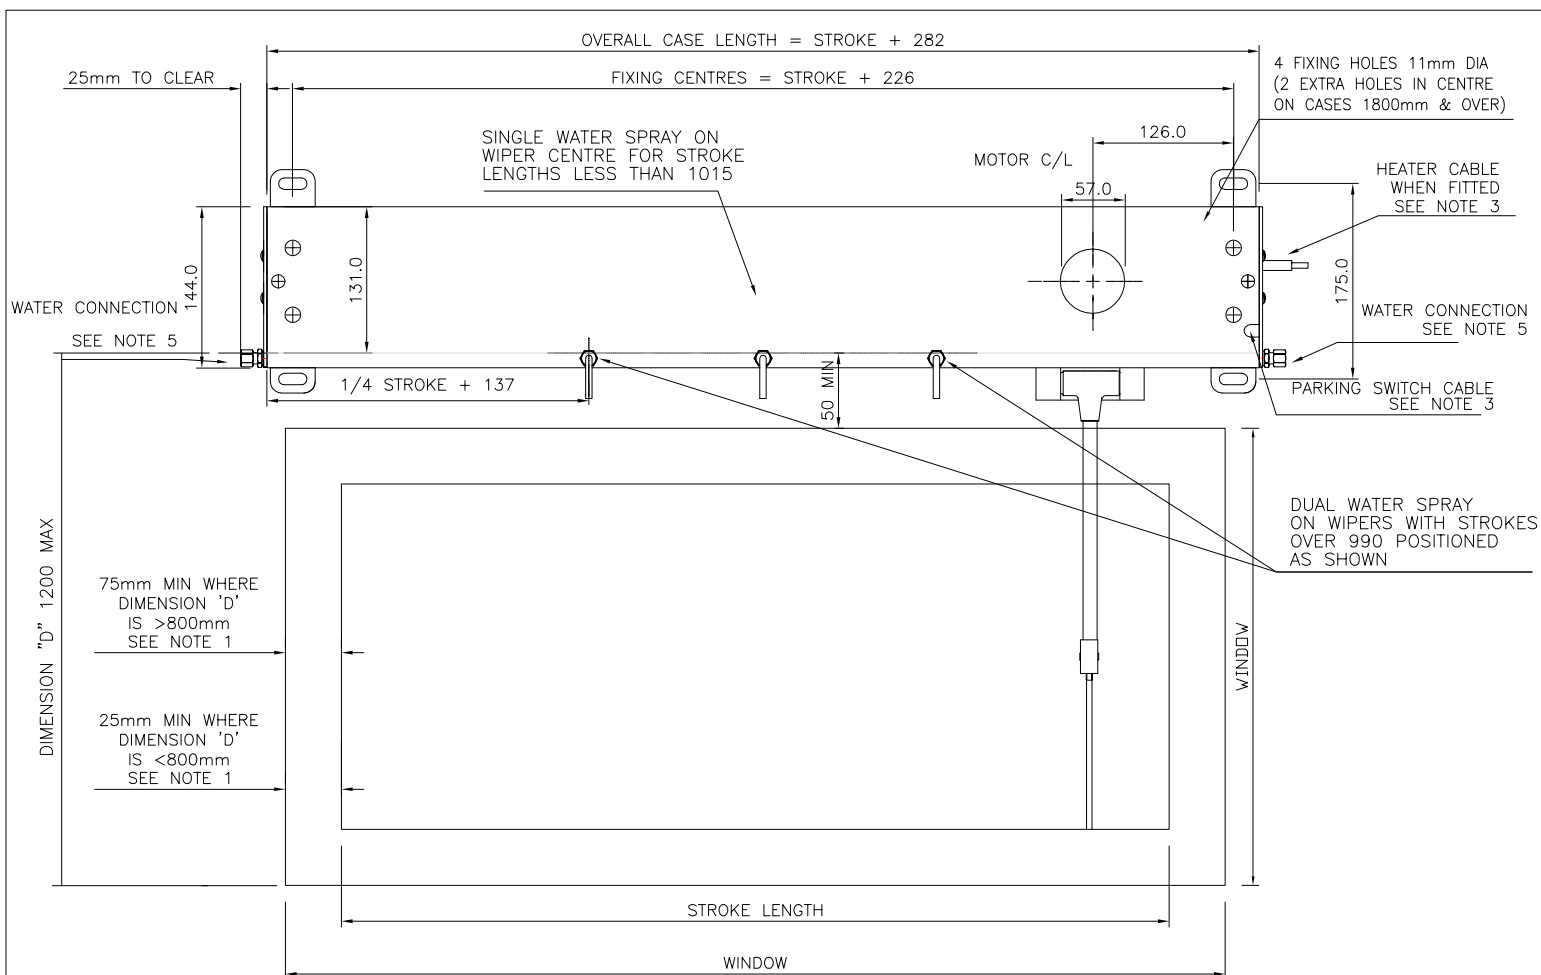

NOTES

1. THESE MINIMUM DIMENSIONS ARE LIMITED BY THE SIZE OF THE CORNER RADII ON THE WINDOW.
2. THE BLADE ARM MAY BE CRANKED WHERE DIMENSION "R" IS GREATER THAN 75.
3. OPTIONAL HEATER AND PARKING SWITCH STANDARD CABLE LENGTH 2 METRES. PARKING SWITCH POSITIONED AT MOTOR END WHEN FITTED.
4. THE HEATER AND PARK SWITCH CABLING TO RUN THROUGH THE BULKHEAD.
5. THE WATER CONNECTION BLANKING PLUG CAN BE FITTED AT EITHER END.
6. RIGID WIPER BLADE LENGTHS RANGE FROM 300 TO 800 AND ARTICULATED WIPER BLADE LENGTHS RANGE FROM 500 TO 1000 BOTH IN 50 INCREMENTS.
7. SEE MANUAL HEATER POWER RATINGS TABLE FOR STROKE OPTIONS AND HEATER DETAILS.
8. THE MOTOR CAN BE POSITIONED RADIALLY THROUGH 360 DEGREES AROUND THE DRIVE SHAFT CENTRE-LINE TO SUIT THE INSTALLATION. ENSURE THAT THE ACCESS SPACE AROUND THE MOTOR SHOWN ON THE DRAWING IS MAINTAINED.

ALL DIMENSIONS IN MM FOR REFERENCE ONLY

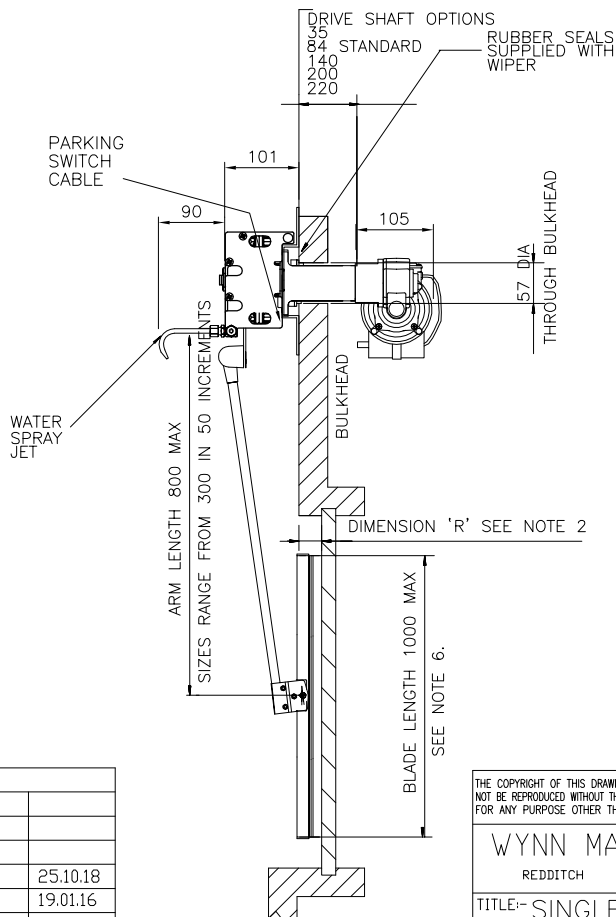


CAD FILENAME+DIRECTORY	M:\DRAW\1588\1588-01-BKT						
3rd ANGLE PRO.							
TOLERANCES UNLESS OTHERWISE STATED DECIMAL DIMS. TO 2 PLACES ± 0.1mm DECIMAL DIMS. TO 1 PLACE ± 0.25mm NO DECIMAL PLACES ± 0.5mm ANGLES ± 1°							
						3	25.10.18
						2	19.01.16
						1	25.07.14
MAT'L:-	ISS.	DIN	DATE	ISS.	DIN	DATE	ISS.
FINISH:-	SCALE:-	NTS	DRAWN:-	DD	CHKD:-	CHANGED:-	

THE COPYRIGHT OF THIS DRAWING IS VESTED IN WYNN MARINE LTD. AND MUST NOT BE REPRODUCED WITHOUT THE WRITTEN PERMISSION OF THE COMPANY OR USED FOR ANY PURPOSE OTHER THAN THAT FOR WHICH IT HAS BEEN SUPPLIED.

WYNN MARINE LIMITED
REDDITCH ENGLAND

TITLE:- SINGLE TYPE C
INSTALLATION DRG.

DRAWING No. 1588-01-BKT

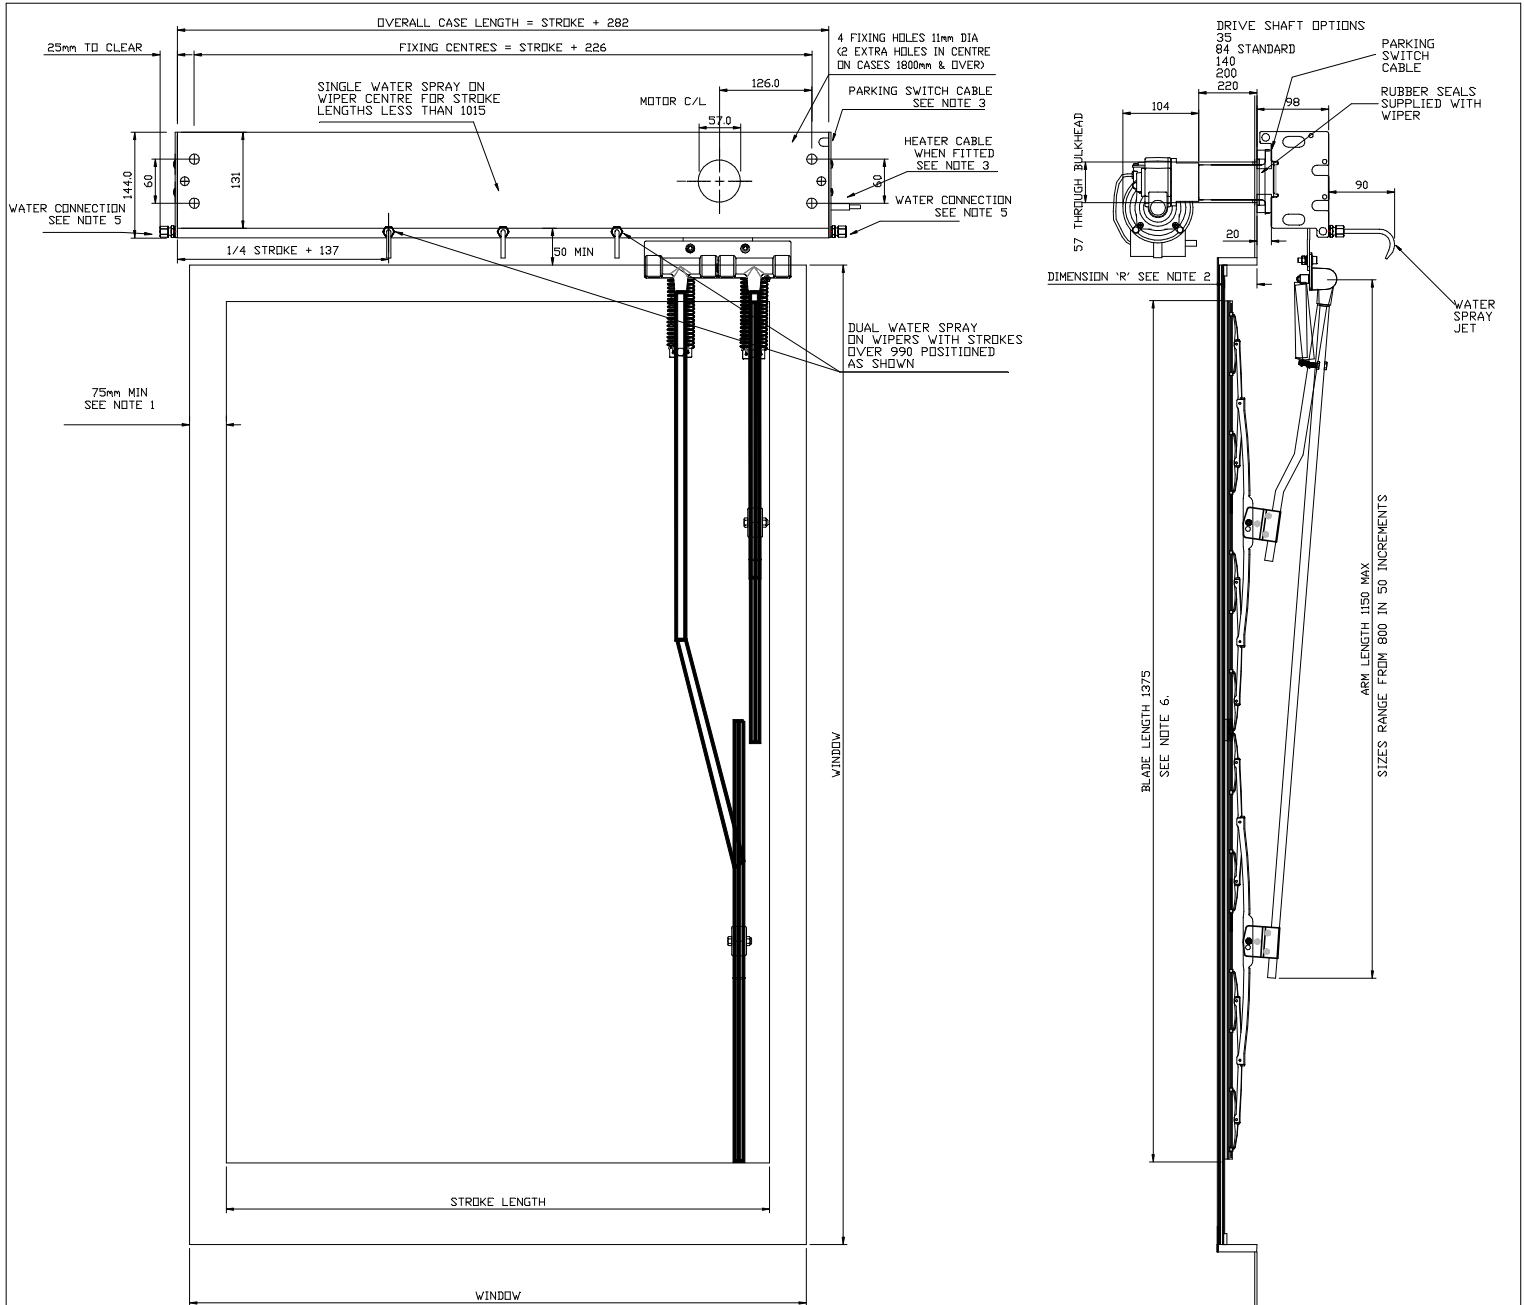


NOTES

1. THESE MINIMUM DIMENSIONS ARE LIMITED BY THE SIZE OF THE CORNER RADII ON THE WINDOW.
2. THE BLADE ARM MAY BE CRANKED WHERE DIMENSION 'R' IS GREATER THAN 75.
3. OPTIONAL HEATER AND PARKING SWITCH 'STANDARD CABLE LENGTH 2 METRES. PARKING SWITCH POSITIONED AT MOTOR END WHEN FITTED.
4. THE HEATER AND PARK SWITCH CABLING TO RUN THROUGH THE BULKHEAD.
5. THE WATER CONNECTION BLANKING PLUG CAN BE FITTED AT EITHER END.
6. WIPER BLADE LENGTH 700 EACH, OVERALL 1375.
7. SEE MANUAL HEATER POWER RATINGS TABLE FOR STROKE OPTIONS AND HEATER DETAILS.
8. THE MOTOR CAN BE POSITIONED RADially THROUGH 360 DEGREES AROUND THE DRIVE SHAFT CENTRE-LINE TO SUIT THE INSTALLATION. ENSURE THAT THE ACCESS SPACE AROUND THE MOTOR SHOWN ON THE DRAWING IS MAINTAINED.

ALL DIMENSIONS IN MM FOR REFERENCE ONLY

CAD FILENAME+DIRECTORY		M:\DRAW\1588\1588-01-CCOVER Dbl Arm									
3rd ANGLE PRO.											
											
TOLERANCES UNLESS OTHERWISE STATED											
DECIMAL SIZES TO 2 PLACES ± 0.1mm											
DECIMAL SIZES TO 1 PLACE ± 0.25mm											
NO DECIMAL PLACES ± 0.5mm											
ANGLES ± 1°											
MAT'L:-		ISS. DIN	DATE	ISS. DIN	DATE	1	06.11.18				
FINISH:-		SCALE:- NTS	DRAWN:- DD	CHKD:-	CHANGED:-						

THE COPYRIGHT OF THIS DRAWING IS VESTED IN WYNN MARINE LTD. AND MUST NOT BE REPRODUCED WITHOUT THE WRITTEN PERMISSION OF THE COMPANY OR USED FOR ANY PURPOSE OTHER THAN THAT FOR WHICH IT HAS BEEN SUPPLIED.	
WYNN MARINE LIMITED	
REDDITCH	ENGLAND
TITLE-SINGLE TYPE C	
INSTALLATION DRG.	
DRAWING No. 1588-01-CCOVER Dbl Arm	

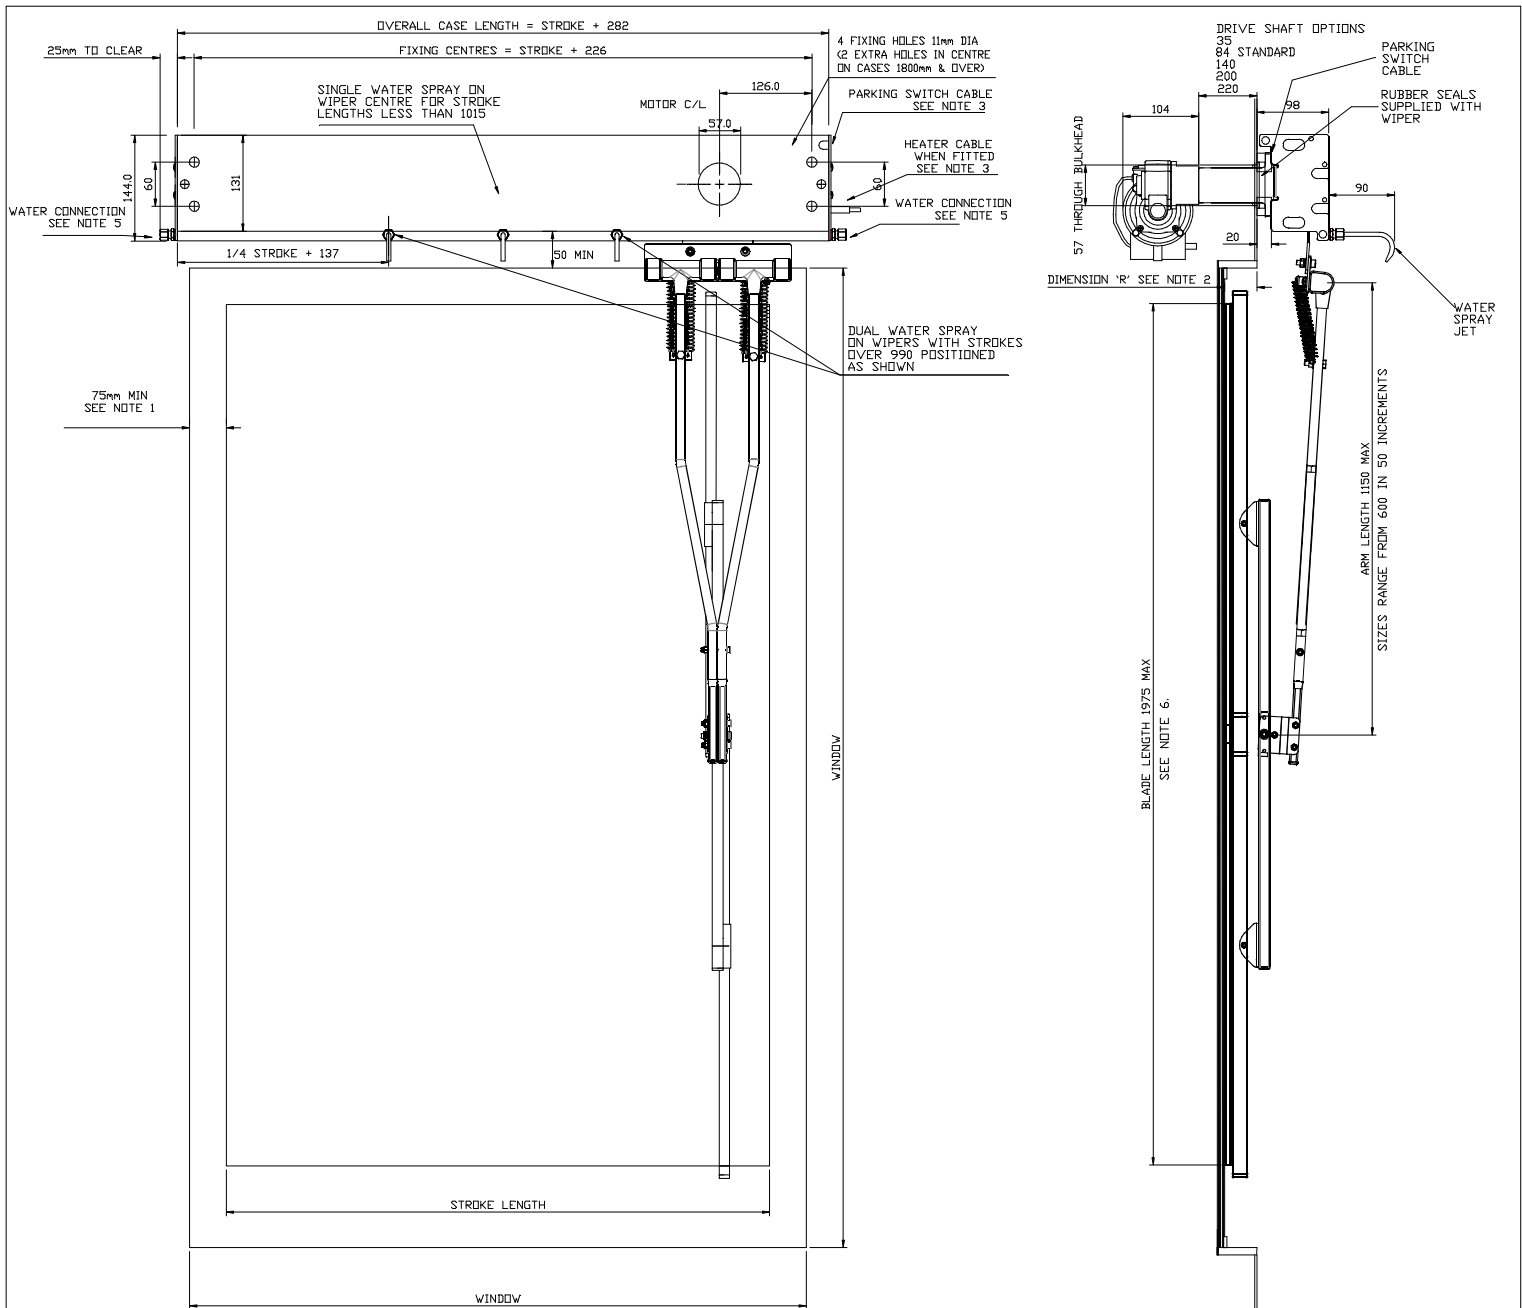


NOTES

1. THESE MINIMUM DIMENSIONS ARE LIMITED BY THE SIZE OF THE CORNER RADII ON THE WINDOW.
2. THE BLADE ARM MAY BE CRANKED WHERE DIMENSION 'R' IS GREATER THAN 75.
3. OPTIONAL HEATER AND PARKING SWITCH 'STANDARD CABLE LENGTH 2 METRES. PARKING SWITCH POSITIONED AT MOTOR END WHEN FITTED.
4. THE HEATER AND PARK SWITCH CABLING TO RUN THROUGH THE BULKHEAD.
5. THE WATER CONNECTION BLANKING PLUG CAN BE FITTED AT EITHER END.
6. DUAL WIPER BLADE LENGTHS RANGE FROM 1175 TO 1975 IN 100 INCREMENTS.
7. SEE MANUAL HEATER POWER RATINGS TABLE FOR STROKE OPTIONS AND HEATER DETAILS.
8. THE MOTOR CAN BE POSITIONED RADIALLY THROUGH 360 DEGREES AROUND THE DRIVE SHAFT CENTRE-LINE TO SUIT THE INSTALLATION. ENSURE THAT THE ACCESS SPACE AROUND THE MOTOR SHOWN ON THE DRAWING IS MAINTAINED.

ALL DIMENSIONS IN MM FOR REFERENCE ONLY

CAD FILENAME+DIRECTORY		M:\DRAW\1588\1588-01-CCOVER HD Arm					
3rd ANGLE PRO.							
TOLERANCES UNLESS OTHERWISE STATED							
DECIMAL SIZE TO 2 PLACES ± 0.1mm							
DECIMAL SIZE TO 1 PLACE ± 0.25mm							
NO DECIMAL PLACES ± 0.5mm							
ANGLES ± 1°							
MATERIAL:-		ISS. DIN	DATE	ISS. DIN	DATE	1	06.11.18
FINISH:-		SCALE:- NTS	DRAWN:- DD	CHKD:-	CHANGED:-		


THE COPYRIGHT OF THIS DRAWING IS VESTED IN WYNN MARINE LTD. AND MUST NOT BE REPRODUCED WITHOUT THE WRITTEN PERMISSION OF THE COMPANY OR USED FOR ANY PURPOSE OTHER THAN THAT FOR WHICH IT HAS BEEN SUPPLIED.	
WYNN MARINE LIMITED	
REDDITCH	ENGLAND
TITLE-SINGLE TYPE C	
INSTALLATION DRG.	
DRAWING No. 1588-01-CCOVER HD Arm	

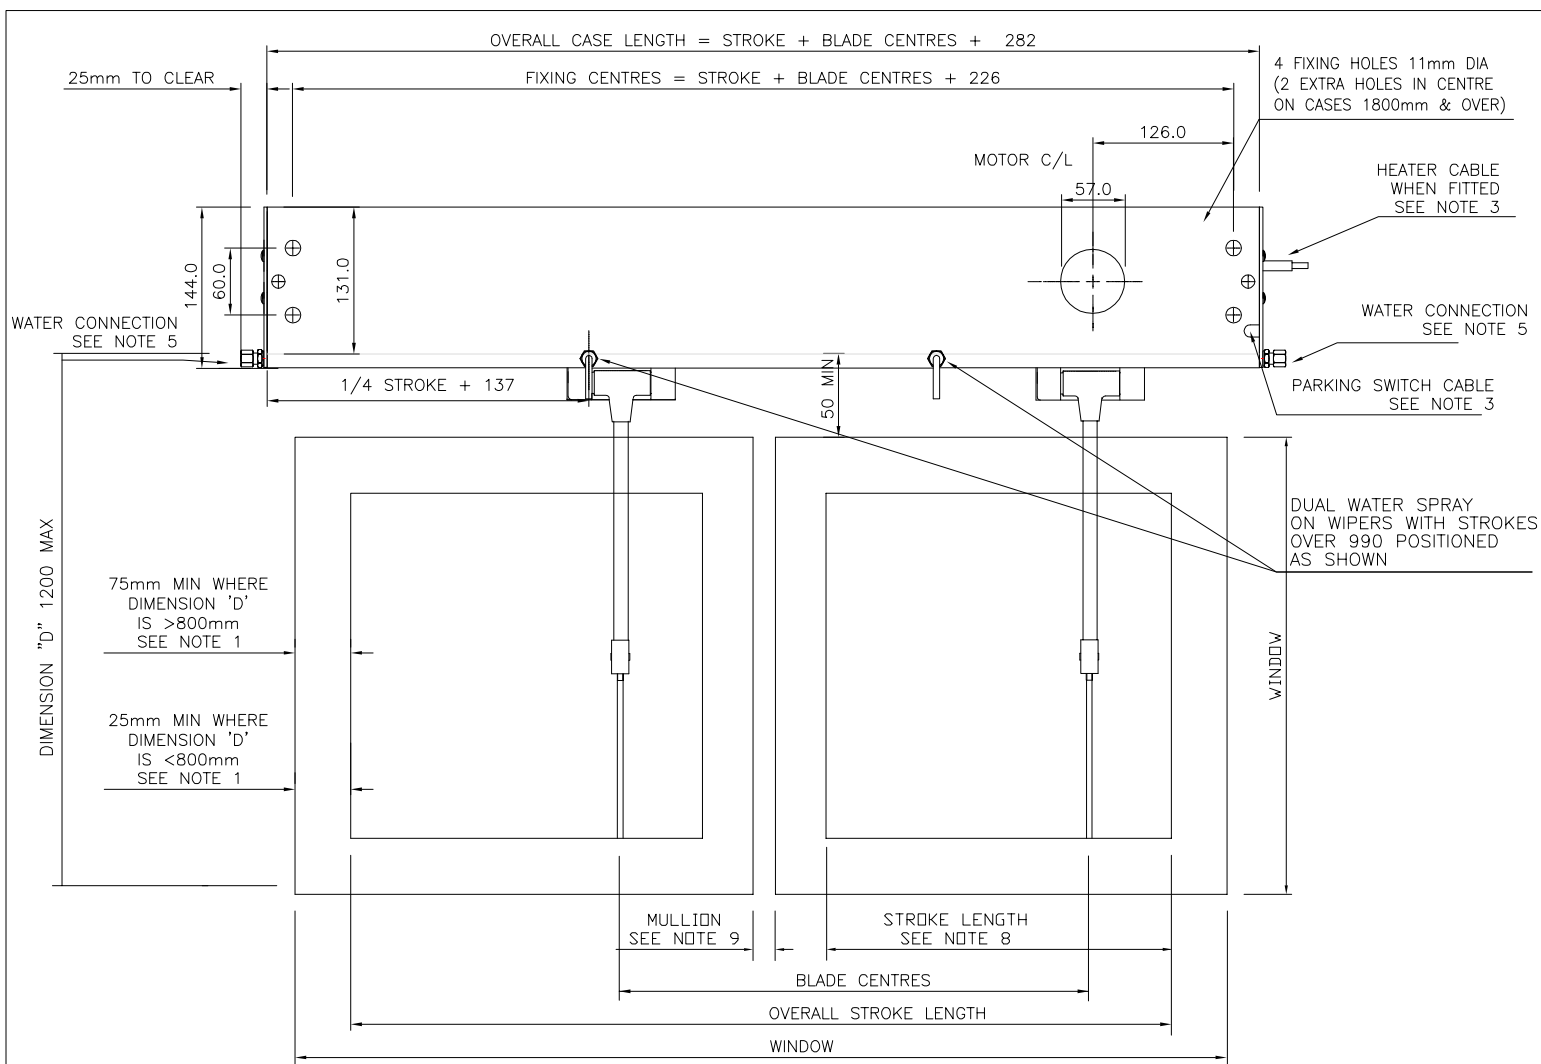

NOTES

1. THESE MINIMUM DIMENSIONS ARE LIMITED BY THE SIZE OF THE CORNER RADII ON THE WINDOW.
2. THE BLADE ARM MAY BE CRANKED WHERE DIMENSION "R" IS GREATER THAN 75.
3. OPTIONAL HEATER AND PARKING SWITCH STANDARD CABLE LENGTH 2 METRES. PARKING SWITCH POSITIONED AT MOTOR END WHEN FITTED.
4. THE HEATER AND PARK SWITCH CABLING TO RUN THROUGH THE BULKHEAD.
5. THE WATER CONNECTION BLANKING PLUG CAN BE FITTED AT EITHER END.
6. RIGID WIPER BLADE LENGTHS RANGE FROM 300 TO 800 AND ARTICULATED WIPER BLADE LENGTHS RANGE FROM 500 TO 1000 BOTH IN 50 INCREMENTS.
7. SEE MANUAL HEATER POWER RATINGS TABLE FOR STROKE OPTIONS AND HEATER DETAILS.
8. THE MOTOR CAN BE POSITIONED RADIALLY THROUGH 360 DEGREES AROUND THE DRIVE SHAFT CENTRE-LINE TO SUIT THE INSTALLATION. ENSURE THAT THE ACCESS SPACE AROUND THE MOTOR SHOWN ON THE DRAWING IS MAINTAINED.

ALL DIMENSIONS IN MM FOR REFERENCE ONLY

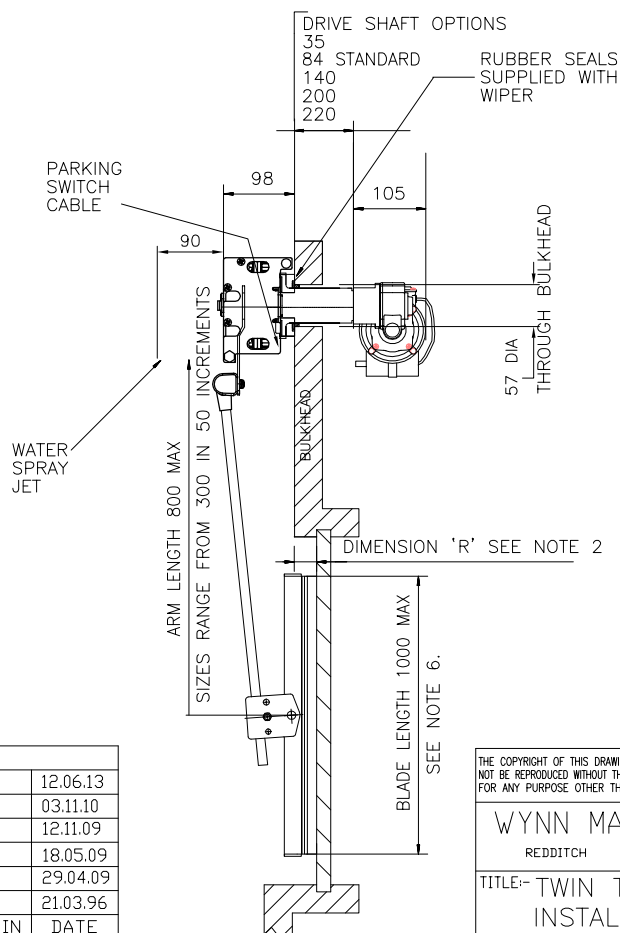


CAD FILENAME+DIRECTORY	M:\DRAW\1588\1588-03-CCOVER						
3rd ANGLE PRO.						6	12.06.13
						5	03.11.10
						4	12.11.09
			9		25.10.18	3	18.05.09
			8		19.01.16	2	29.04.09
			7		25.11.13	1	21.03.96
MAT'L:-	ISS.	DIN	DATE	ISS.	DIN	DATE	
FINISH:-	SCALE:-	NTS	DRAWN:-	DD	CHKD:-	CHANGED:-	

THE COPYRIGHT OF THIS DRAWING IS VESTED IN WYNN MARINE LTD. AND MUST NOT BE REPRODUCED WITHOUT THE WRITTEN PERMISSION OF THE COMPANY OR USED FOR ANY PURPOSE OTHER THAN THAT FOR WHICH IT HAS BEEN SUPPLIED.

WYNN MARINE LIMITED
REDDITCH ENGLAND


TITLE:- TWIN TYPE C
INSTALLATION DRG.
DRAWING No. 1588-03-CCOVER

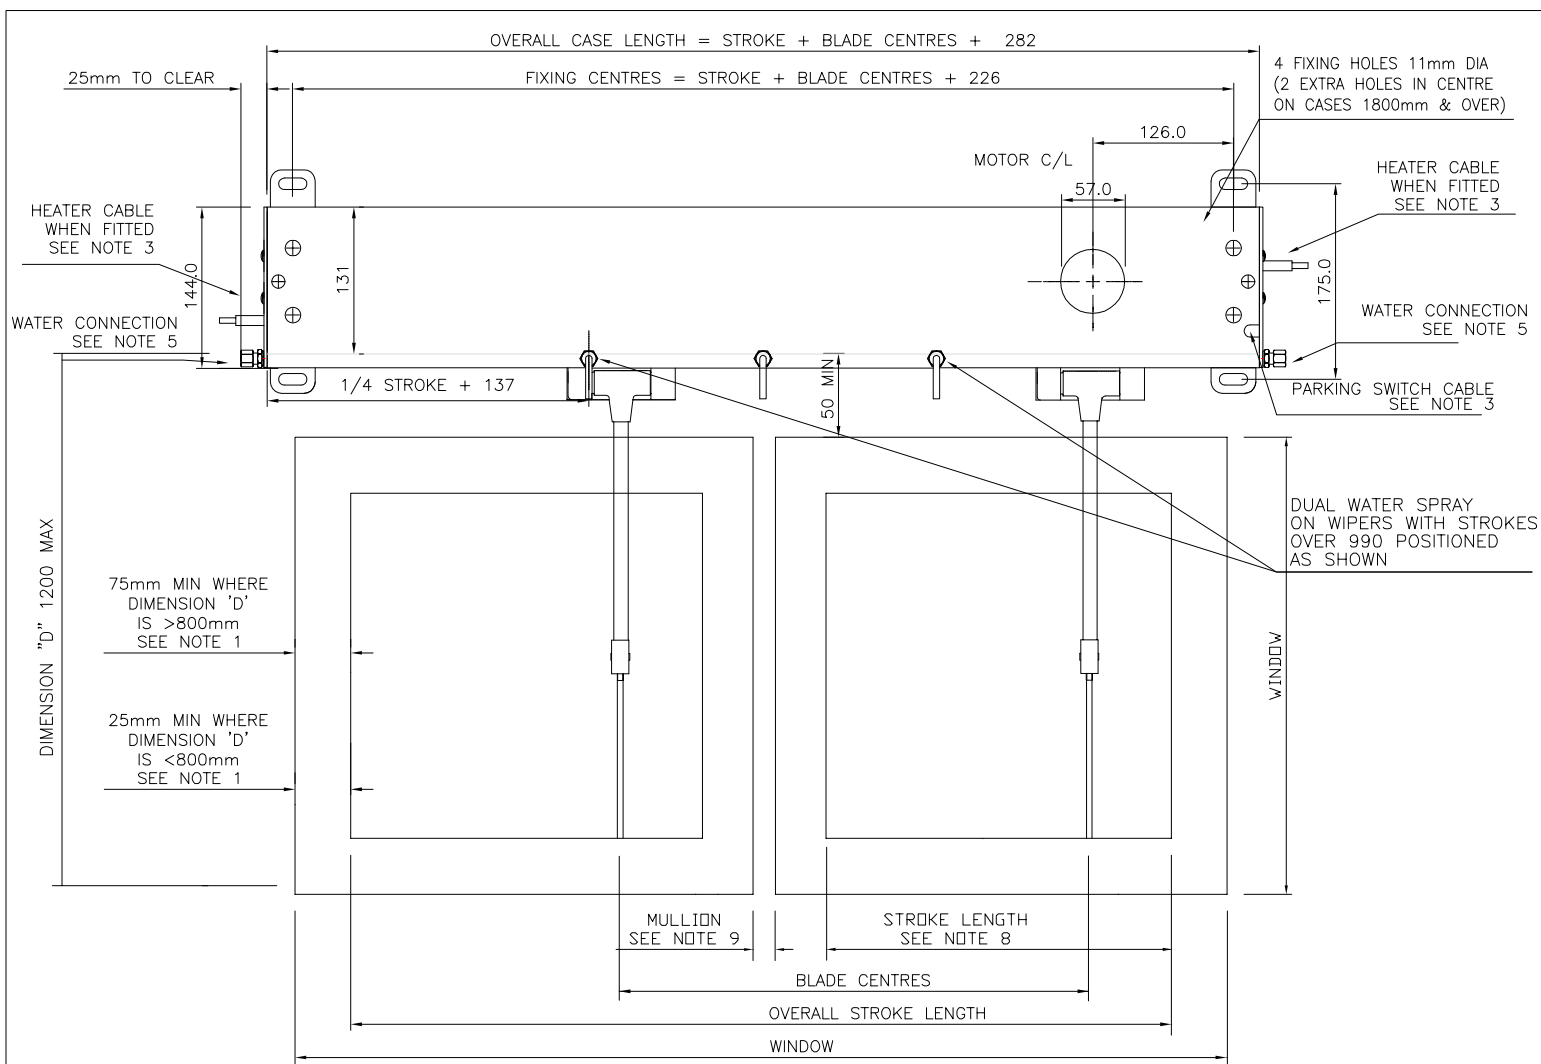

NOTES

1. THESE MINIMUM DIMENSIONS ARE LIMITED BY THE SIZE OF THE CORNER RADII ON THE WINDOW.
2. THE BLADE ARM MAY BE CRANKED WHERE DIMENSION "R" IS GREATER THAN 75.
3. OPTIONAL HEATER AND PARKING SWITCH STANDARD CABLE LENGTH 2 METRES. PARKING SWITCH POSITIONED AT MOTOR END WHEN FITTED.
4. THE HEATER AND PARK SWITCH CABLING TO RUN THROUGH THE BULKHEAD.
5. THE WATER CONNECTION BLANKING PLUG CAN BE FITTED AT EITHER END.
6. RIGID WIPER BLADE LENGTHS RANGE FROM 300 TO 800 AND ARTICULATED WIPER BLADE LENGTHS RANGE FROM 500 TO 1000 BOTH IN 50 INCREMENTS.
7. SEE MANUAL HEATER POWER RATINGS TABLE FOR STROKE OPTIONS AND HEATER DETAILS.
8. THE MOTOR CAN BE POSITIONED RADIALLY THROUGH 360 DEGREES AROUND THE DRIVE SHAFT CENTRE-LINE TO SUIT THE INSTALLATION. ENSURE THAT THE ACCESS SPACE AROUND THE MOTOR SHOWN ON THE DRAWING IS MAINTAINED.

ALL DIMENSIONS IN MM FOR REFERENCE ONLY

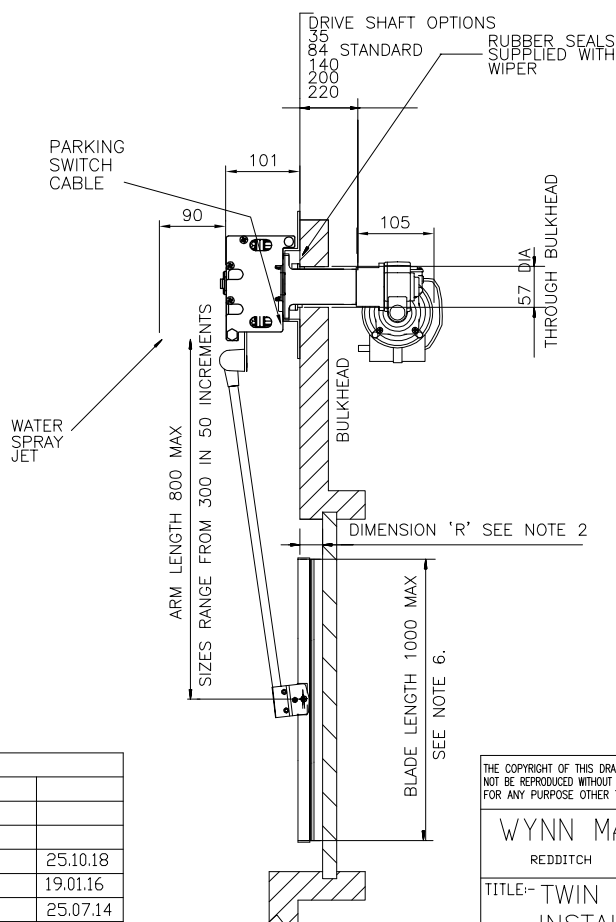


CAD FILENAME+DIRECTORY				M:\DRAW\1588\1588-03-BKT			
3rd ANGLE PRO.							
TOLERANCES UNLESS OTHERWISE STATED DECIMAL DIMS. TO 2 PLACES ± 0.1mm DECIMAL DIMS. TO 1 PLACE ± 0.25mm NO DECIMAL PLACES ± 0.5mm ANGLES ± 1°							
						3	25.10.18
						2	19.01.16
						1	25.07.14
MAT'L:-		ISS.	DIN	DATE	ISS.	DIN	DATE
FINISH:-		SCALE:-	NTS	DRAWN:-	DD	CHKD:-	CHANGED:-

THE COPYRIGHT OF THIS DRAWING IS VESTED IN WYNN MARINE LTD. AND MUST NOT BE REPRODUCED WITHOUT THE WRITTEN PERMISSION OF THE COMPANY OR USED FOR ANY PURPOSE OTHER THAN THAT FOR WHICH IT HAS BEEN SUPPLIED.

WYNN MARINE LIMITED
REDDITCH ENGLAND

TITLE:- TWIN TYPE C
INSTALLATION DRG.

DRAWING No. 1588-03-BKT

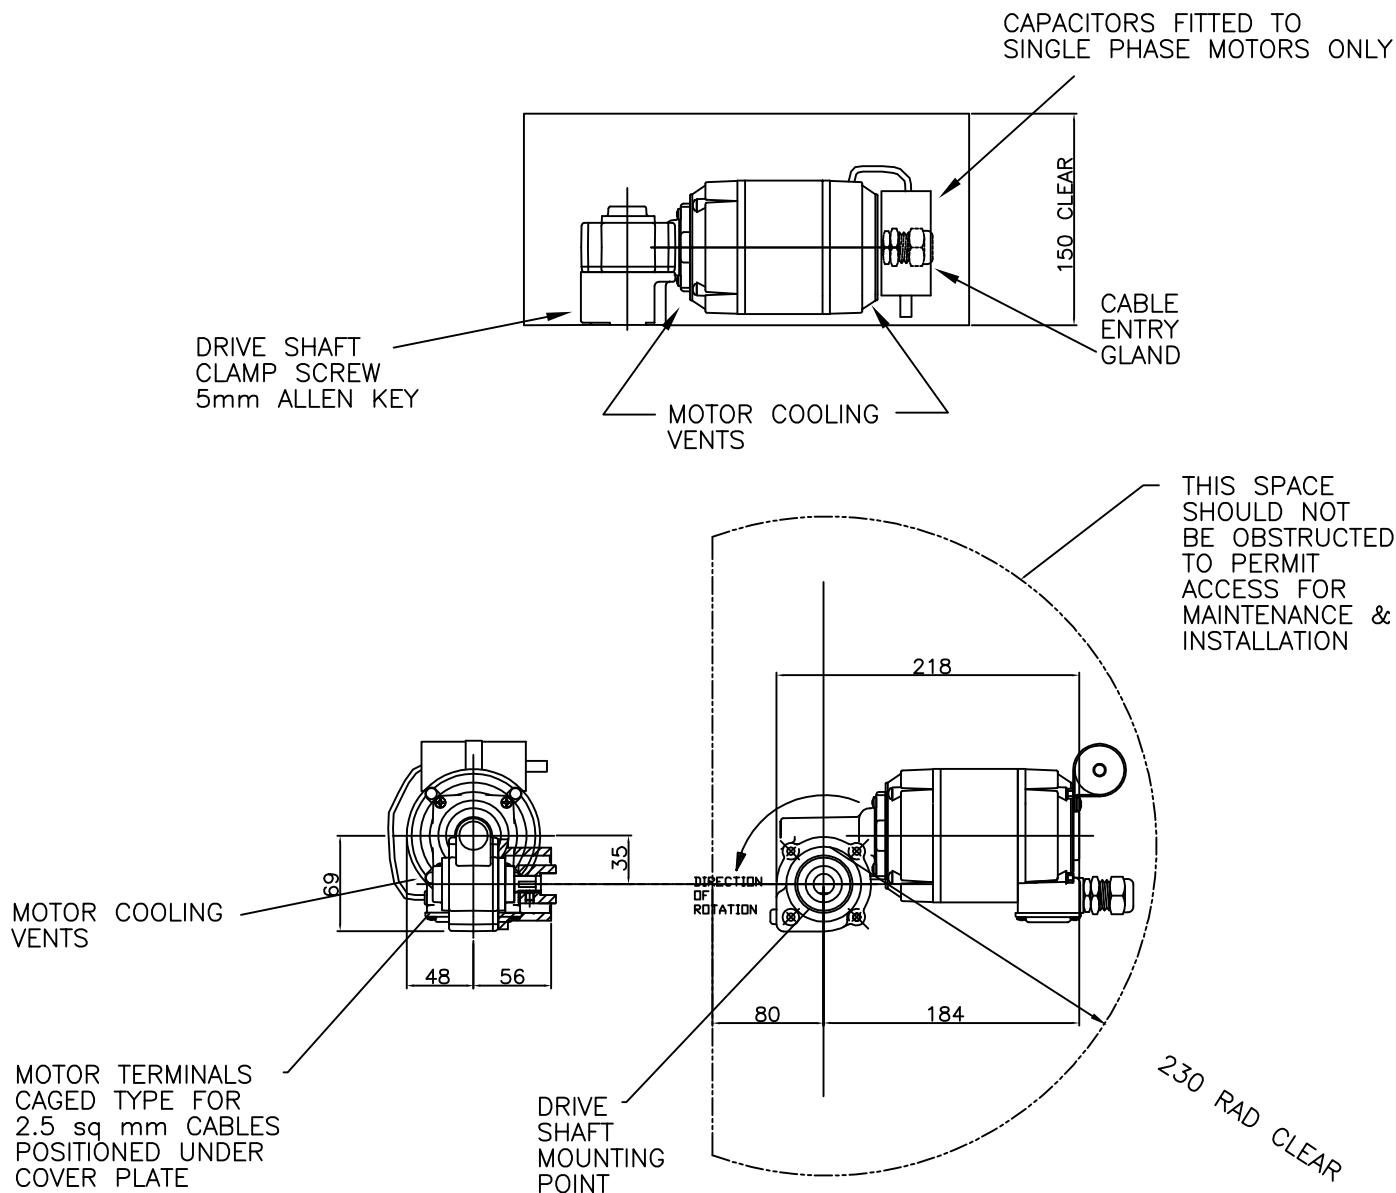

NOTES

1. USE T RATED FUSES.
2. EARTH BONDING TO CONFORM TO APPROPRIATE NATIONAL CODES AND STANDARDS.
3. CUSTOMER TO WIRE FROM MOTOR CABLES OR TERMINATIONS TO TERMINALS ON THE CONTROLLER WHEN SUPPLIED.
4. ALL MOTORS CAN BE ROTATED THROUGH 360 DEGREES AROUND THE DRIVE SHAFT CENTRE-LINE. NOTE THE ACCESS SPACE WILL ROTATE WITH THE MOTOR.

PARVALUX MOTORS WEIGHT 4.5Kg

MOTOR OPTIONS


MOTOR TYPE	VOLTAGE	Hz	PHASE	SPEED	SAFE COMPASS DISTANCE MIN	RUN CURRENT 50Hz	RUN CURRENT 60Hz	FUSE RATING 50Hz	FUSE RATING 60Hz	CAPACITOR
PARV61	115AC	50/60	3	2	0.5M	1.3A	1.1A	2.0A	1.6A	—
PARV62D	230AC	50/60	3	2	0.5M	0.6A	0.6A	1.0A	1.0A	—
PARV64	230AC	50/60	1	1	0.5M	1.2A	1.6A	1.6A	2.0A	8.4uF M-MISC-098PARV
PARV64L	230AC	50/60	1	1	0.5M	0.75A	0.95A	1.0A	1.6A	5uF M-MISC-095PARV
PARV65	115AC	50/60	1	1	0.5M	2.3A	2.6A	2.5A	3.15A	28uF M-MISC-099PARV
PARV65L	115AC	50/60	1	1	0.5M	1.5A	1.6A	2.0A	3.15A	28uF M-MISC-099PARV
PARV81	115AC	50	3	V	0.5M	1.5A		CONTROLLER		—
PARV82	220AC	50	3	V	0.5M	1.1A		CONTROLLER		—

ALL UNSPECIFIED UNITS OF LENGTH IN mm's



			WYNN MARINE LTD REDDITCH ENGLAND	THE COPYRIGHT OF THIS DRAWING IS VESTED IN WYNN MARINE LTD. AND MUST NOT BE REPRODUCED WITHOUT WRITTEN PERMISSION OR USED FOR ANY PURPOSE OTHER THAN THAT FOR WHICH IT HAS BEEN SUPPLIED.
5		12.05.11		
4		03.11.10		TITLE:— TYPE C WIPER STANDARD PARVALUX MOTOR OPTIONS CHART
ISSUE	DIN	DATE		DRAWING NUMBER:— INST—1588—06

CUSTOMER WIRING


CABLE GLAND

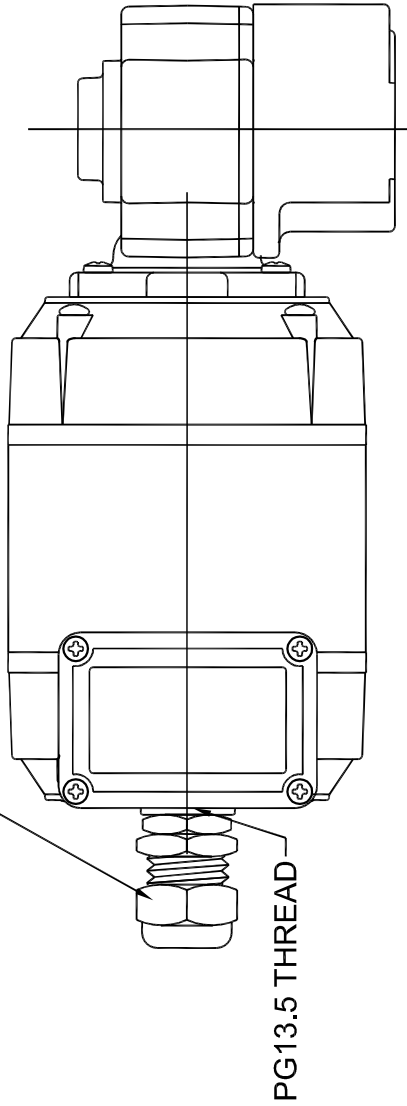


TERMINAL BLOCK
UNDER COVER

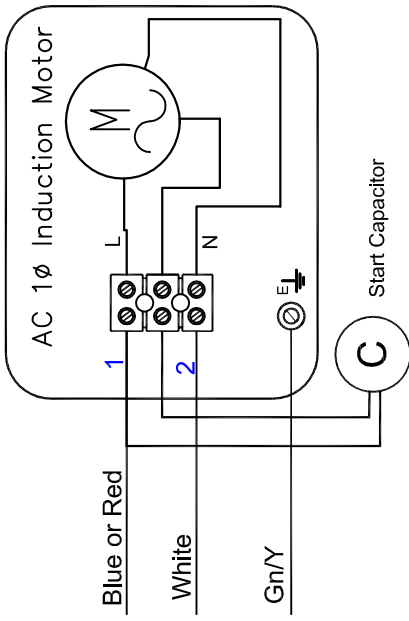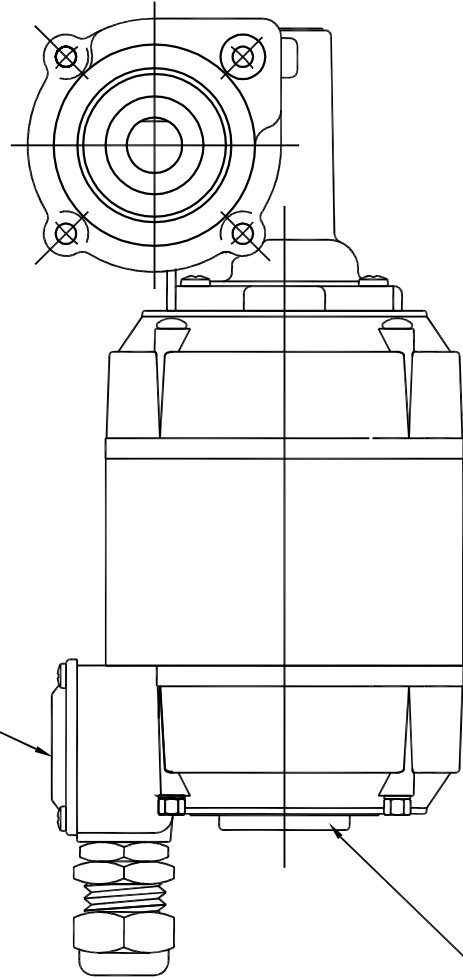

MOTOR TERMINAL BLOCK WIRING DIAGRAM
FOR A PARVALUX 1 PHASE MOTOR
FIT CAPACITORS AS SUPPLIED

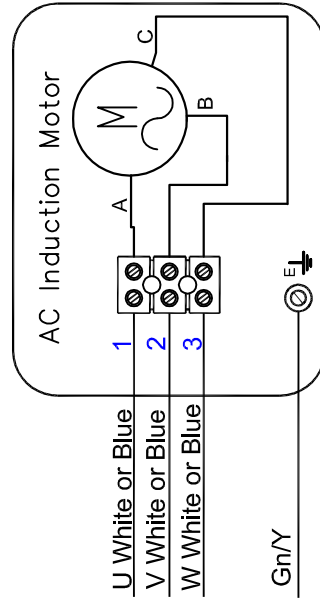

MOTOR TERMINAL BLOCK WIRING DIAGRAM
FOR A PARVALUX GA81/GA82 MOTOR

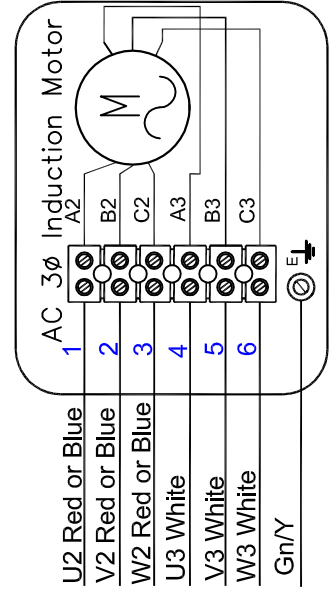

MOTOR TERMINAL BLOCK WIRING DIAGRAM
FOR A PARVALUX 3 PHASE 2SP MOTOR

WIRING DIAGRAM FOR PARVALUX TYPE AC MOTORS FOR WYNN TYPE C STRAIGHT LINE WIPER

GENERAL FAULT FINDING GUIDE

NOTE: This fault finding guide assumes a reasonable level of technical ability and should be carried out by a suitably qualified person.

Problems: Control panel does not operate wiper.

Possible Cause	Solution
No Power.	Check power supply is on and working.
Power not reaching motor	Check ship's incoming supply fuses or circuit breakers. Check for wiring fault, broken wire or loose terminal. If possible confirm (with voltmeter) power is present at motor input and output terminals of control module.
Connections to motor incorrect.	Check wiring according to the appropriate electrical installation drawing.
Ship's voltage too low.	Check voltage as close to the motor as possible, with motor running. See relevant tables for acceptable values.
Motor Thermal Cut Out tripped. Single Phase AC motors only.	The 1 Ø AC motors have a thermal cut out embedded into the stator winding. If the motor gets too hot the thermal cut out disconnects the supply to the motor. Switch off and allow the motor to cool down. About 20 minutes later the cut out will reset allowing normal operation.
Motor brushes or commutator worn (DC motor only)	Check motor commutator and brushes
Motor burned out.	This should not be possible - could happen by incorrect voltage of motor, or a motor fault. The motor needs a reasonable amount of free space to provide sufficient cooling airflow – check. The motor should be protected by fuses, check type and rating.
Wiper motor not fully engaged on coupling.	Slacken pinch bolt, move motor and/or wiper arm to align coupling and push motor into engagement with coupling. Retighten pinch bolt. Make sure that the rubber coupling is fitted
Carriage motion jammed.	It should be possible by pushing the blade arm to move the mechanism over the stroke length. Remove cover and check for obstructions. Check the Blade Arm Screws.
Drive pulley turning but belt slipping.	Excessive friction - Check carriage rollers and motor drive coupling. Replace as required. Idle pulley springs broken or missing. Replace.
Drive belt broken or damaged.	Inspect belt for slip or burn damage. Belt at end of life. Replace.
Idle pulley jammed.	Damaged by impact, or bearing system failed. Replace assembly.
Corrosion.	If corroded, check for water ingress through seals and tightness of connections, Replace wiper unit if necessary

Problem: Wiper runs but at wrong speed

Possible Cause

Solution

Ship's voltage incorrect.

Check voltage as near as possible to the motor, with motor running.

Motor brushes worn (DC Only)

Inspect brushes and replace as necessary.

High / Low speed wiring incorrect

Check wiring complies with appropriate drawing.

(3 Phase 2 Speed models only)

One phase missing

Check controller.

(3 Phase 2 Speed models only)

Check ships fuses.

Problem: Wiper runs but is noisy

Possible Cause

Solution

Wiper arm is obstructed by: - Window frame, spray jets, etc.

If necessary gently bend arms or spray jets out of path of wiper arm.

Incorrect arm attachment screws.

These must not be longer than the 10mm screws provided by Wynn

Vibration of wiper unit

Check the front cover fixing screws are secure.

Arm attachment plate fouling on wiper case

Attachment screws not fully tightened - check.
Blade arm or bracket bent out of place - check.

Problem: Wiper does not clean the screen properly.

Possible Cause

Solutions

Blade not in contact with screen.

Blade or arm bent - inspect and replace.
Arm pivots seized due to corrosion - replace.
Heaters ineffective allowing ice build up.

Weak springs on blade arm.

Stronger springs may be required. Contact Agent/Distributor

Broken springs on blade arm.

Investigate reason of failure and replace. Springs are good down to -40°C.

Blade rubber missing or damaged.

Maintenance item. Replace as required.

Problem: Wiper does not park correctly

Possible Cause

Solution

Park Sensor failed.

Check reed sensor action, will need tester (meter).

Park Sensor Actuator missing.

Check magnet/spacer arrangement on carriage.

Problem: If fitted, heater does not become warm when switched on

Possible Cause

Solutions

Fuse blown or circuit breaker tripped (if fitted).

Check for short-circuited heater, will need tester (meter).
Check for wiring damage or loose wires.
Check connections are good.

Heater failed.

Check for continuity, will need tester (meter).

Earth leakage circuit breaker trips.

It is common for earth leakage to rise if a heater has not been used for a while - if possible allow heater the warm up so to dry out.
The heater's water seal or cable may be damaged allowing ingress of water - check and replace.

No power.

Check Controller.

Problem: If fitted, little or no washer water comes out when button pressed.

Possible Cause

Solution

Pump or supply pressure too low.

Check Ship's water supply, or pump for output pressure.

On reservoir systems, empty.

Check - refill.

Water control valve faulty or not operating.

Check solenoid valve continuity. Replace if open circuit.

Supply lines or jets blocked.

Try air purge, if available.
Dismantle and flush pipes.

Water frozen.

Switch on heaters.

TYPE C WIPER MAINTENANCE

Wynn products have been proven over many years to perform well under the harshest condition of use. To maintain their performance the following schedule is recommended:

TOOLS REQUIRED:

- | | |
|-------|-----------------------------|
| I. | 4MM ALLEN KEY |
| II. | 5MM ALLEN KEY |
| III. | 6MM ALLEN KEY |
| IV. | 6MM SOCKET |
| V. | 8MM SPANNER |
| VI. | 10MM SPANNER |
| VII. | 10MM SOCKET |
| VIII. | 11MM SPANNER |
| IX. | 3MM FLAT BLADE SCREWDRIVER |
| X. | NO2 CROSS POINT SCREWDRIVER |

Every 6 Months

DC motors only

1. Inspect the motor brushes. Remove motor end cover. Prevent brushes from running down to less than 6mm height in service. Brushes can be lifted out of their holder after lifting off the springs. Replace brushes back into same holder and in the same orientation. Ensure that the brush 'pig tails' is free and that the springs are correctly replaced.
2. When replacing brushes, carefully clear out any residual carbon dust from the motor.



WARNING: DO NOT INHALE THE CARBON DUST.

3. Inspect the motor commutator – it should still be bright. If it is blackened the motor should be replaced or serviced. This can be done with light cleaning with 'flour' paper, but not 'emery' paper.

Every 12 Months

1. Check condition of the Articulated/Rigid Wiper Blade. Replace if necessary.
2. Check Heaters if fitted. If these have not been used for some time, then leave them on for approximately 2 hours.

NOTE: If not used for long periods, some mineral insulated heaters will take up moisture and begin to show current leakage to ground. By running them for the stated time this process can be reversed and the insulation returned to near infinity values. When dry, insulation resistance is > 100 M ohm at 500V.

3. Check the drive belt for deterioration. Replace if necessary.
4. Check carriage is smooth and all guide rollers are free to rotate. Replace complete roller if necessary.



Caution: Guide rollers have an integral dry bearing and MUST NOT be oil or grease lubricated.

5. Check for free movement of idler pulleys in response to belt tension. Lubricate as necessary with water resistant grease.

6. Ensure free movement of drive pulley. Replace if damaged or when showing signs of excessive wear.

NOTE: The drive pulley is jig assembled and should not be dismantled.

7. Check for free blade arm spring movement. Dismantle, re-grease or replace if necessary.

TYPE C WIPER INSPECTION / RENEWAL OF PARTS



WARNING: To ensure health & safety, remove power from the control unit, before working on any parts of the wiper either inside or outside.

TOOLS REQUIRED:

- I. 4MM ALLEN KEY
- II. 5MM ALLEN KEY
- III. 6MM ALLEN KEY
- IV. 6MM SOCKET
- V. 8MM SPANNER
- VI. 10MM SPANNER
- VII. 10MM SOCKET
- VIII. 11MM SPANNER
- IX. 3MM FLAT BLADE SCREWDRIVER
- X. NO2 CROSS POINT SCREWDRIVER

Blade Replacement

1. Loosen the 2 x 8mm nuts on the blade attachment clip.
2. Slide the blade attachment clip and blade assembly off the wiper arm.
3. Re-assembly is reversal of above instructions.

Arm Replacement

1. If Heaters are fitted disconnect from terminals to allow the cover to be removed from the wiper.

OUTSIDE

2. Remove any pipework fittings / blanking plugs from both ends of the wiper.
3. Slacken cable glands and withdraw heater cable from bulkhead.
4. Remove the 2 x M8 Cap head bolts at each end of the cover and set aside.
5. Carefully remove the cover and set aside.
6. Remove the 4 x M6x10mm screws securing the arm to the carriage plate. The arm and blade assembly is now free from the wiper, set both assembly and fasteners aside.
7. Slacken the blade clip bolts and remove blade. Set aside for reuse.
8. Re-assembly is reversal of above instructions.

Drive Belt

1. If Heaters are fitted disconnect from terminals to allow the cover to be removed from the wiper.

OUTSIDE

2. Remove any pipework fittings from both ends of the wiper.
3. Slacken cable glands and withdraw heater cable from bulkhead.
4. Remove the 2 x M8 Cap head bolts at each end of the cover and set aside.

5. Carefully remove the cover and set aside.
6. Remove the 4 x M6x10mm screws securing the arm to the carriage plate. The arm and blade assembly is now free from the wiper, set both assembly and fasteners aside.
7. Slip the belt off the spring-loaded pulleys then slide the carriage/belt assembly out of the end of the case at the idler pulley end. Note: The assembly can be removed from the drive pulley end, but the park sensor will then need to be detached first (where fitted).
8. In multi wiper installations, if there is insufficient space between adjacent wipers to remove the carriage, then it will be necessary to draw the carriage / belt assembly through adjacent wiper cases, detaching park sensors where necessary.
9. Inspect the drive belt and replace if damaged or worn. To detach the drive belt, note how the parts are assembled, then undo the 2 small nuts securing the belt to the clip.
10. Fit a new belt. Spare belts are supplied with nuts and clip plate. Refit and tighten nuts to the same height as the original and secure with Loctite thread lock (or similar).
11. Fit the carriage & belt assembly back into the casing and slip the belt onto the drive & idler pulleys.
12. Move the carriage by hand and ensure that it travels the full stroke length freely and without any obstruction. (Motion will feel restricted because the motor is being rotated if in doubt discount the motor). Refit the blade assembly with special screws removed.
13. Refit the front cover and secure with the 2 off M8 cover bolts. Reconnect any pipework fittings removed in para 2, and heater cable if removed at para 1.

Connecting Rod

1. Follow the Drive Belt renewal instructions 1 to 7 above.
2. To detach the connecting rod assembly/vee-belt, note how the parts are assembled, then undo the M6 nut and special screw securing the connecting rod assembly/vee-belt to the carriage plate assembly.
3. To detach the vee-belt, note how the parts are assembled, then undo the 2 small nuts securing the belt to the clip.
4. Fit a new connecting rod assembly. Refit and tighten nuts to the same height as the original and secure with Loctite thread lock (or similar).
5. Refit the connecting rod assembly/vee-belt to the carriage plate using the M5 nut and special screw securing the connecting rod assembly/vee-belt to the carriage plate assembly.
6. Follow the Drive Belt renewal instructions 11 to 13 above.

Carriage Plate

1. Follow the Drive Belt renewal instructions 1 to 7 above.
2. Inspect the carriage plate assembly and replace if damaged or worn. To detach the connecting rod assembly/vee-belt, note how the parts are assembled, then undo the M5 nut and special screw securing the connecting rod assembly/vee-belt to the carriage plate assembly and set aside.

3. Fit a new carriage plate. Refit the connecting rod assembly/vee-belt, using the M5 nut and special screw securing the connecting rod assembly/vee-belt to the carriage plate assembly.
4. Follow the Drive Belt renewal instructions 11 to 13 above.

Guide Rollers

1. Follow the Drive Belt renewal instructions 1 to 7 above.
2. Remove the M5 Nylock nut & flat washer securing the guide roller and remove the guide roller. M5 Nylock nuts & flat washers supplied with set of 8 guide rollers.
3. Fit the new guide roller and secure with the M5 Nylock nut & flat washer. Ensure that M5 Nylock nut is tightened firmly.



Caution: Guide rollers have an integral dry bearing and MUST NOT be oil or grease lubricated.

4. Follow the Drive Belt renewal instructions 11 to 13 above.

Idler Pulley Assembly

1. Follow the Drive Belt renewal instructions 1 to 6 above.
2. Slip the vee-belt off the spring-loaded pulley.
3. Unhook the two idler pulley tension springs from the mounting posts then slide the idler pulley assembly out of the guides.
4. Apply a small amount of water resistant grease to the back of the new idler pulley assembly and fit into the idler pulley guides. Hook the two idler pulley tension springs over the mounting posts.
5. Slip the belt onto the drive & idler pulleys.
6. Follow the Drive Belt renewal instructions 12 to 13 above.

Idler Pulley Tension Spring

1. Follow the Drive Belt renewal instructions 1 to 6 above.
2. Slip the vee-belt off the spring-loaded pulley.
3. Unhook the two idler pulley tension springs from the mounting posts then slide the idler pulley assembly out of the guides.
4. Unhook the idler pulley tension springs from the idler pulley assembly.
5. Fit new springs to the idler pulley assembly.
6. Fit idler pulley assembly. Hook the two idler pulley tension springs over the mounting posts.
7. Slip the belt onto the drive & idler pulleys.
7. Follow the Drive Belt renewal instructions 12 to 13 above.

Drive Shaft and Pulley Assembly

1. Slacken the clamping bolt securing the motor to the drive shaft assembly, withdraw the motor from the shaft and set aside ensuring the black coupling is kept with the motor.
2. Follow the Drive Belt renewal instructions 1 to 6 above.
3. Remove the 2 screws securing the park switch to the wiper case, withdrawing the cable through the slot in the case. Keep screws and fittings safe.
4. Dismount wiper from bulkhead and set aside fixings.
5. Unbolt drive shaft and pulley assembly from the main body of the wiper and set the fixings aside.
6. Withdraw the assembly from the wiper body and discard.
7. Insert the new assembly onto the body. Re-assembly is reversal of the above instructions and in accordance with the standard wiper installation instructions elsewhere in the manual.

Wiper Motor Replacement

1. Disconnect motor wiring and make a note of the connections.
2. Loosen motor pinch bolt and remove motor.
3. Ensure new motor has a rubber coupling fitted to the dog gear. Line up motor dog gear with drive shaft dog gear and slide motor into position. Tighten pinch bolt.
4. Wire to motor terminal connections.

Type C Common Cover Wiper Spares List

Ident	Description	Quantity	Part Number
1a	Flat Blade Assembly	1	FB WSL ***
1b	Articulated Blade Assembly	1	SP1279-553-***
1c	Heavy Duty Dual Blade Assembly	1	805201-***
2	Blade Attachment Clip (14mm Articulated Blade & FB)	1	SP1279-493
	Blade Attachment Clip (20mm Articulated Blade)	1	SP1279-532
3	Blade Arm Assembly	1	CC**#R
4	Blade Arm Torsion Spring	1	SP1292-221
4a	Arm Spring(s) - where fitted at top of arm ‡	A/R	1279-157
5	Blade Arm Pivot Blocks	1 Kit/arm	SP1279-486-#.#
6	Arm Attachment Screws	Set of 4	SP1588-488
7	Carriage Plate Assembly – Single Blade	1	SP1588-005-M
	Carriage Plate Assembly – Twin Blade	1	SP1588-312-***
8	8 Guide Rollers C/W Nuts	Set of 8	SP1588-117
	Guide Roller Assy	1	SP1588-006
10	Connecting Rod Assembly – Single	1	SP1588-474
	Connecting Rod Assembly – Twin Blade	1	SP1588-474T
11	Vee-Belt	1	SP1279-106-###
12	Idler Pulley Assembly c/w Springs (Single Blade)	1	SP1588-452
	Idler Pulley Assembly c/w Spring (Twin Blade)	1	SP1588-452T
13	Idler Pulley Tension Spring (Single Blade)	Set of 2	SP1279-157
	Idler Pulley Tension Spring (Twin Blade)	Set of 2	SP1279-496
14	Idler Pulley Guide Assembly	1	SP1588-490
15	Drive Shaft and Pulley Assembly - 84mm Std	1	SP1588-009-117
	Drive Shaft and Pulley Assembly - 140mm	1	SP1588-009-173
	Drive Shaft and Pulley Assembly - 200mm	1	SP1588-009-233
	Drive Shaft and Pulley Assembly - 220mm	1	SP1588-009-253

Ident	Description	Quantity	Part Number
	Drive Shaft and Pulley Assembly - 240mm	1	SP1588-009-273
	Drive Shaft and Pulley Assembly - 310mm	1	SP1588-009-310A
	Drive Shaft and Pulley Assembly - 35mm	1	SP1642-003
	Gas Tight Drive Shaft and Pulley Assembly Std	1	SP1588-030-117
	Gas Tight Drive Shaft and Pulley Assembly 140mm	1	SP1588-030-173
	Gas Tight Drive Shaft and Pulley Assembly 200mm	1	SP1588-030-233
17a	Parvalux 61, 115V AC, 50/60Hz, 3-Ph, 2 Speed	1	SP1490-000GA61
	Parvalux 62D+, 230V AC, 50/60Hz, 3-Ph, 2 Speed	1	SP1490-000GA62D
	Parvalux 64-T, 230V AC, 50/60Hz, 1-Ph, 1 Speed	1	SP1490-000GA64
	Parvalux 64L, 230V AC, 50/60Hz, 1-Ph, Low Speed	1	SP1490-000GA64L
	Parvalux 65, 115V AC, 50/60Hz, 1-Ph, 1 Speed	1	SP1490-000GA65
	Parvalux 65L, 115V AC, 50/60Hz, 1-Ph, Low Speed	1	SP1490-000GA65L
	Parvalux 81, 115V AC, 3 Speed	1	SP1490-000GA81
	Parvalux 82, 220V AC, 3 Speed	1	SP1490-000GA82
17c	PM3M 24Vdc Motor	1	SP1279-558-24
	PM3M 24Vdc Motor Slow Speed	1	SP1279-558L-24
18	Front Cover - Less Heater	1	See calculator 1681-161
19	Heater - Single Wiper	1	SP1588010\$\$\$^^
19a	Heater Clip	A/R	SP1588-056
20	Spray Tube Assembly	1	SP1588-418
21	Cover Bolts	each	zA0008-090S
22	End Cover Left Hand	each	SP1588-058L*
	End Cover Right Hand	each	SP1588-058R*
23a	Fixing Screw	6	zP00012S-1.0S
23b	Blanking Plug	2	1588-062
23c	Metric Pipe Fitting	1	1588-038
23d	Tubing Plug	1	1588-037

Ident	Description	Quantity	Part Number
24	Self-Parking Assembly (Reed sw and magnet) 2m	1	SP1588-012-1
	Self-Parking Assembly (Reed sw only) 2m	1	SP1587-034-1
25	Main Frame	1	See calculator 1681-161
26	Motor Housing Nut	each	10015100
27	Motor Housing Washer	each	10025306B
28	Motor Housing Bolt	each	zA0006-020S
29	Pivot Block Securing Nut	2	zNL0.25F-S
not shown	Wash Fittings SLW Single	1	SP1588-672
not shown	Wash Fittings SLW Twin	1	SP1588-673
not shown	Wash Fittings SLW Single Long	1	SP1588-674
not shown	Drive Coupling – fitted inside Drive Shaft	1	SP1279-250
not shown	L050 Rubber Spider – fitted to Drive Coupling	1	SP1279-252
not shown	Sealing Grommet – fitted around Drive Shaft	1	SP1279-137
not shown	Sealing Grommet Spacer– fitted around Drive Shaft	1	SP1588-745

*** In the Part Number means length in mm.

**# In the Part Number means length in cm and arm spring pressure code.

In the Part Number means spring pressure in lb/ft. This is determined by Wynn according to arm and blade dimensions, together with any window rake angle from the vertical. This value can also be obtained from the original order documentation. See Wynn Agent for more details.


Belt length (written on belt as A####) in Inches.

‡ Where required, extra spring pressure is obtained by the addition of 1 or 2 springs to the wiper arm. Where fitted, order 1 or 2 as required. Contact Wynn Agent for more details.


\$\$\$ Where \$\$\$ is voltage (220,115 or 024)

^^ Where ^ is heater length code.


Type C Common Cover Single Spare Parts Drawing

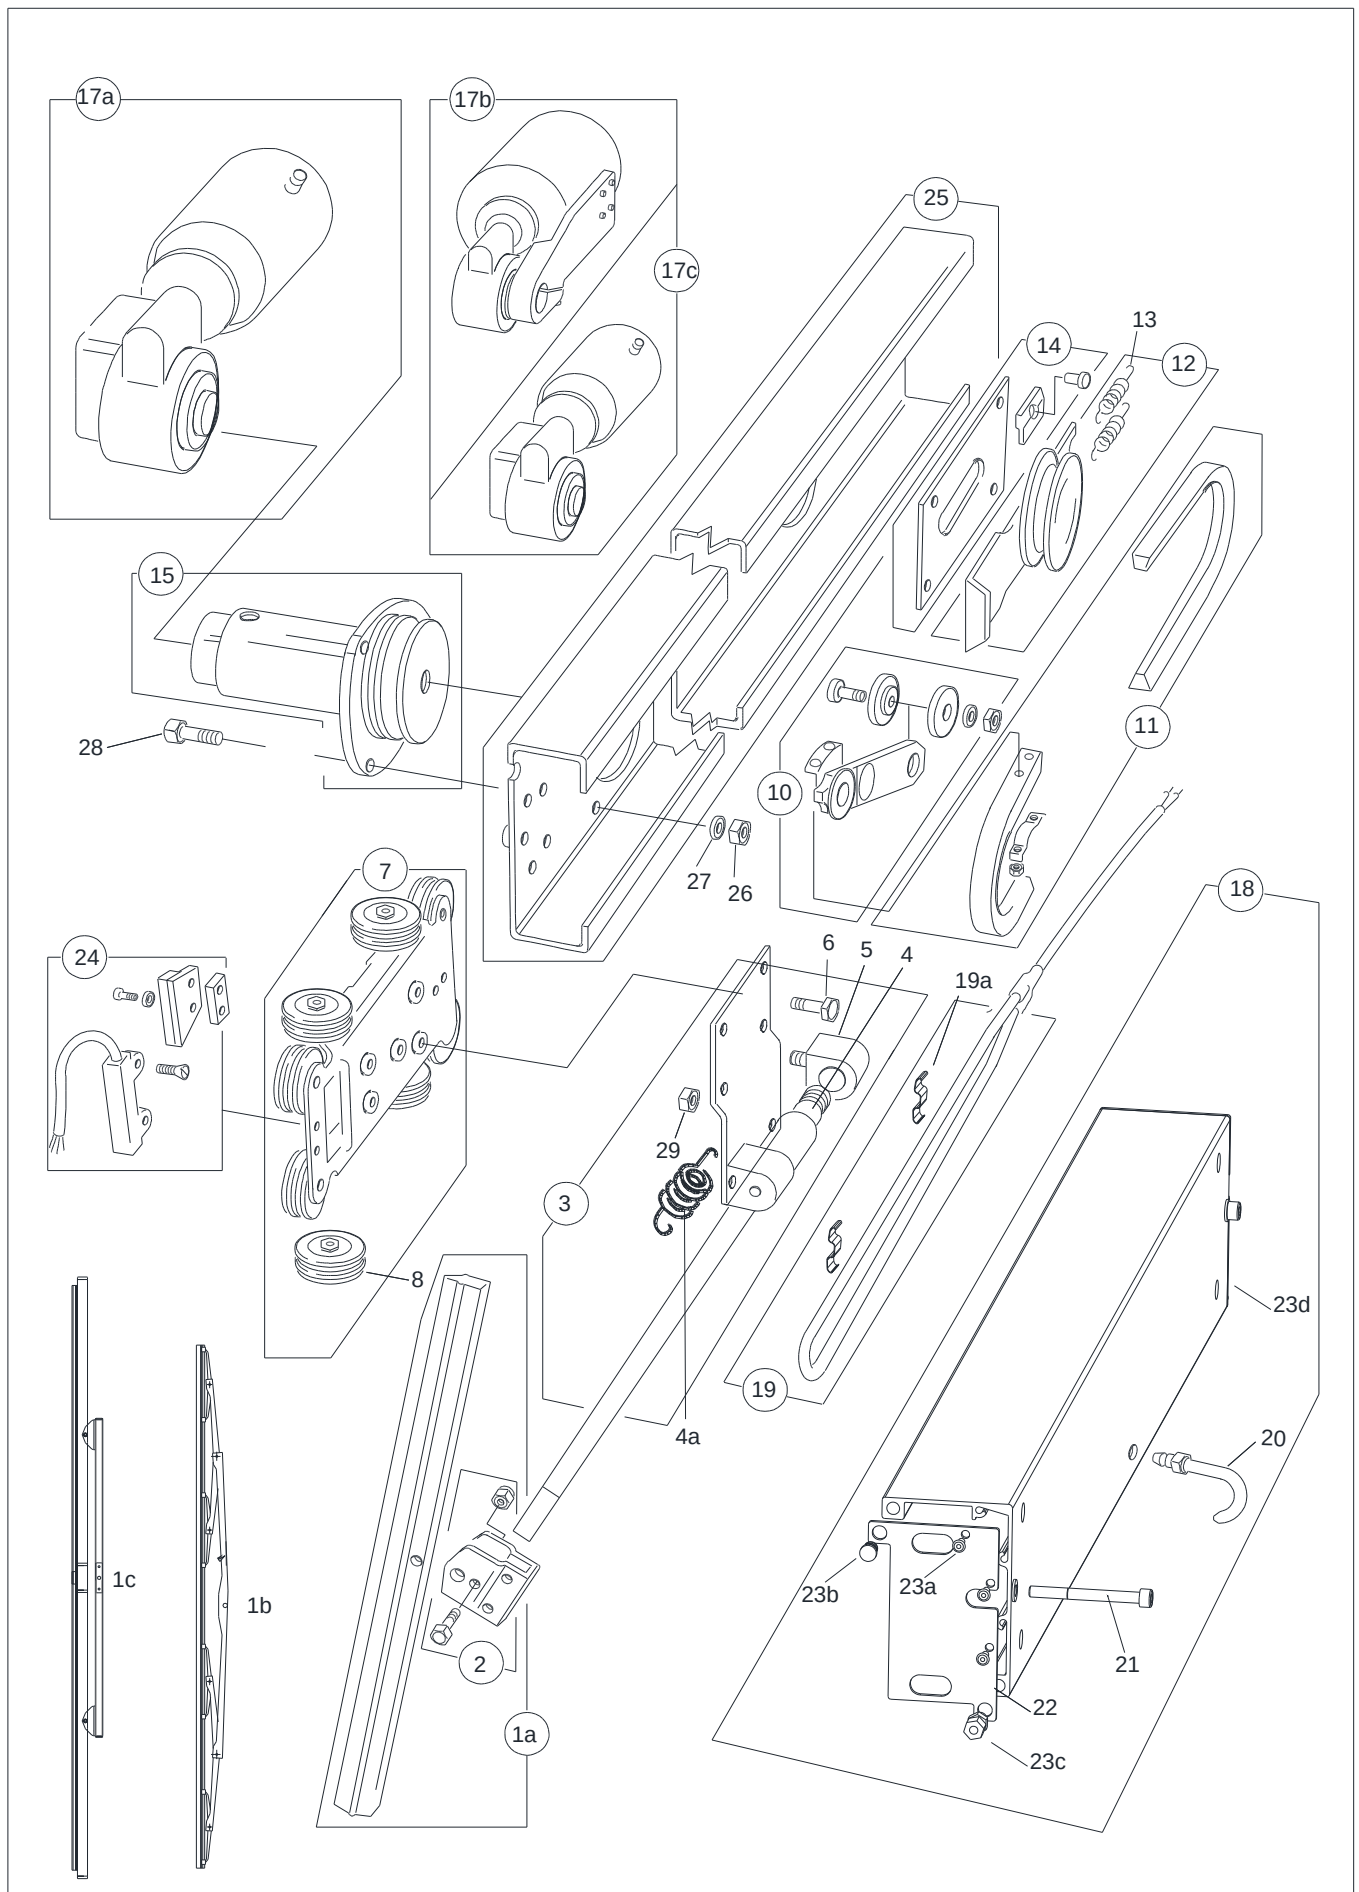

Type C Common Cover Twin Spare Parts Drawing (Short)

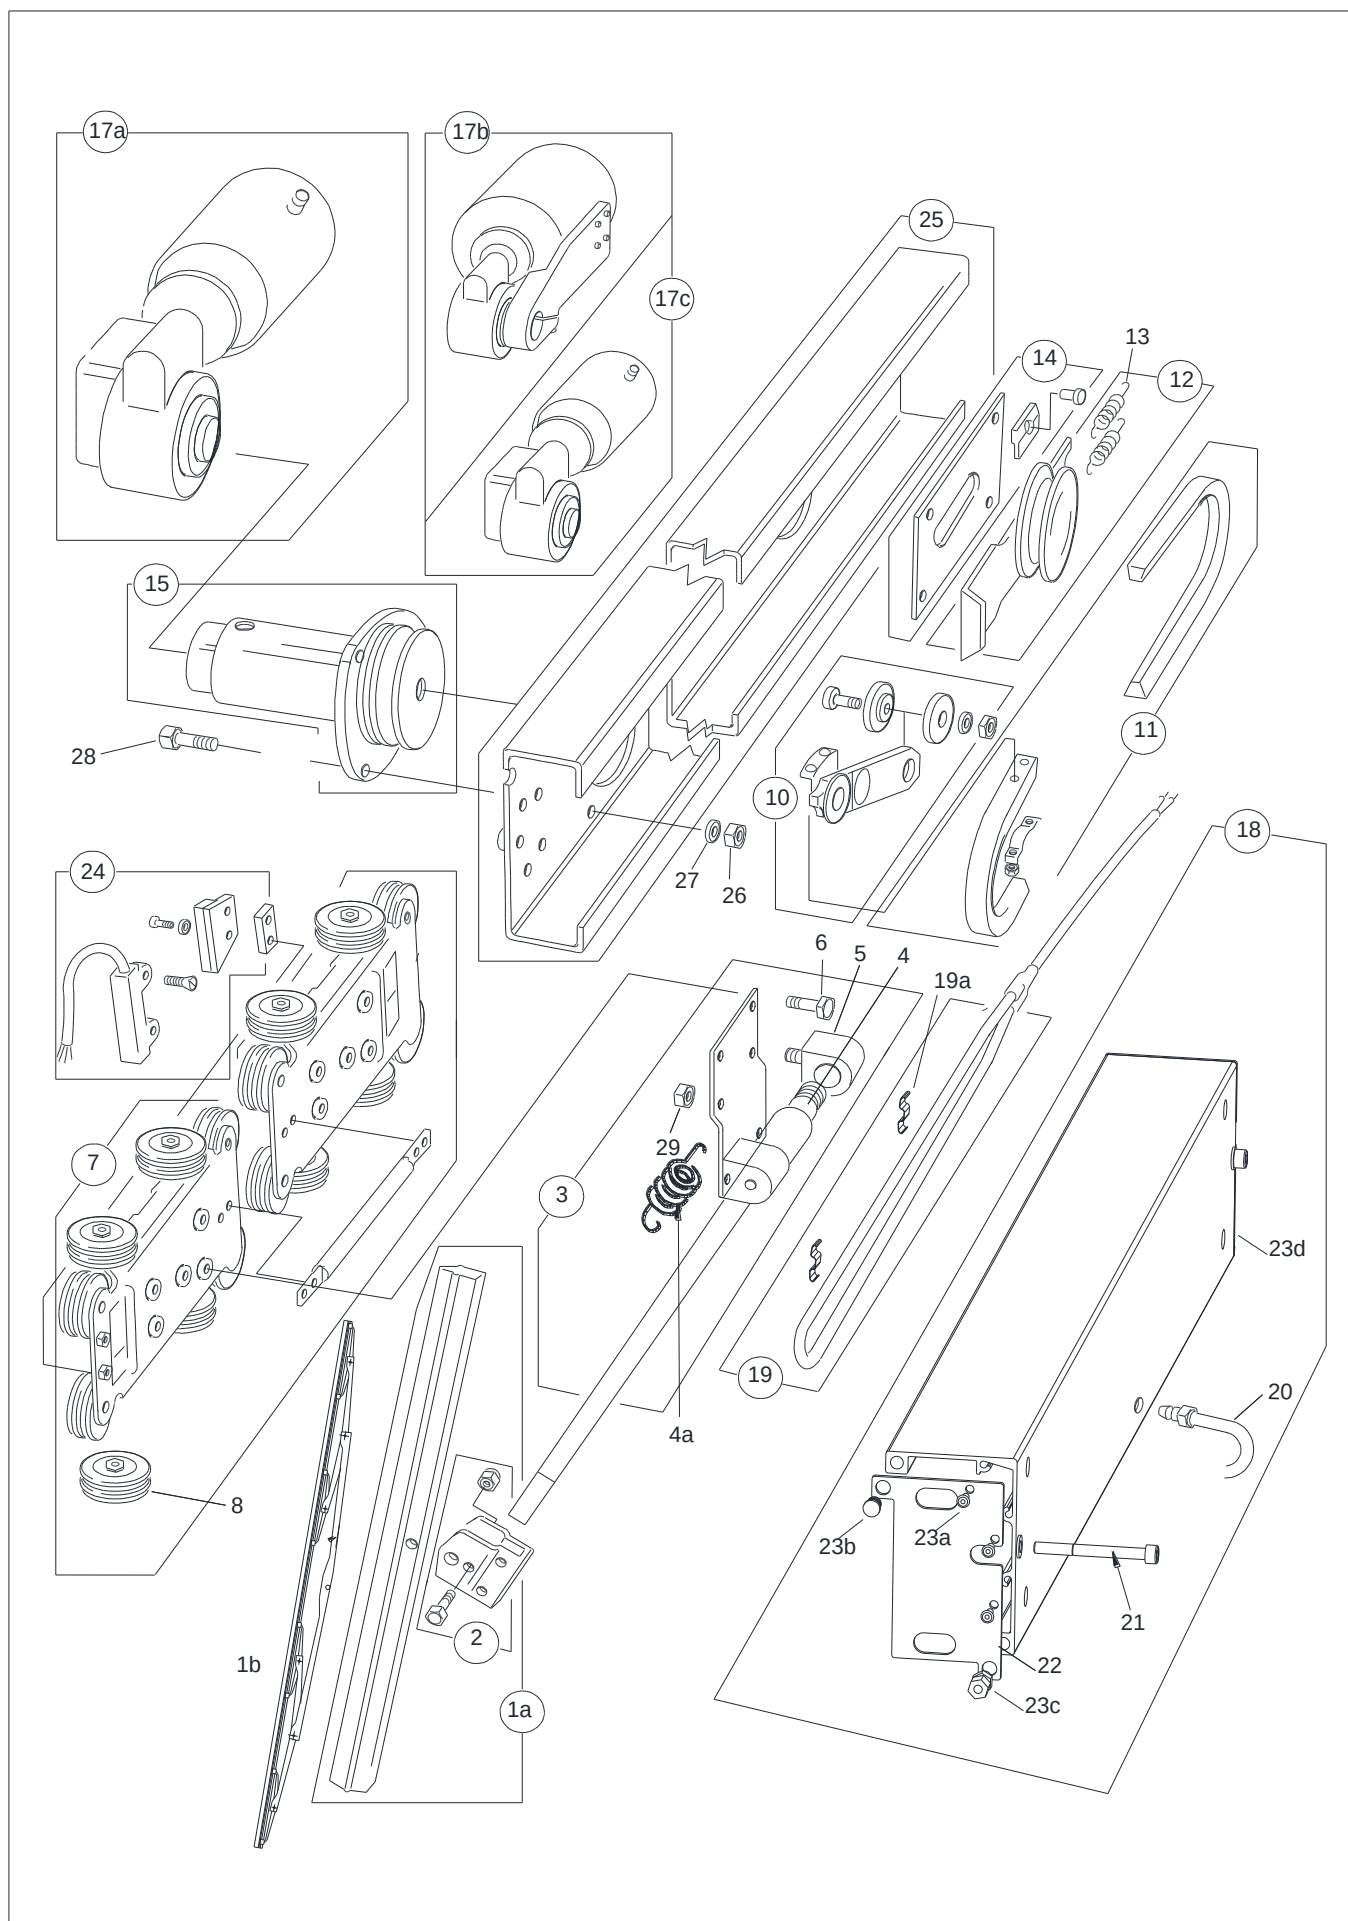

Type C Common Cover Twin Spare Parts Drawing (Long)

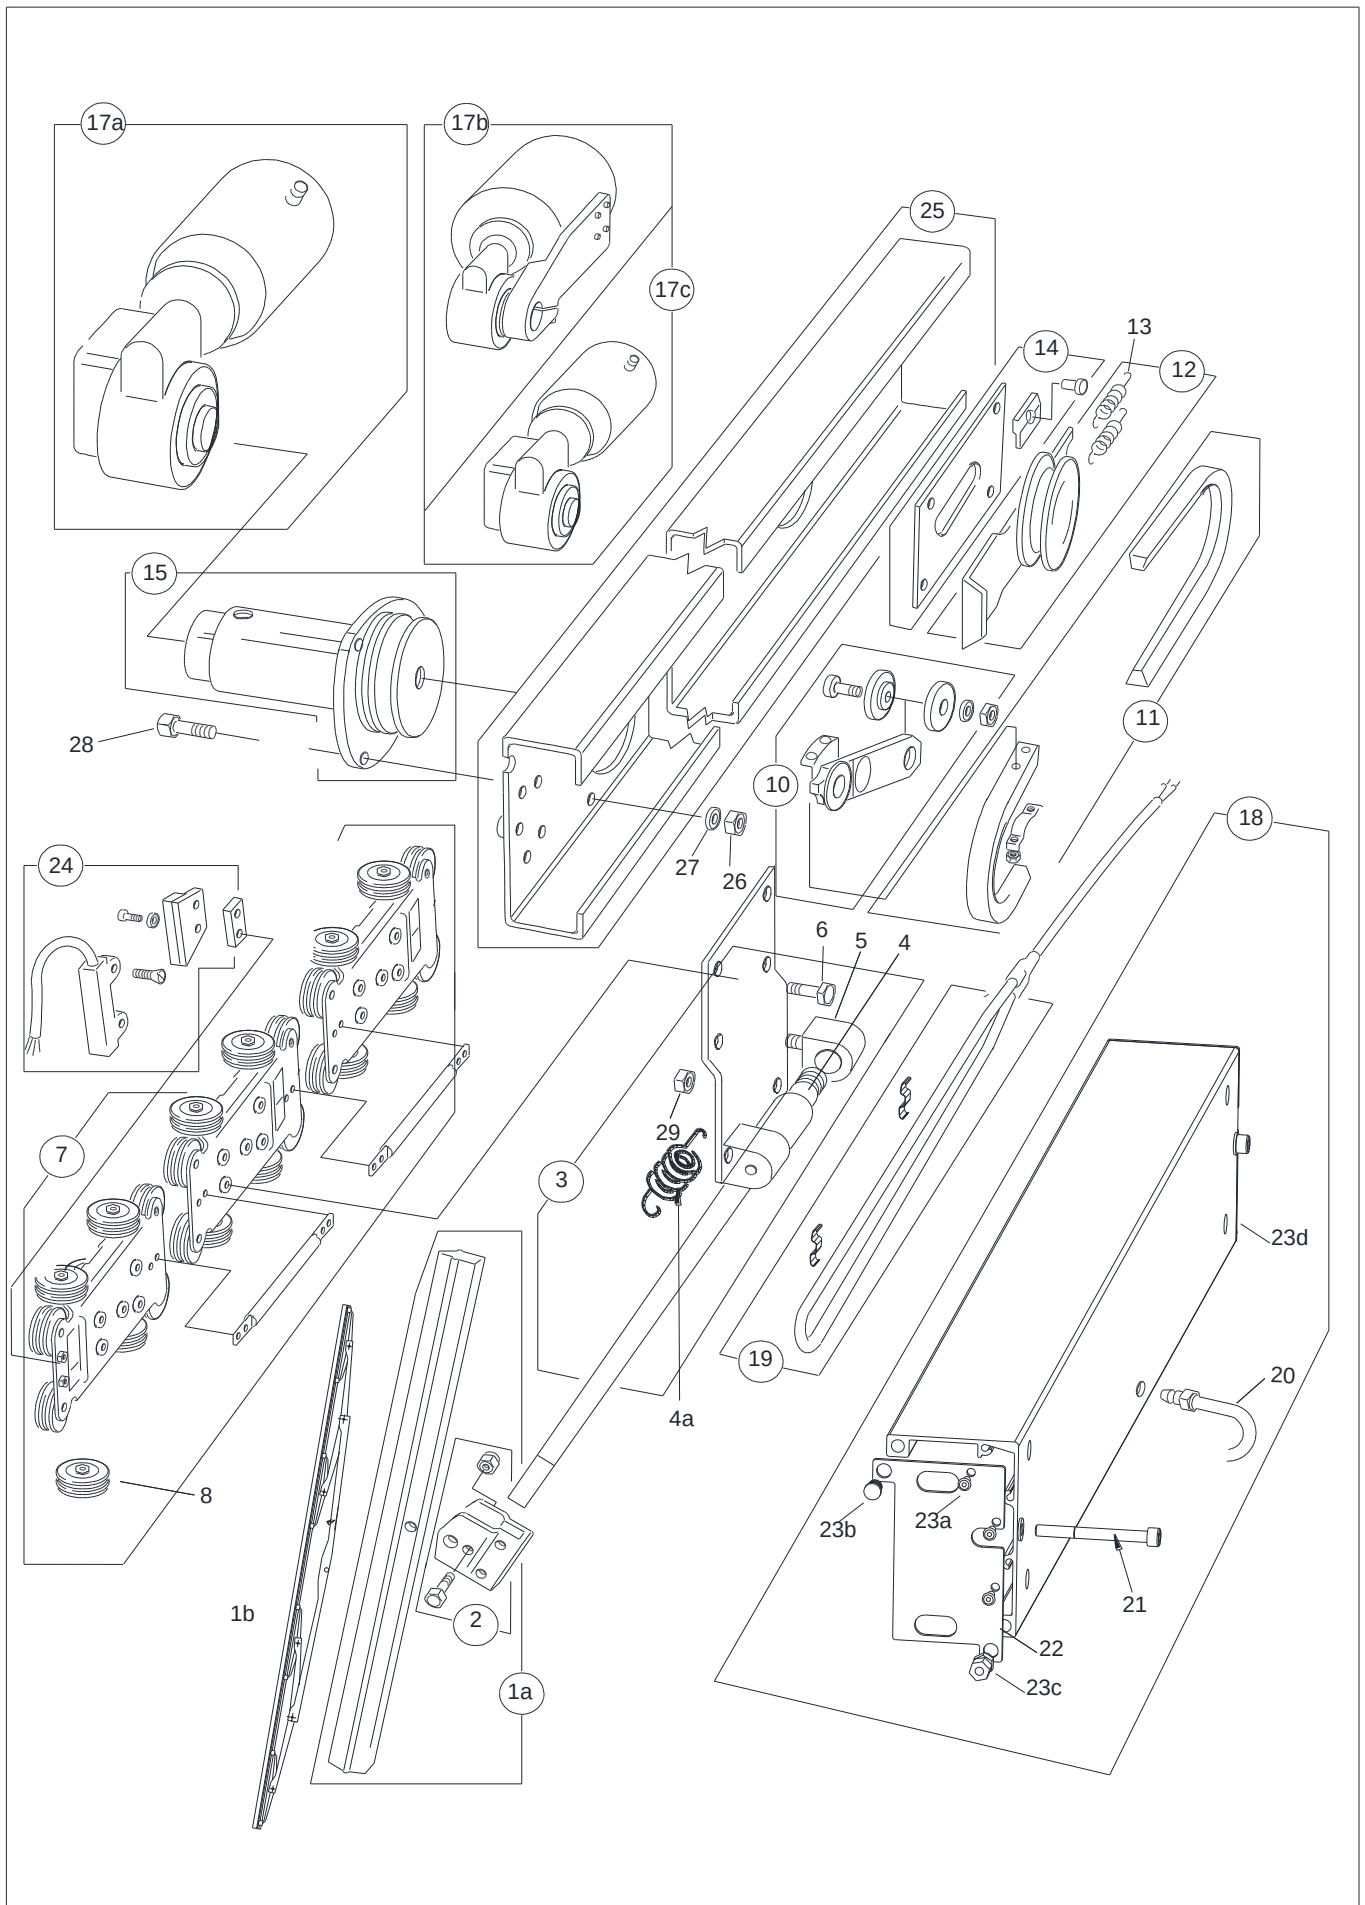


SLW Wiper Arm

The wiper arm is manufactured from stainless steel.

The wiper arm is shown below. One wiper arm assembly is used on a single bladed wiper, two wiper arm assemblies on a twin bladed wiper and three wiper arm assemblies on a triple bladed wiper unit.

The wiper arm assembly mounts on to the wiper assembly carriage plate. The wiper arm is secured to the carriage plate via four 10mm long mounting bolts.

The blade is secured to the arm assembly using the blade clip arrangement fitted to the wiper blade.

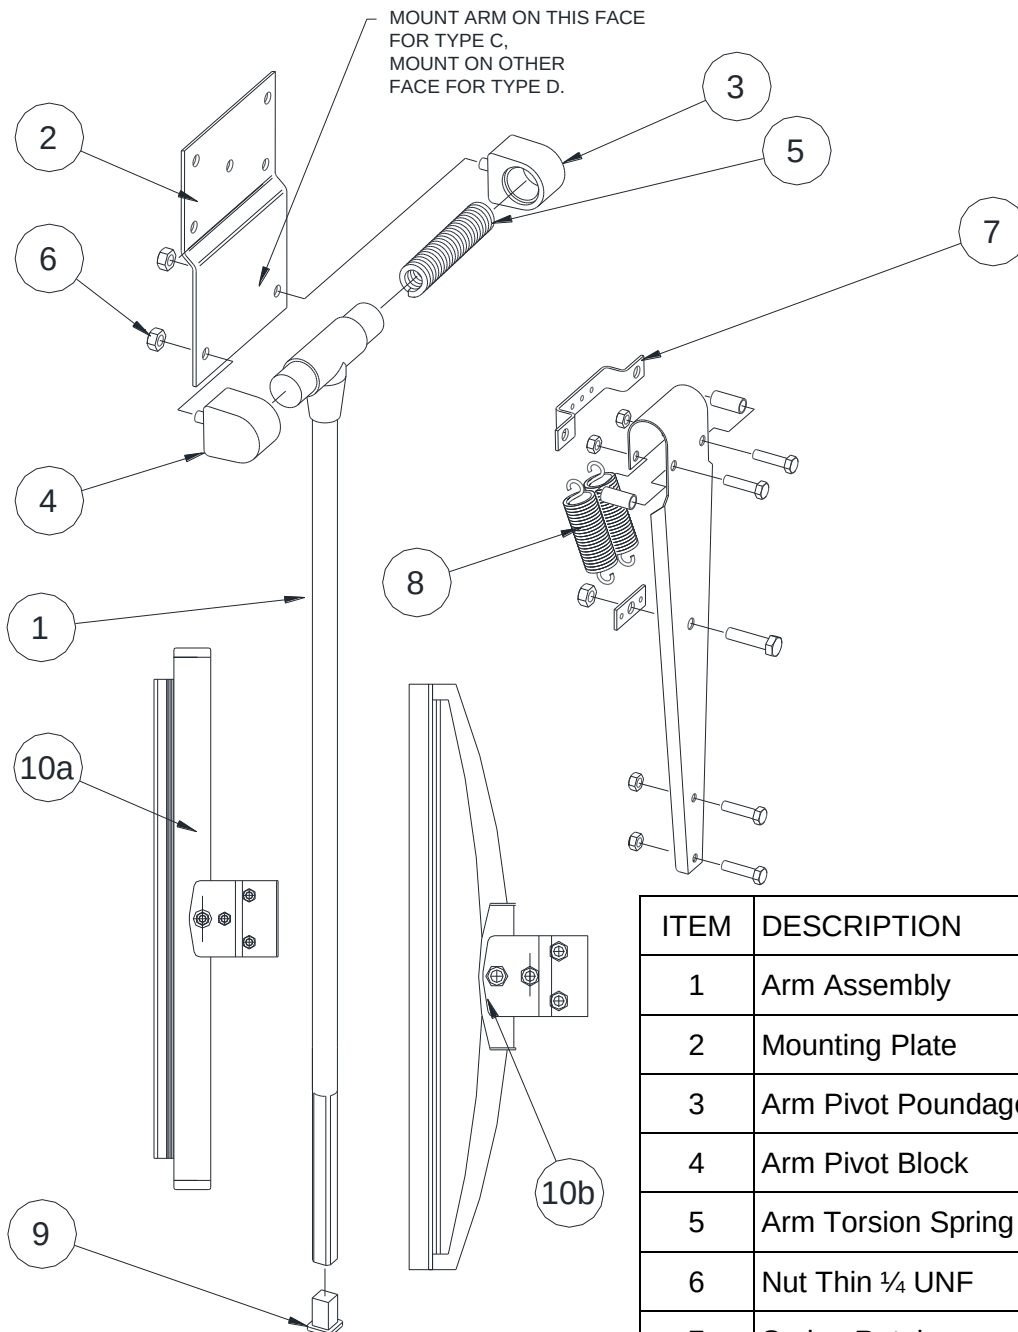

ITEM	DESCRIPTION	QTY
1	Arm Assembly	1
2	Mounting Plate	1
3	Arm Pivot Poundage Block	1
4	Arm Pivot Block	1
5	Arm Torsion Spring	1
6	Nut Thin 1/4 UNF	2
7	Spring Retainer	1 (A/R)
8	Additional Spring	(0, 1, 2)
9	Sealing Plug	1
10a	Flat Blade	1
10b	Articulated Blade	

QUICK FIT SLW WIPER ARM INSTALLATION




CAUTION: Ensure that the correct wiper, blade and arms are selected for each window. The wiper arm should not be installed/removed without the spring retaining pin fitted.

Installation

NOTE: The wiper unit should be supplied with the arm mounting plate (4) already fitted. If it is not fitted, remove 2 x ¼ UNF Thin Nuts (2) and 2 x M6 washers (3) from the pivot block threads and remove the wiper arm sub assembly (5) from the arm mounting plate (4). Fit the arm mounting plate (4) to the wiper unit before installing the wiper unit.

1. Remove 2 x ¼ UNF Thin Nuts (2) and 2 x M6 washers (3) from the pivot block threads.
2. Fit the wiper blade to the wiper arm sub assembly (5), ensuring that the captive end of the wiper is at the top.
3. Fit the wiper arm sub assembly (5) to the arm mounting plate (4) ensuring that the wiper arm sub assembly pivot block nuts (6) sit inside the holes in the arm mounting plate (4). Refit the 2 x M6 washers (3) and 2 x ¼ UNF Thin Nuts (2) to the pivot block threads and tighten.
4. Gently lift the wiper arm away from the window and remove the spring retaining pin (1). Keep safe for future use.

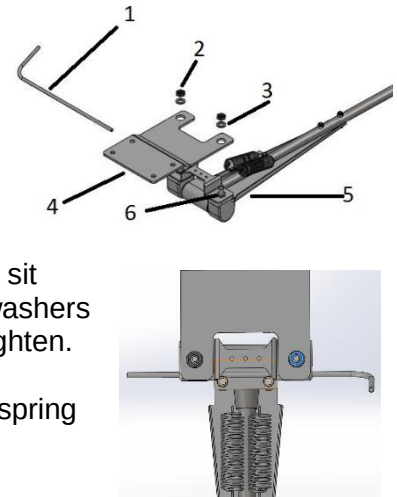

Arm Removal/Replacement

Removal

1. Gently lift the wiper arm away from the window and insert the spring retaining pin (1).
2. Remove 2 x ¼ UNF Thin Nuts (2) and 2 x M6 washers (3) from the pivot block threads. Keep safe for future use.
3. Remove the wiper arm sub assembly (5) from the arm mounting plate (4).

Replacement

1. Fit the wiper arm sub assembly (5) to the arm mounting plate (4) ensuring that the wiper arm sub assembly pivot block nuts (6) sit inside the holes in the arm mounting plate (4). Refit the 2 x M6 washers (3) and 2 x ¼ UNF Thin Nuts (2) to the pivot block threads and tighten.
2. Gently lift the wiper arm away from the window and remove the spring retaining pin (1). Keep safe for future use.


SLW Double Wiper Arm Assembly

The wiper arm is manufactured from stainless steel.

The wiper arm is shown below. One wiper arm assembly is used on a single bladed wiper, two wiper arm assemblies on a twin bladed wiper.

The double wiper arm mounting plate is secured to the wiper arm mounting plate with two bolts, washers and nuts. The complete wiper arm assembly mounts on to the wiper assembly carriage plate. The wiper arm is secured to the carriage plate via four 10mm long mounting bolts.

The blade is secured to the arm assembly using the blade clip arrangement fitted to the wiper blade.

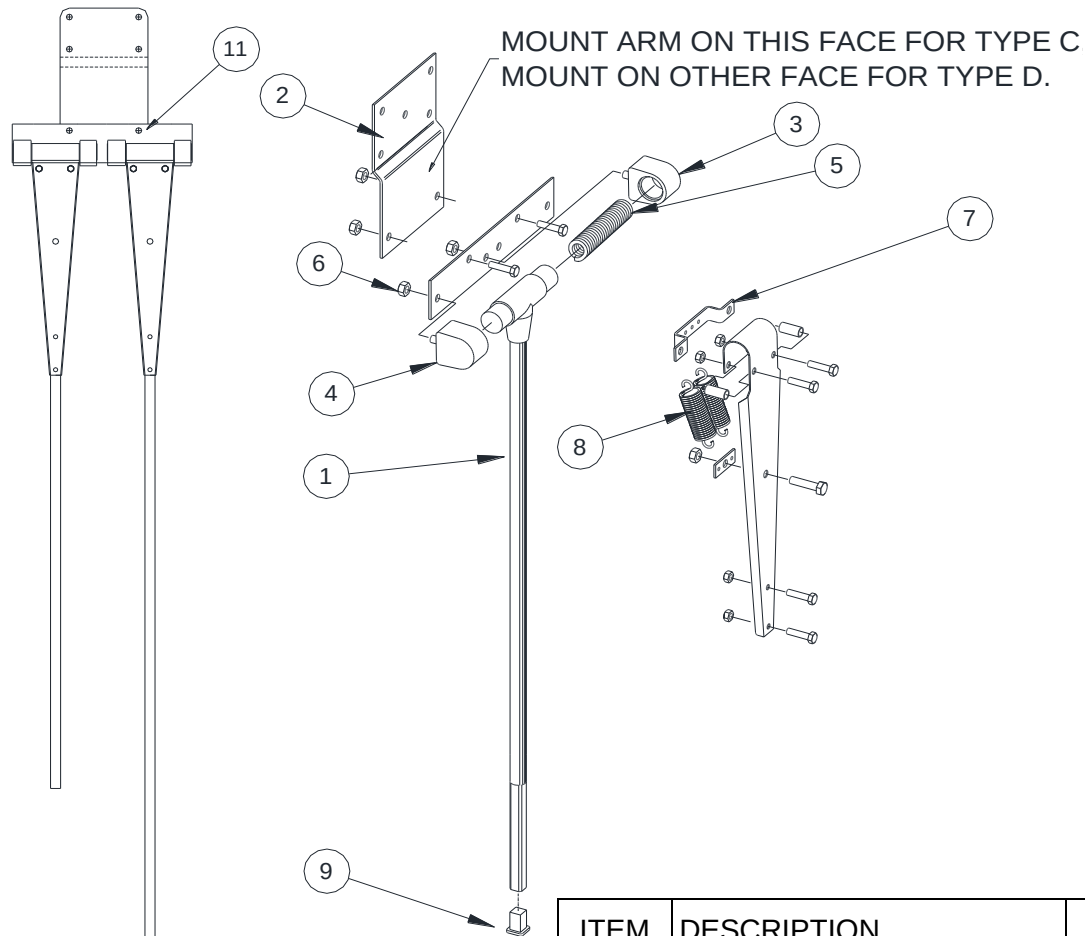

VIEWED FROM OUTSIDE

ITEM	DESCRIPTION	QTY
1	Arm Assembly	2
2	Mounting Plate	1
3	Arm Pivot Poundage Block	2
4	Arm Pivot Block	2
5	Arm Torsion Spring	2
6	Nut Thin ¼ UNF	4
7	Spring Retainer	2(A/R)
8	Additional Spring (per arm)	(0, 1, 2)
9	Sealing Plug	2
11	Double Arm Mtg Plate	2


SLW Heavy Duty Wiper Arm Assembly – 600-950mm

The wiper arm is manufactured from stainless steel.

The wiper arm is shown below. One wiper arm assembly is used on a single bladed wiper.

The heavy duty wiper arm mounting plate is secured to the wiper arm mounting plate with two bolts, washers and nuts. The complete wiper arm assembly mounts on to the wiper assembly carriage plate. The wiper arm is secured to the carriage plate via four 10mm long mounting bolts.

The blade is secured to the arm assembly using the blade clip arrangement fitted to the wiper blade.

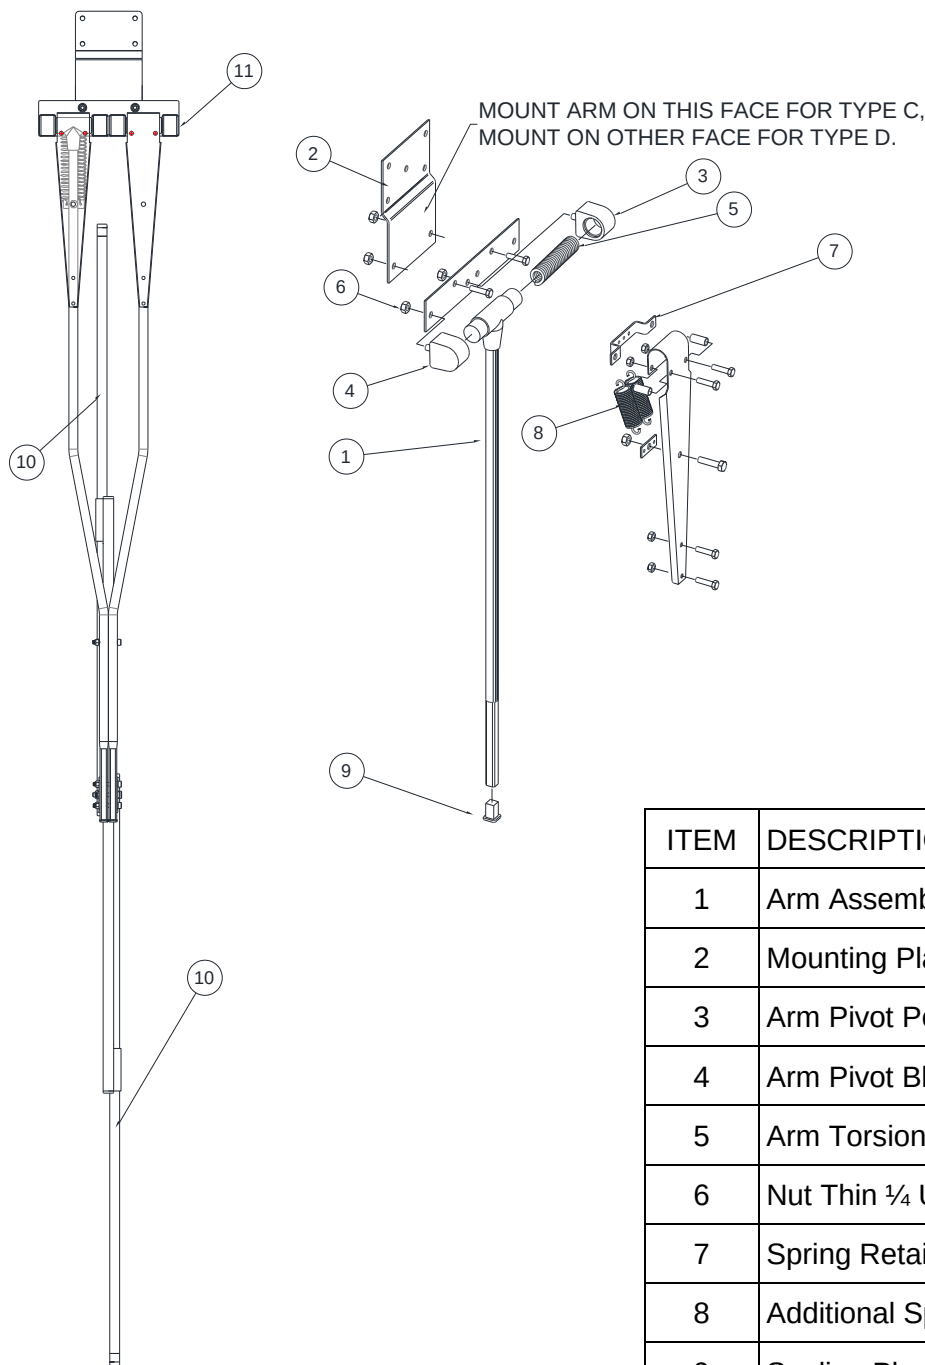

ITEM	DESCRIPTION	QTY
1	Arm Assembly	2
2	Mounting Plate	1
3	Arm Pivot Poundage Block	2
4	Arm Pivot Block	2
5	Arm Torsion Spring	2
6	Nut Thin ¼ UNF	4
7	Spring Retainer	2
8	Additional Spring (per arm)	2
9	Sealing Plug	2
10	Flat Blade	2
11	Double Arm Mtg Plate	2

SLW Heavy Duty Wiper Arm Assembly – 1000-1150mm


The wiper arm is manufactured from stainless steel.

The wiper arm is shown below. One wiper arm assembly is used on a single bladed wiper.

The heavy duty wiper arm mounting plate is secured to the wiper arm mounting plate with two bolts, washers and nuts. The complete wiper arm assembly mounts on to the wiper assembly carriage plate. The wiper arm is secured to the carriage plate via four 10mm long mounting bolts.

The blade is secured to the arm assembly using the blade clip arrangement fitted to the wiper blade.

The arm is fitted with an Anti-Drop plate. This can be adjusted to provide addition pressure to the wiper blade.

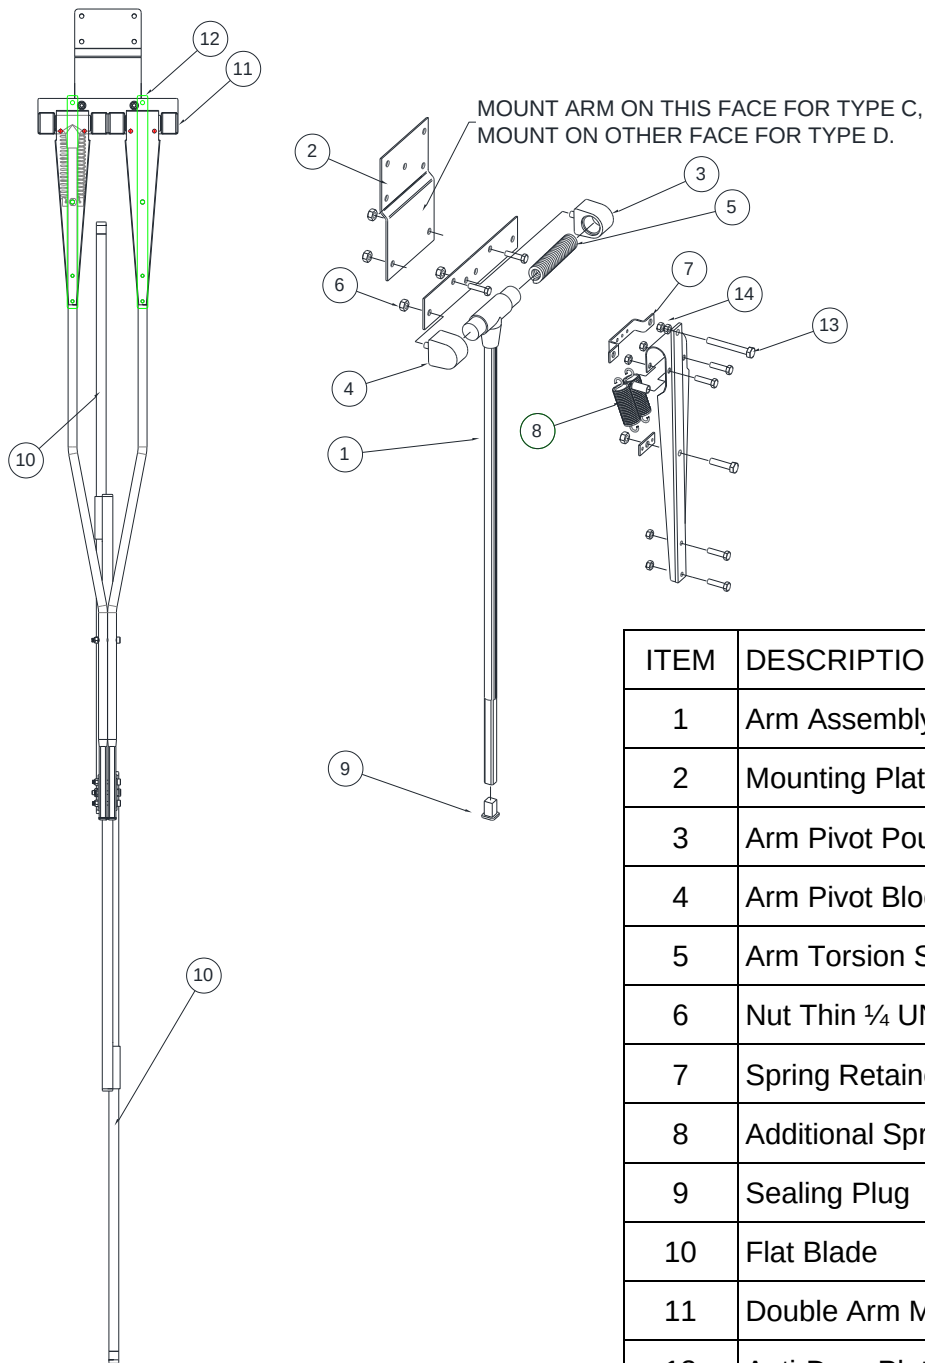

ITEM	DESCRIPTION	QTY
1	Arm Assembly	2
2	Mounting Plate	1
3	Arm Pivot Poundage Block	2
4	Arm Pivot Block	2
5	Arm Torsion Spring	2
6	Nut Thin ¼ UNF	4
7	Spring Retainer	2
8	Additional Spring (per arm)	3
9	Sealing Plug	2
10	Flat Blade	2
11	Double Arm Mtg Plate	2
12	Anti-Drop Plate	2
13	Adjustment Bolt	2
14	Lock Nuts	4


FITTING THE WIPER BLADE CARRIER

The wiper blades should be changed every 12 months but this is dependent on use and operating conditions

Ref Figure – Dual Blade Clip

1. Remove one M6 blade retaining bolt (1), two M6 flat washers (2), and M6 Nylock nut (3), from blade clip on double wiper arm assy (10).
2. Place dual blade carrier assy (5), into blade clip on Arm (10).
3. Ensure that all fixing holes align.
4. Secure in place with one M6 blade retaining bolt (1), two M6 flat washers (2), and M6 Nylock nut (3).

Figure – Dual Blade Clip

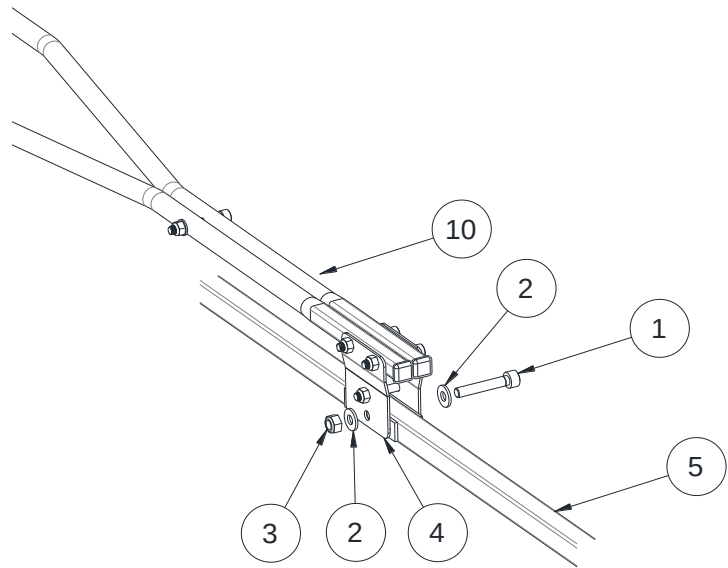

IMPORTANT


DO NOT over tighten blade carrier retaining bolt and nut, as blade carrier is required to pivot on glass.

Ref Figure – Nut Tightening

5. Secure nut until tight – then 1/4 turn back

Figure – Nut Tightening

Secure nut
until tight 1/4 turn back

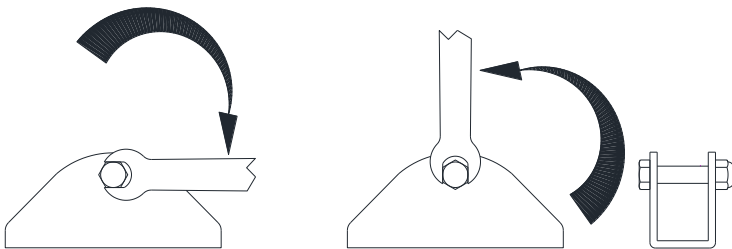

NOTE

Pictorial representation only, May not be exact to supplied arm

EXAMPLE
NUMBER

D 5 1 1 1 1 A 1 C E B A 1 A - -

WIPER TYPE	CODE
D1	D1
D2	D2
D3	D3
D4	D4
D5	D5
C1	C1
C2	C2
C3	C3
C4	C4
C5	C5
C6	C6
C7	C7
C8	C8
C9	C9

STROKE TYPE	CODE
Single	1
Twin	2
Special Twin Case (Non-std crs)	Q
Special Single (See Instructions)	S
Special Twin (See Instructions)	T
Type C Single Old Style Cse/Cvr	3
Type D Single Old Style Cse/Cvr	4
Type C Twin Old Style Cse/Cvr	5
Type D Twin Old Style Cse/Cvr	6
Type 76 Converted to Type D	7

TWIN STROKE LENGTH STANDARD			
1 INCH (25MM) STROKE OVERLAP			
INCHES	MILLIMETRES	CODE	
2 X 13	2 X 330	13	
2 X 14	2 X 356	14	
2 X 15	2 X 380	15	
2 X 16	2 X 407	16	
2 X 17	2 X 430	17	
2 X 18	2 X 457	18	
2 X 19	2 X 480	19	
2 X 20	2 X 510	20	
2 X 21	2 X 533	21	
2 X 22	2 X 558	22	
2 X 23	2 X 583	23	
2 X 24	2 X 610	24	
2 X 25	2 X 635	25	
2 X 26	2 X 660	26	
2 X 27	2 X 685	27	
2 X 28	2 X 710	28	
2 X 29	2 X 735	29	
2 X 30	2 X 760	30	
2 X 31	2 X 787	31	
2 X 32	2 X 810	32	
2 X 33	2 X 835	33	
2 X 34	2 X 865	34	
2 X 35	2 X 890	35	
2 X 36	2 X 915	36	
2 X 37	2 X 940	37	
2 X 38	2 X 965	38	
2 X 39	2 X 990	39	
2 X 40	2 X 1015	40	
2 X 41	2 X 1040	41	
2 X 42	2 X 1065	42	
2 X 43	2 X 1095	43	
2 X 44	2 X 1145	44	
2 X 45	2 X 1145	45	
2 X 46	2 X 1195	46	
2 X 47	2 X 1245	47	
2 X 48	2 X 1295	48	
2 X 49	2 X 1335	49	
2 X 50	2 X 1335	50	
2 X 51	2 X 1450	51	
2 X 52	2 X 1450	52	
2 X 53	2 X 1560	53	
2 X 54	2 X 1560	54	
2 X 55	2 X 1680	55	
2 X 56	2 X 1680	56	
2 X 57	2 X 1800	57	
2 X 58	2 X 1800	58	
2 X 59	2 X 1930	59	
2 X 60	2 X 1930	60	
2 X 61	2 X 2005	61	
2 X 62	2 X 2005	62	
2 X 63	2 X 2005	63	
2 X 64	2 X 2005	64	
2 X 65	2 X 2005	65	
2 X 66	2 X 2005	66	
2 X 67	2 X 2005	67	
2 X 68	2 X 2005	68	
2 X 69	2 X 2005	69	
2 X 70	2 X 2005	70	
2 X 71	2 X 2005	71	
2 X 72	2 X 2005	72	
2 X 73	2 X 2005	73	
2 X 74	2 X 2005	74	
2 X 75	2 X 2005	75	
2 X 76	2 X 2005	76	
2 X 77	2 X 2005	77	
2 X 78	2 X 2005	78	
2 X 79	2 X 2005	79	
2 X 80	2 X 2005	80	
2 X 81	2 X 2005	81	
2 X 82	2 X 2005	82	
2 X 83	2 X 2005	83	
2 X 84	2 X 2005	84	
2 X 85	2 X 2005	85	
2 X 86	2 X 2005	86	
2 X 87	2 X 2005	87	
2 X 88	2 X 2005	88	
2 X 89	2 X 2005	89	
2 X 90	2 X 2005	90	
2 X 91	2 X 2005	91	
2 X 92	2 X 2005	92	
2 X 93	2 X 2005	93	
2 X 94	2 X 2005	94	
2 X 95	2 X 2005	95	
2 X 96	2 X 2005	96	
2 X 97	2 X 2005	97	
2 X 98	2 X 2005	98	
2 X 99	2 X 2005	99	
2 X 100	2 X 2005	100	
2 X 101	2 X 2005	101	
2 X 102	2 X 2005	102	
2 X 103	2 X 2005	103	
2 X 104	2 X 2005	104	
2 X 105	2 X 2005	105	
2 X 106	2 X 2005	106	
2 X 107	2 X 2005	107	
2 X 108	2 X 2005	108	
2 X 109	2 X 2005	109	
2 X 110	2 X 2005	110	
2 X 111	2 X 2005	111	
2 X 112	2 X 2005	112	
2 X 113	2 X 2005	113	
2 X 114	2 X 2005	114	
2 X 115	2 X 2005	115	
2 X 116	2 X 2005	116	
2 X 117	2 X 2005	117	
2 X 118	2 X 2005	118	
2 X 119	2 X 2005	119	
2 X 120	2 X 2005	120	
2 X 121	2 X 2005	121	
2 X 122	2 X 2005	122	
2 X 123	2 X 2005	123	
2 X 124	2 X 2005	124	
2 X 125	2 X 2005	125	
2 X 126	2 X 2005	126	
2 X 127	2 X 2005	127	
2 X 128	2 X 2005	128	
2 X 129	2 X 2005	129	
2 X 130	2 X 2005	130	
2 X 131	2 X 2005	131	
2 X 132	2 X 2005	132	
2 X 133	2 X 2005	133	
2 X 134	2 X 2005	134	
2 X 135	2 X 2005	135	
2 X 136	2 X 2005	136	
2 X 137	2 X 2005	137	
2 X 138	2 X 2005	138	
2 X 139	2 X 2005	139	
2 X 140	2 X 2005	140	
2 X 141	2 X 2005	141	
2 X 142	2 X 2005	142	
2 X 143	2 X 2005	143	
2 X 144	2 X 2005	144	
2 X 145	2 X 2005	145	
2 X 146	2 X 2005	146	
2 X 147	2 X 2005	147	
2 X 148	2 X 2005	148	
2 X 149	2 X 2005	149	
2 X 150	2 X 2005	150	
2 X 151	2 X 2005	151	
2 X 152	2 X 2005	152	
2 X 153	2 X 2005	153	
2 X 154	2 X 2005	154	
2 X 155	2 X 2005	155	
2 X 156	2 X 2005	156	
2 X 157	2 X 2005	157	
2 X 158	2 X 2005	158	
2 X 159	2 X 2005	159	
2 X 160	2 X 2005	160	
2 X 161	2 X 2005	161	
2 X 162	2 X 2005	162	
2 X 163	2 X 2005	163	
2 X 164	2 X 2005	164	
2 X 165	2 X 2005	165	
2 X 166	2 X 2005	166	
2 X 167	2 X 2005	167	
2 X 168	2 X 2005	168	
2 X 169	2 X 2005	169	
2 X 170	2 X 2005	170	
2 X 171	2 X 2005	171	
2 X 172	2 X 2005	172	
2 X 173	2 X 2005	173	
2 X 174	2 X 2005	174	
2 X 175	2 X 2005	175	
2 X 176	2 X 2005	176	
2 X 177	2 X 2005	177	
2 X 178	2 X 2005	178	
2 X 179	2 X 2005	179	
2 X 180	2 X 2005	180	
2 X 181	2 X 2005	181	
2 X 182	2 X 2005	182	
2 X 183	2 X 2005	183	
2 X 184	2 X 2005	184	
2 X 185	2 X 2005	185	
2 X 186	2 X 2005	186	
2 X 187	2 X 2005	187	
2 X 188	2 X 2005	188	
2 X 189	2 X 2005	189	
2 X 190	2 X 2005	190	
2 X 191	2 X 2005	191	
2 X 192	2 X 2005	192	
2 X 193	2 X 2005	193	
2 X 194	2 X 2005	194	
2 X 195	2 X 2005	195	
2 X 196	2 X 2005	196	
2 X 197	2 X 2005	197	
2 X 198	2 X 2005	198	
2 X 199	2 X 2005	199	
2 X 200	2 X 2005	200	
2 X 201	2 X 2005	201	
2 X 202	2 X 2005	202	
2 X 203	2 X 2005	203	
2 X 204	2 X 2005	204	
2 X 205	2 X 2005	205	
2 X 206	2 X 2005	206	
2 X 207	2 X 2005	207	
2 X 208	2 X 2005	208	
2 X 209	2 X 2005	209	
2 X 210	2 X 2005	210	
2 X 211	2 X 2005	211	
2 X 212	2 X 2005	212	
2 X 213	2 X 2005	213	
2 X 214	2 X 2005	214	
2 X 215	2 X 2005	215	
2 X 216	2 X 2005	216	
2 X 217	2 X 2005	217	
2 X 218	2 X 2005	218	
2 X 219	2 X 2005	219	
2 X 220	2 X 2005	220	
2 X 221	2 X 2005	221	
2 X 222	2 X 2005	222	
2 X 223	2 X 2005	223	
2 X 224	2 X 2005	224	
2 X 225	2 X 2005	225	
2 X 226	2 X 2005	226	
2 X 227	2 X 2005	227	
2 X 228	2 X 2005	228	
2 X 229	2 X 2005	229	
2 X 230	2 X 2005	230	
2 X 231	2 X 2005	231	
2 X 232	2 X 2005	232	
2 X 233	2 X 2005	233	
2 X 234	2 X 2005	234	
2 X 235	2 X 2005	235	
2 X 236	2 X 2005	236	
2 X 237	2 X 2005	237	
2 X 238	2 X 2005	238	
2 X 239	2 X 2005	239	
2 X 240	2 X 2005	240	
2 X 241	2 X 2005	241	
2 X 242	2 X 2005	242	
2 X 243	2 X 2005	243	
2 X 244	2 X 2005	244	
2 X 245	2 X 2005	245	
2 X 246	2 X 2005	246	
2 X 247	2 X 2005	247	
2 X 248	2 X 2005	248	
2 X 249	2 X 2005	249	
2 X 250	2 X 2005	250	
2 X 251	2 X 2005	251	
2 X 252	2 X 2005	252	
2 X 253	2 X 2005	253	
2 X 254	2 X 2005	254	
2 X 255	2 X 2005	255	
2 X 256	2 X 2005	256	
2 X 257	2 X 2005	257	
2 X 258	2 X 2005	258	
2 X 259	2 X 2005	259	
2 X 260	2 X 2005	260	
2 X 261	2 X 2005	261	
2 X 262	2 X 2005	262	
2 X 263	2 X 2005	263	
2 X 264	2 X 2005	264	
2 X 265	2 X 2005	265	
2 X 266	2 X 2005	266	
2 X 267	2 X 2005	267	
2 X 268	2 X 2005	268	
2 X 269	2 X 2005	269	
2 X 270	2 X 2005	270	
2 X 271	2 X 2005	271	
2 X 272	2 X 2005	272	
2 X 273	2 X 2005	273	
2 X 274	2 X 2005	274	
2 X 275	2 X 2005	275	
2 X 276	2 X 2005	276	
2 X 277	2 X 2005	277	
2 X 278	2 X 2005	278	
2 X 279	2 X 2005	279	
2 X 280	2 X 2005	280	
2 X 281	2 X 2005	281	
2 X 282	2 X 2005	282	
2 X 283	2 X 2005	283	
2 X 284	2 X 2005	284	
2 X 285	2 X 2005	285	
2 X 286	2 X 2005	286	
2 X 287	2 X 2005	287	
2 X 288	2 X 2005	288	
2 X 289	2 X 2005	289	
2 X 290	2 X 2005	290	
2 X 291	2 X 2005	291	
2 X 292	2 X 2005	292	
2 X 293	2 X 2005	293	
2 X 294	2 X 2005	294	
2 X 295	2 X 2005	295	
2 X 296	2 X 2005	296	
2 X 297	2 X 2005	297	
2 X 298	2 X 2005	298	
2 X 299	2 X 2005	299	
2 X 300	2 X 2005	300	
2 X 301	2 X 2005	301	
2 X 302	2 X 2005	302	
2 X 303	2 X 2005	303	
2 X 304	2 X 2005	304	
2 X 305	2 X 2005	305	
2 X 306	2 X 2005	306	
2 X 307	2 X 2005	307	
2 X 308	2 X 2005	308	
2 X 309	2 X 2005	309	
2 X 310	2 X 2005	310	
2 X 311	2 X 2005	311	
2 X 312	2 X 2005	312	
2 X 313	2 X 2005	313	
2 X 314	2 X 2005	314	
2 X 315	2 X 2005	315	
2 X 316	2 X 2005	316	
2 X 317	2 X 2005	317	
2 X 318	2 X 2005	318	
2 X 319	2 X 2005	319	
2 X 320	2 X 2005	320	
2 X 321	2 X 2005	321	
2 X 322	2 X 2005	322	
2 X 323	2 X 2005	323	
2 X 324	2 X 2005	324	
2 X 325	2 X 2005	325	
2 X 326	2 X 2005	326	
2 X 327	2 X 2005	327	
2 X 328	2 X 2005	328	
2 X 329	2 X 2005	329	
2 X 330	2 X 2005	330	
2 X 331	2 X 2005	331	
2 X 332	2 X 2005	332	
2 X 333	2 X 2005	33	

SERIES 8000 CONTROL SYSTEM

The Series 8000 Network Control System contains a touch sensitive keypad and a wiper motor control PCB that can fitted in individual modules or in multiples in a range of 19" Racks.

The Keypad

This is specially designed for marine applications and by using the latest modern electronics the system is very robust. The intermittent and wash cycle timings can be easily programmed from the keypad. The background illumination on the key icons can be dimmed to completely off.

Keypads are flush mounted into the Bridge Console, and are touch sensitive with three wiper speeds, two intermittent speeds, single wipe functions and optional wash program, window and wiper case heat keys. Customised keypads are available on request.

The Wiper Motor Control PCB

These have a mains operating voltage of 110 or 230v AC at 50~60Hz 1 phase or 3 phase.

Each module generates its own 24v DC supply for the onboard control circuitry and keypads from the mains voltage, so there is no requirement for an external PSU.

Each motor control PCB has four additional outputs which can be used for wash, purge, wiper heater and window heater control. These outputs are at incoming line supply voltage 110 or 230v AC. The modules have a group address so wipers can be selectively controlled from the keypad. They are pre-set in production but can also be reset by the customer.

Power for the wiper, heaters and wash system is taken directly to the control module, located close to the wiper unit or to the 19 inch Rack Units located in a suitable room. Onboard current monitoring circuitry will isolate and shut down the motor output if too much current is drawn. The Auxiliary outputs are protected by a front panel fuse, 10A total for all four outputs.

The connectors are high quality Cage clamp connectors. There are double height connectors for bus and power input. All other connectors are single height.

System Compatibility And Requirements

The systems comply with ISO 60945 ESD, EMC and environmental specifications.

The bus communications protocol based on RS485 and can easily be interfaced with touch screens.

Bus wiring must consist of a twisted pair for the communication lines (Bus+, Bus-) and a twisted pair for the power lines (24V, 0V). The power lines are connected at each module to ensure a constant supply to the keypad in the event of a module failure. The cable must comply with the DeviceNet specification, and the communication pair have a characteristic impedance of 120 Ohms.

The cable size is dependent on the distance between the first wiper module/rack unit and furthest keypad: -

Bus Length	Min Cable Size	
	Power	Data
Up to 100m	0.38 mm ² (22 AWG)	0.22mm ² (24 AWG)
Above 101m	1.5 mm ² (15 AWG)	0.96mm ² (18 AWG)


A terminating resistor module must be connected into the communication lines at the first keypad and a terminating resistor module must be connected across the communication lines at the last module.

Integrated Fault Diagnosis


Each wiper motor control PCB has a built in, real time integrated fault diagnosis, which is made visual by LED's on the end panel.

The diagnostic real time fault functions are:-

PWR	ON	Internal/external supply status (indication that the module has power)
BUS	ON	Bus activity (indication that the bus is working correctly)
PURGE	ON	Output status, for the wash, purge, wiper heater, window heater (indication of auxiliary output status)
WASH	ON	
WINDOW	ON	
WIPER	ON	
BUSERR	ON	Bus command errors
ERR	FLASH 0.5/1.5 sec	PCB Overheat detection
ERR	FLASH 2.5/0.5 sec	Park switch not detected
ERR	FLASH 1.0/1.0 sec	Over current detection (on all outputs)
ERR	FLASH 0.5/0.5 sec	Short circuit detection (on all outputs)
PWR BUS	FLASH TOGETHER	Phase missing (3 phase systems)

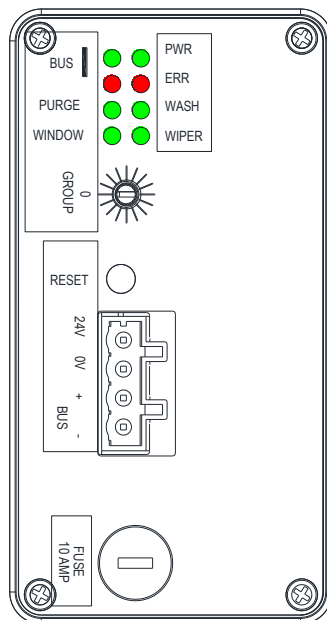

MODULE

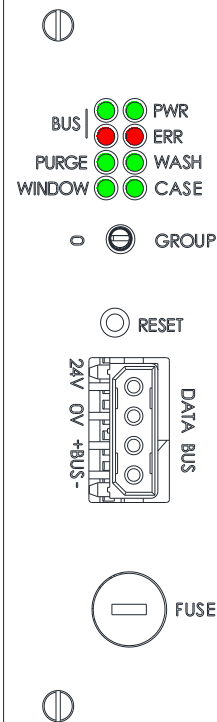

RACK

FRONT PANEL SHOWING DIAGNOSTIC LED'S

INSTALLING DEVICENET BUS CABLES

General Guidelines

Bus cables should ideally be installed in their own steel cable channels or conduits. Plastic trunking provides no screening whatsoever: it is just a cable tidy. Basket type cable trays also do not provide screening.

If not installed in conduit bus cables should be brightly coloured and installed where they are clearly visible and separate from all other cables in order to improve any interference pickup and to avoid accidental damage.

When installing, it is important not to distort or damage bus cables since this can cause reflections to occur in the network. ***In particular, do not twist or stretch bus cables, do not squash or crimp them and adhere to the recommended minimum bend radius*** (typically stranded cables: 45mm for a single bend and 65mm for repeated bending).

Bus cable selection

The bus cable must comply with the DeviceNet specification and the communication pair have a characteristic impedance of 120 Ohms. DeviceNet spec cables provide data & power combined.

The cable size is dependent on the distance between the first wiper module/rack unit and furthest keypad:-

Bus Length	Min Cable Size	
	Power	Data
Up to 100m	0.38 mm ² (22 AWG)	0.22mm ² (24 AWG)
Above 101m	1.5 mm ² (15 AWG)	0.96mm ² (18 AWG)

Suitable cables for bus systems up to 100m are:-

- a) Belden 3084A
- b) Leoni L45467-F16-W6
- c) SAB DN 656 Drop Cable Pt No 06562241
- d) LAPP Unitronic Bus DN Thin Y Pt No 2170 343
- e) LAPP Unitronic Bus DN Thin FRNC Pt No 2170 341


Suitable cables for bus systems over 101m are:-

- a) Belden 3082A
- b) Leoni L45467-F21-W6
- c) SAB DN 656 Trunk Cable Pt No 06562781
- d) LAPP Unitronic Bus DN Thick Y Pt No 2170 342
- e) LAPP Unitronic Bus DN Thick FRNC Pt No 2170 340

All factory and relevant approvals testing has been completed using Belden 3084A cable. This is our recommend cable to use.

Screening balanced cables

DEVICENET RS-485 transmission is balanced to improve noise rejection. Therefore we should earth the cable screen at both ends to ensure that it is effective at high frequencies. This is normally done by connecting the cable screen to the device earth via the connectors. However, we must make sure that the device is correctly earthed. Poor shielding or earthing is a very common wiring error.

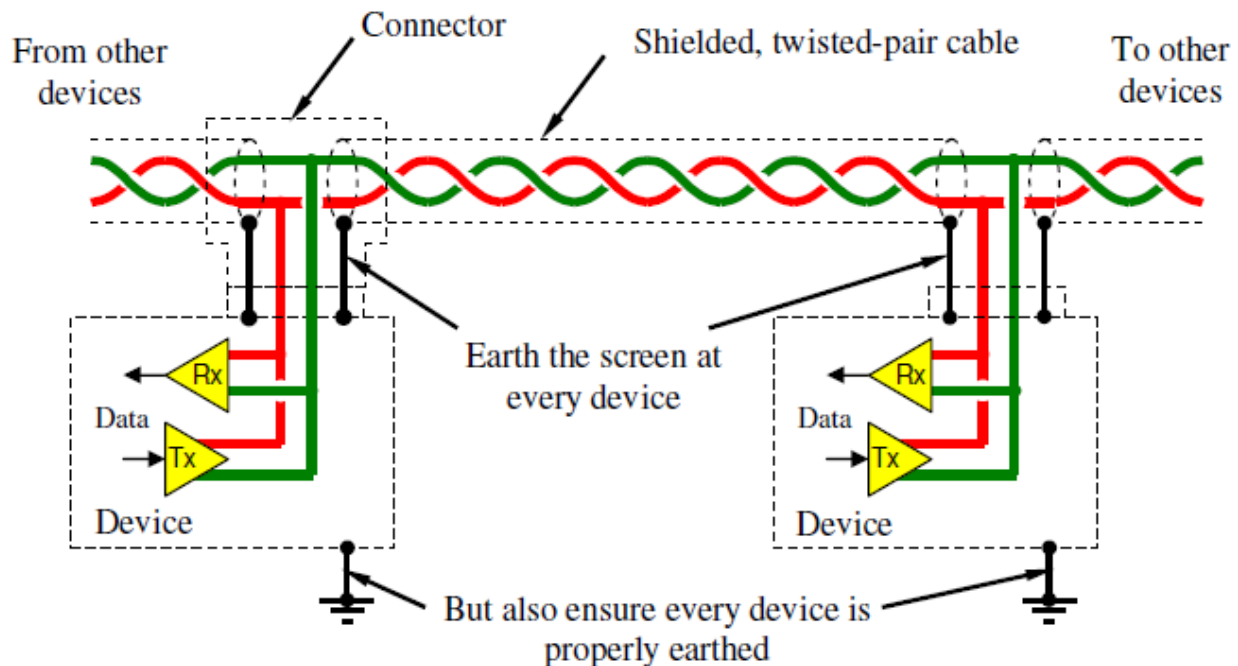

Cable Segregation

To reduce the chances of interference pickup, it is important that bus cables are run separately from other types of cable. It is useful to categorise various cable applications as follows:

Category I:

- Fieldbus and LAN cables (e.g. DeviceNet, Ethernet etc.).
- Shielded cables for digital data (e.g. printer, RS232 etc.).
- Shielded cables for low voltage ($\leq 25\text{V}$) analogue and digital signals.
- Low voltage power supply cables ($\leq 60\text{V}$).
- Coaxial signal cables

Category II:


- Cables carrying DC voltages $>60\text{V}$ and $\leq 400\text{V}$
- Cables carrying AC voltages $>25\text{V}$ and $\leq 400\text{V}$

Category III:

- Cables carrying DC or AC voltages $>400\text{V}$
- Cables with heavy currents.
- Motor/drive/inverter cables.
- Telephone cables (can have transients $>2000\text{V}$).

Category IV:

- Cables of categories I to III at risk from direct lightning strikes (e.g. connections between components in different buildings)

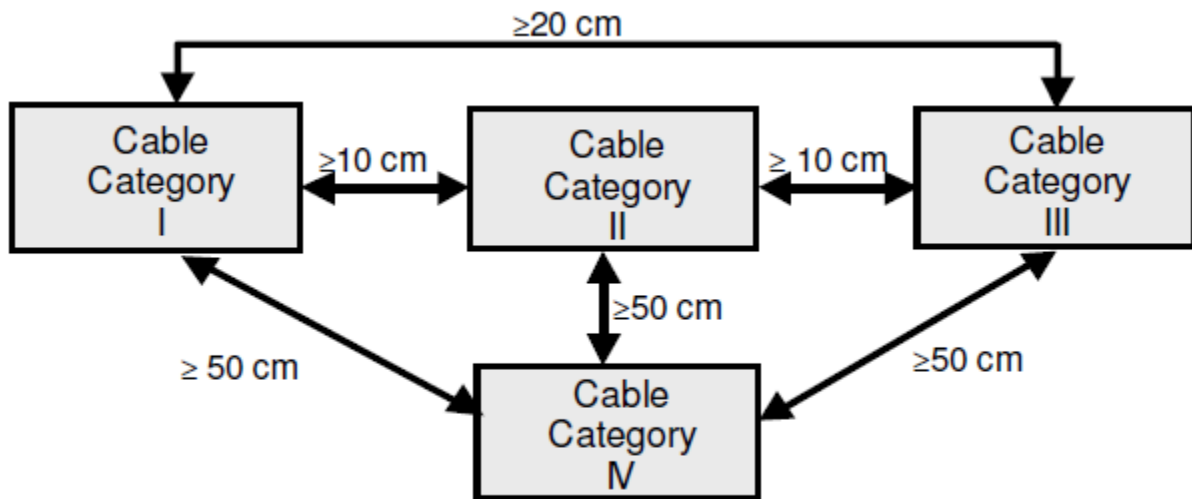


Separation distances for cables of different category

Sometimes it is impossible to adhere to the separation distances. Where cables have to cross, they should cross at right angles and should never run in parallel even for short distances.

Use of cable trays and channels

Cables from the same category can be bundled together or laid directly beside each other in the same cable trays. Cables of different category must be separated by at least the distances shown.

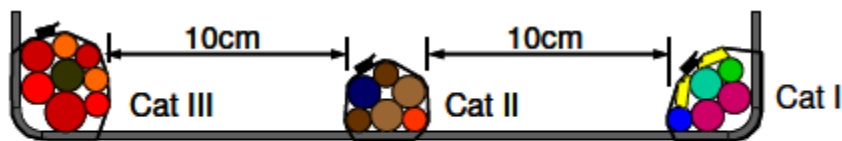

Cables mounted on a cable tray, rack or ladder must be separated by the recommended clearances

Common RS-485 wiring errors


It is common to find simple RS-485 wiring and layout errors in the field. The most frequently occurring errors are described below:

1. Termination problems:
 - a. Lack of bus terminations (6000-TR120) at the end of the bus.
2. Pickup and interference caused by:
 - a. Laying bus cables too close to electrically noisy power cables or equipment.
 - b. Lack of proper earthing of the cable screen at every device.
3. Wiring problems:
 - a. Wrong cable used.
 - b. Damaged cable (including squashed, over-bent)
 - c. Swapped cores at a device
 - d. Un-earthed screen (not connected at every device, un-earthed devices etc.)

TYPICAL BRIDGE LAYOUT

THIS DRAWING SHOWS THE LOGICAL LAYOUT OF THE GROUP CONTROLS.

IT IS NOT A WIRING DIAGRAM.

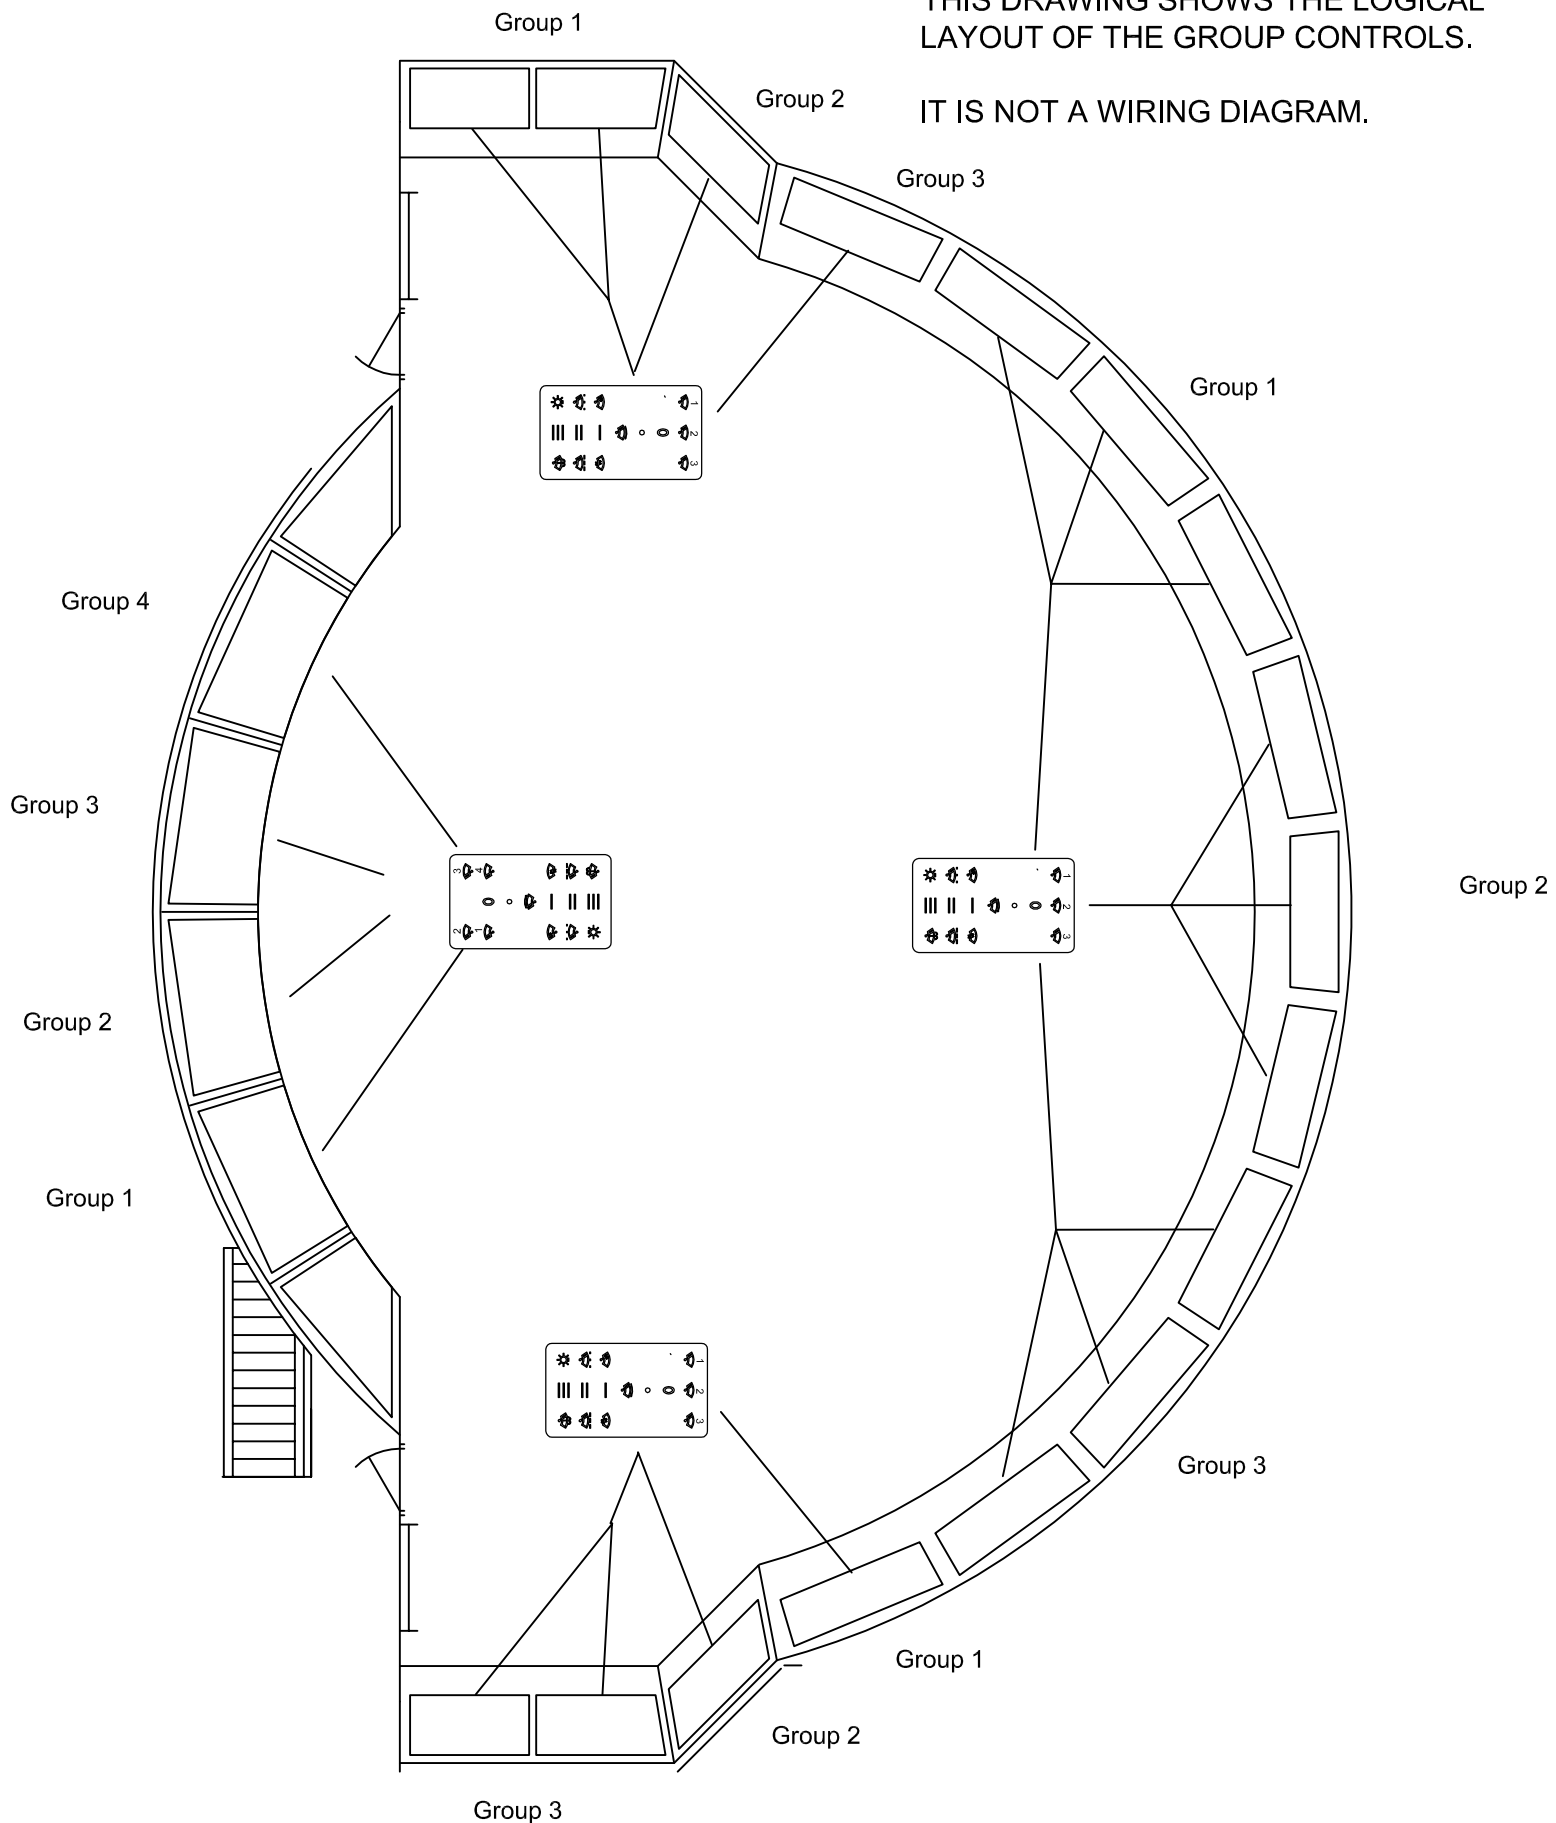

INSTALLATION OF SHIELDED TWISTED PAIR CABLE

Belden DeviceBus ® for ODVA DeviceNet



- 300V Class 2 Thin
- 22 and 24 AWG Stranded Tinned Copper
- 100% individually foil shielded + overall 65% TC Braid
- Drain Wire
- PVC Insulation (Power)
- FPE Insulation (data)
- Lt Gray sunlight / oil resistant PVC jacket
- Thin 75°C
- **Conductor (stranding) Diameter Nom. DCR** - (2) 22 AWG TC (154 x 44) 17.5 Ω / M', 57.4 Ω /km
- **Conductor (stranding) Diameter Nom. DCR** - (2) 24 AWG TC (105 x 44) 28.0 Ω / M', 91.9 Ω /km, Nom. Characteristic Impedance 120 Ω , Nom. Capacitance Conductor to Conductor 12 pF/ft
- **Shielding materials Nom. DCR** - 100% individual foil + overall 65% TC braid 3.2 Ω / M', 10.5 Ω /km
- **Nominal OD** - 0.28", 7.11mm

This guide is based on the use of Belden 3084A cable (or similar, see specification above).

The cable is made up of a 22AWG power pair (red/black) and a 24AWG data pair (blue/white), each pair is individually foil screened with a drain wire, and an overall shielding braid.

For installation in a Wynn 8000 Series Network Control System, the screen needs to be terminated at both ends of each piece of bus cable.

Poor Screening = Poor reliability


Both end of the cable should be prepared as follows:-

1. Strip the outer insulation back 50mm.




2. Carefully peel back the braid and trim back to insulation.


Do not cut drain wire.

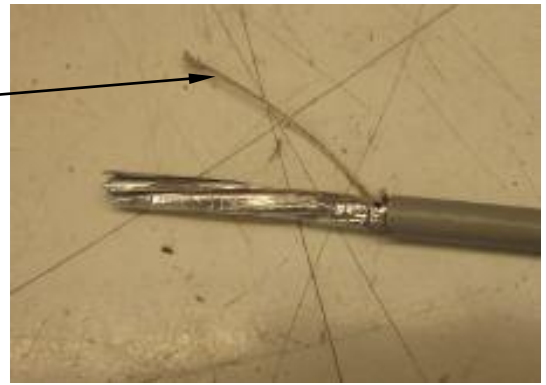


3. Remove the foil insulation leaving 5mm showing.

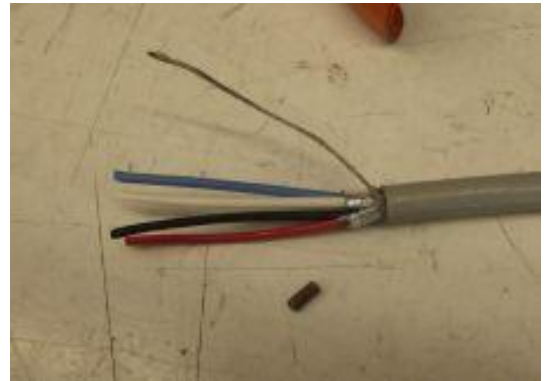

4. Untwist each pair and strip back insulation on each conductor 5mm and twist strands together.

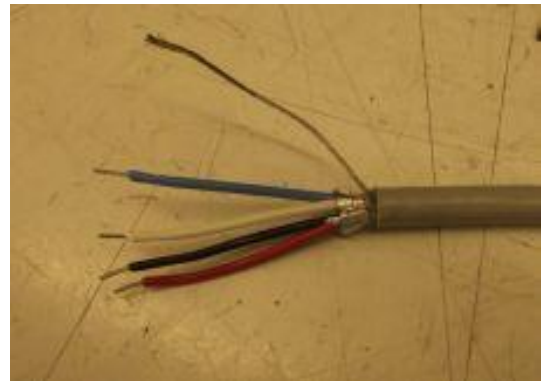

5. Secure the braid/drain wire together with the 0V conductor - Black in the bus plug. This connection is electrically bonded to the Earth pin on the mains connection plug.

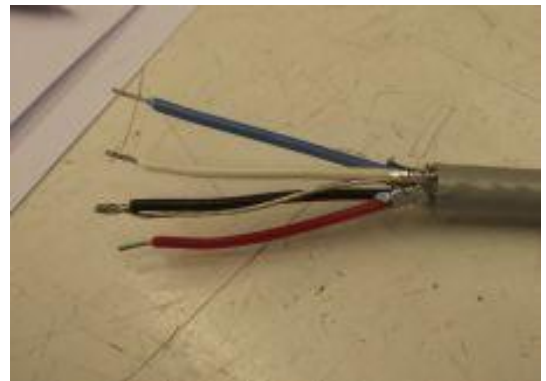

6. Connect the conductors to the keypad 4 way bus connector as follows:

Bus Connection	Colour
24V Power	Red
0V Power	Black
Bus +	Blue
Bus -	White



7. Connect termination resistor (6000-TR120) to Bus+ & Bus- connections. (First Keypad Only)



8. Connect the conductors to the module 4 way bus connector as follows:

Bus Connection	Colour
24V Power	Red
0V Power	Black
Bus +	Blue
Bus -	White




9. Connect termination resistor (6000-TR120) to Bus+ & Bus- connections. (Last module only)



8500 KEYPAD


Technical specifications

Input supply	24VDC – From Bus
Maximum number of groups	9
Number of Auxiliary controls	4
IP rating	IP66
Technology	Capacitive Touchpad
Communications	RS485/(USB – Service only)
Illumination	3 colour LED – Fully dimmable

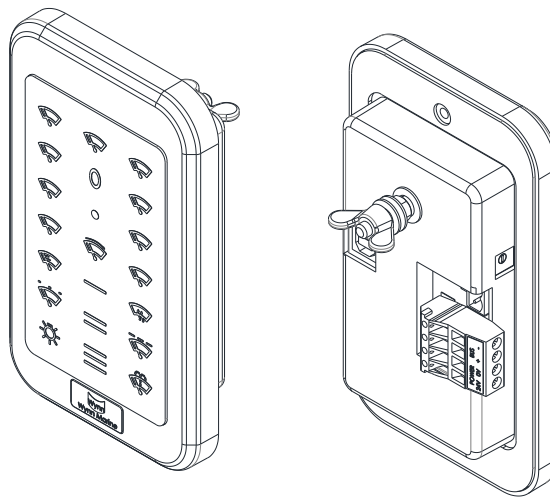

Keypad Dimensions

The overall keypad and clip-on cover dimensions are shown in the diagram below.

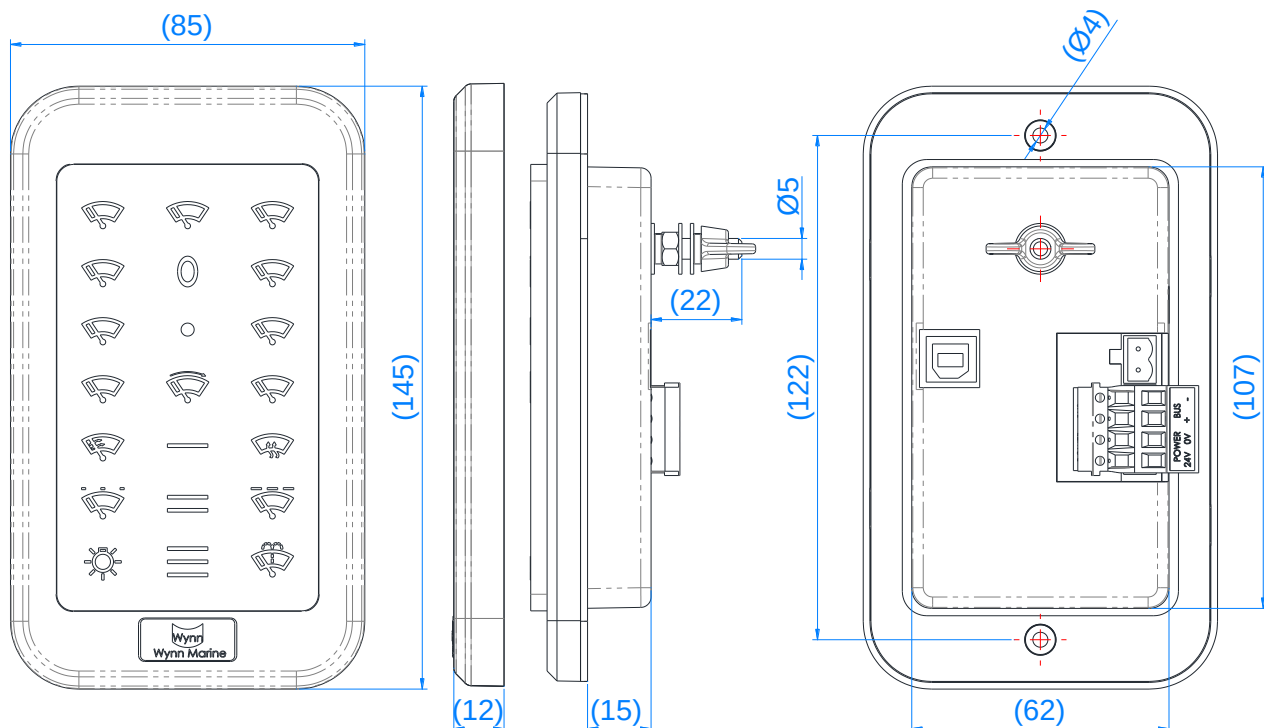

The 8500 keypad must be panel mounted, but can be in any plane it is important to ensure access can be gained to the rear connectors.

The 2-way and 4-way connectors are mounted on the rear of the keypad enclosure accept a Phoenix Contact style plug with screw terminals.

The 2-way connector is for remote interface operation (future option) and the 4-way connector for the bus connection.

A 16 position rotary switch is fitted to allow Keypad to be configured as Master or Slave. The keypads have been preconfigured at the factory.

An earth terminal is fitted for connection to local earth.

A USB connector is fitted; this is for Service Personnel access only.

There are no adjustable or user-serviceable parts within the keypad.



WARNING!

The Keypad module is a low voltage (24V DC) module – It has been designed to withstand bus wiring errors without damage but any voltage over 40V dc applied to the unit will destroy it and will void any warranty.

Installation procedures must be carried out with care, to ensure correct and safe operation. If you are in any doubt, consult qualified and competent engineering personnel, or consult Wynn Marine technical support (contact details on front and rear cover of this document).

A Termination resistor (6000-TR120) must be connected to the first keypad in the bus line only. *(Supplied with keypad)* On multiple keypad systems all other keypads are connected directly onto the bus without the termination resistor.

A Termination resistor (6000-TR120) *(Supplied with keypad)* must be connected to the last module on the bus.

Only connect the devices to the bus, power and outputs when you are sure the wiring is correct. Connect the plug firmly. Make all connections with the power off.

INSTALLATION INSTRUCTIONS

IMPORTANT

Installation procedures must be carried out with care, to ensure correct and safe operation. If you are in any doubt, consult qualified and competent engineering personnel, or consult Wynn Marine technical support (contact details on front and rear cover of this document).

A Master keypad sends wiper commands directly to the wiper control modules.

A Slave keypad sends button press commands to the Master keypad.


In a single keypad control system the keypad must be set to Master. If the keypad is set to Slave it cannot control the wipers.

In a multiple keypad control system one keypad only must be set to Master, the remainder to a different Slave number. This is so the Master keypad can identify which slave keypad sent the button press commands.


Ref Figure – Panel Cut-Out Requirements

1. Provide a cut out in console for keypad according to dimensions.


Panel Cut-Out Requirements

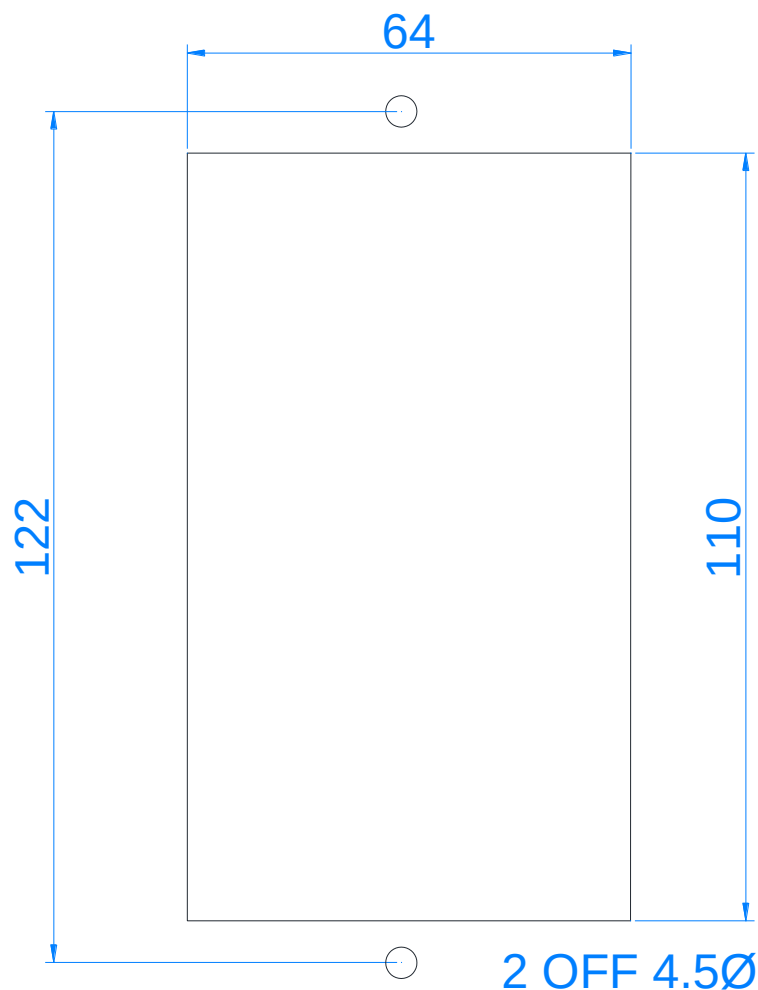

- For a single keypad system ensure that the Master/Slave Rotary Switch is set to 1. For multiple keypad systems ensure that the Master/Slave Rotary Switch is set to a different position (2 to F, maximum 14 slaves).

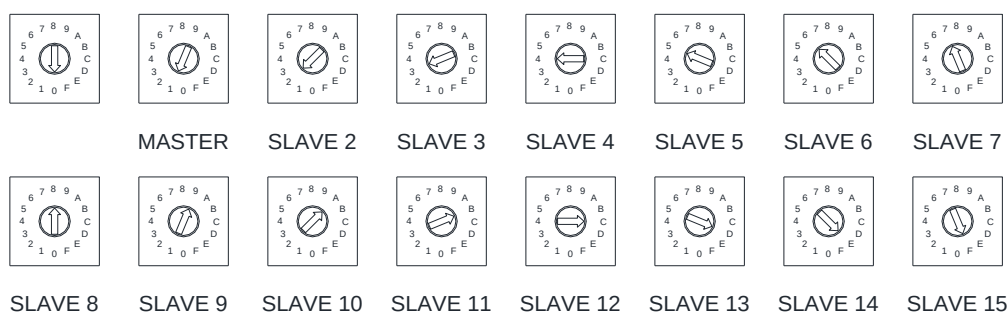

Connection Details

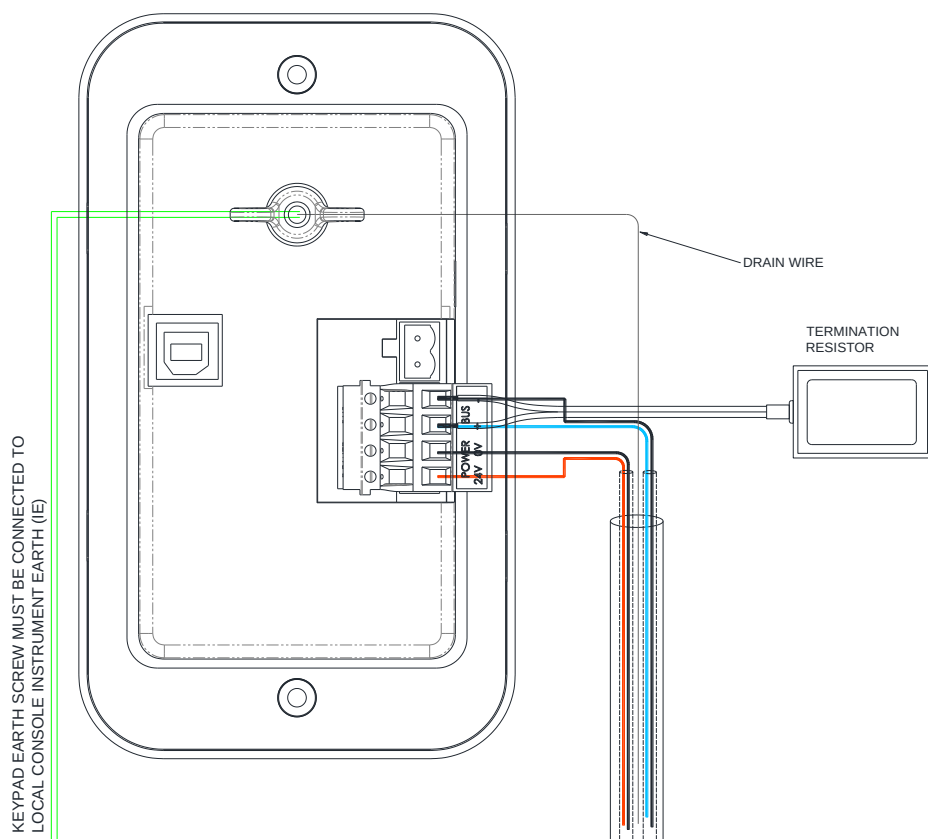

Ref Figure – Connection Details

- Connect termination resistor and bus cable to 4-way connector, ensure the bus cable drain wire is connected to 0V.
In accordance to wiring diagram.
- Fit connector into keypad. (Ref notes above).
- Connect Keypad Earth Screw to console instrument earth. (Instrument earth is a separate earth point a minimum 3m away from 230v supply earth point.)
In accordance to wiring diagram.
- Remove front clip-on cover, fit keypad into opening and secure keypad to panel with suitable M4 fixings. **(Not supplied)**
- Refit clip-on cover with Wynn logo at bottom.


8500 KEYPAD OPERATION

The 8500 Keypad is a component part of the Wynn Marine 8000 Series wiper control devices.

User Operational Description

This section describes end-user operation of the 8500 Keypad in normal usage.

The diagram below shows a typical 8500 6 way Keypad layout and the names given to the keys.

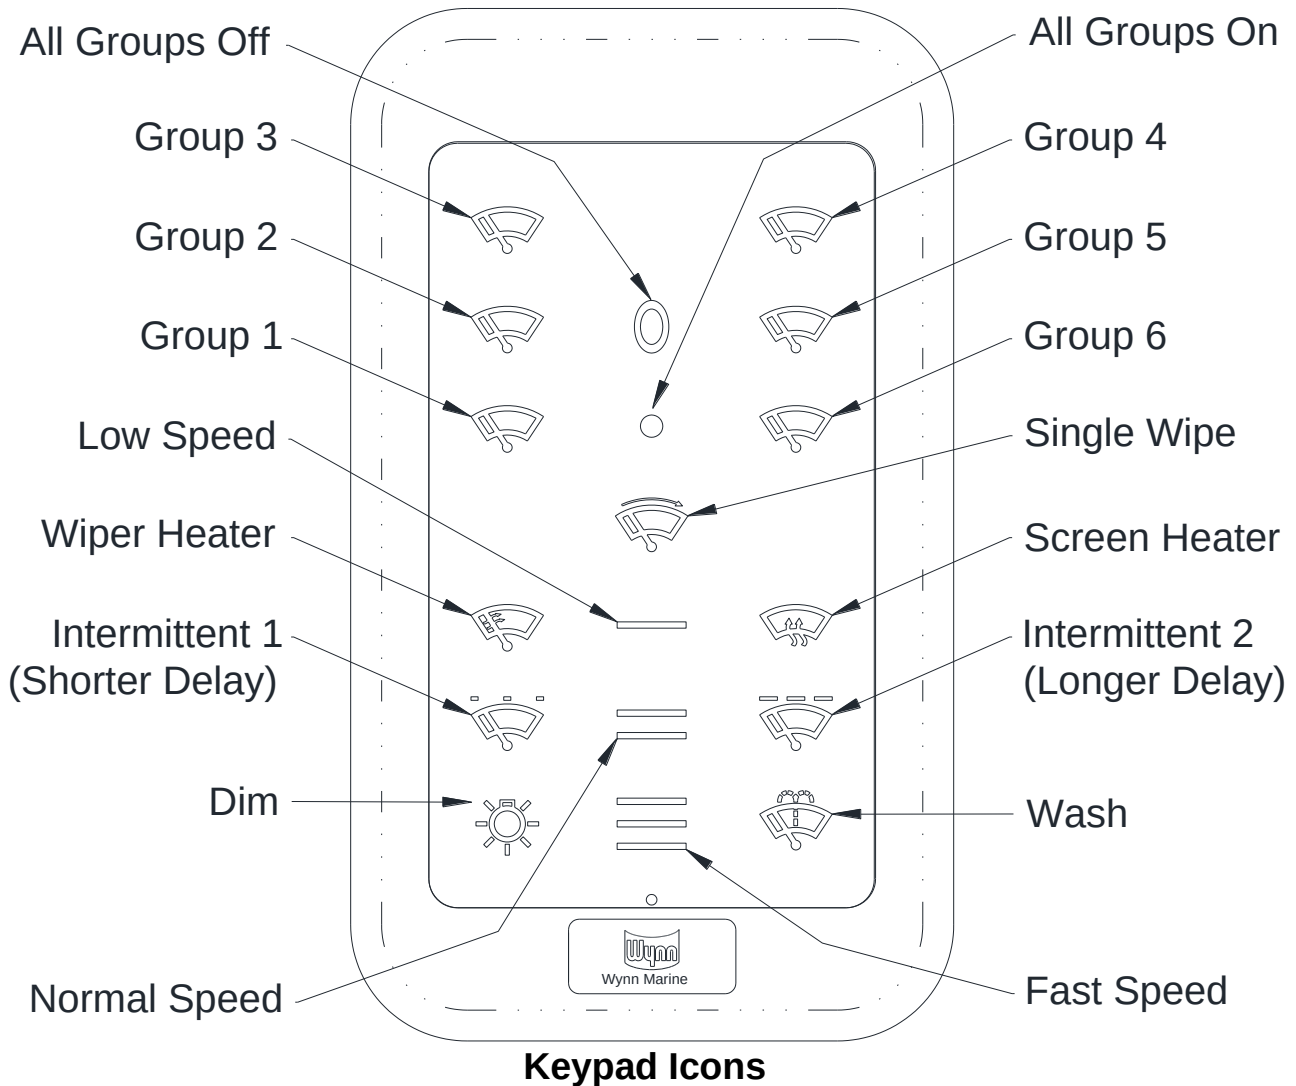

On power being supplied to the keypad, all icons will turn **GREEN** to show availability. When in operation, icons will turn **AMBER** to show those in use.

Systems with Multiple keypads.

Keypads should be supplied pre-configured as Master or Slave. In a multiple keypad system there can only be one Master Keypad, all other must be set as Slaves, each with a different address.

If more than one Keypad is fitted in the bus see paragraph 2 in installation instructions for correct setting of Master/Slave rotary switch.

Description and Operation of Keypad

Icon	Description	Operation
	Individual Wiper Group	Press - turns group on in normal speed. Group icon turns AMBER Press - while running, turns group off. AMBER light turns GREEN
	All Wiper Groups - Turn Off	Press - while running turns all groups off. AMBER lights turns GREEN
	All Wiper Groups - Turn On	Press - turns all groups on in normal speed. Group icons turns AMBER
	Single wipe	Press - turns all groups on for single wipe in normal speed (does not affect any group already wiping)
	Low Speed	Press - followed by group icon or all group icon turns group(s) on in low speed or to low speed if in any other setting Icon will turn AMBER whilst icons pressed Group icon(s) turn AMBER Press - while running, turns group icon(s) off. AMBER light turns GREEN
	Normal Speed	Press - followed by group icon or all group icon turns group(s) on in normal speed or to normal speed if in any other setting Icon will turn AMBER whilst icons pressed Group icon(s) turn AMBER Press - while running, turns group icon(s) off. AMBER light turns GREEN
	High Speed	Press - followed by group icon or all group icon turns group(s) on in high speed or to high speed if in any other setting Icon will turn AMBER whilst icons pressed Group icon(s) turn AMBER Press - while running, turns group icon(s) off. AMBER light turns GREEN
	Heated Wiper	Press - turns all heated wipers on. Heated Wipers = heated unit and/or heated arm and/or heated wash jet) Heated wiper icon turns AMBER Press - while on, turns all heated wipers off. AMBER light turns GREEN
	Heated Screen	Press - turns on all heated screens. Heated wiper icon turns AMBER Press - while on, turns all heated screens off. AMBER light turns GREEN
	Intermittent 1 (Shorter Delay)	Press - followed by group icon or all group icon turns group(s) on in/to intermittent wipe- short delay (Default - 8 second interval between wipes) Icon turns AMBER and group icon(s) turn AMBER Press - while running, turns intermittent wipe off. AMBER light turns GREEN
	Intermittent 2 (Longer Delay)	Press - followed by group icon or all group icon turns group(s) on in/to intermittent wipe- long delay (Default - 12 second interval between wipes) Icon turns AMBER and group icon(s) turn AMBER Press - while running, turns intermittent wipe off. AMBER light turns GREEN
	Dim	Press - repeatedly to cycle through from maximum brightness to off, then back to maximum brightness. Stop pressing icon at required brightness
	Wash	Press - followed by group icon or all group icon starts wash cycle Wash icon turns AMBER and group icon(s) turn AMBER Press - while in cycle terminates wash cycle. AMBER light turns GREEN On installations with air-purge, purge will be activated as part of wash cycle.

Default timings for wash cycle

Water is sprayed onto screen for 10 seconds. Wiper starts five seconds after **group icon** or **all group icon** is pressed and wipes for a period of fifteen seconds.

If Air-purge fitted

After completion of water spray period, air purge is activated for five seconds. Wiper continues for a period after end of air purge.

8500 KEYPAD USER-PROGRAMMING

Introduction

The 8000 system features a user-programmable set-up mode, which enables the end-user to programme the system to their requirements. In Set-up mode, the user can:

- Programme the wiper intermittent periods
- Programme the wash cycle timing (wash period and optional air purge period).
- Set all groups or individual-group wash cycle timings (multi-way systems only).
- Restore default wiper intermittent rates and wash cycle timings.

The following sections describe how to enter and exit set-up mode, and how to programme the system to the user's requirements.

Entering and Exiting User Set-Up Mode

NOTE

On power up, the 8500 keypad will operate normally.

	USER KEY-SEQUENCE	LED INDICATION	RESULTING ACTION
First Step	DIM  & WIPER OFF 	DIM LIGHT FLASHES AMBER/OFF	Enter user set up mode.
Programmable Steps as Required	<i>With reference to the following charts for setting Intermittent Periods; All Groups or Individual-Group Wash Cycle Timings; Wash/Air Purge with Extended Wipe; and restoration of Factory Default:</i>		
Last Step	DIM  & WIPER OFF 	DIM LIGHT GREEN	User set up mode exited.

IMPORTANT

The system will not exit set-up mode if programming of intermittent periods or wash cycle is not complete. User must complete programming before system will allow itself to return to the normal operating mode.

Programming the Intermittent Periods

The default intermittent rates are 8 and 12 seconds for intermittent keys INTERMITTENT 1 and INTERMITTENT 2 respectively.

To Programme a new Wiper Intermittent Period

	USER KEY-SEQUENCE	LED INDICATION	RESULTING ACTION
Step 1	DIM ☀️ & WIPER OFF 0	DIM LIGHT FLASHES AMBER/OFF	Enter user set up mode.
Step 2	INTERMITTENT 🚦 or 🚦	CORRESPONDING LIGHT FLASHES YELLOW/GREEN	All groups will perform a single wipe.
	Wait until next wipe is required - (time from first wipe to second wipe is stored)		
Step 3	INTERMITTENT 🚦 or 🚦	CORRESPONDING LIGHT GREEN	All groups will perform a single wipe at new time.
Step 4	DIM ☀️ & WIPER OFF 0	DIM LIGHT GREEN	User set up mode exited.

NOTE

Settings are stored in the non-volatile memory of the system. They are retained even if the power is removed from the system. Previous intermittent rates are overwritten.


Maximum period for any intermittent parameter is fifty seconds. If user does not press INTERMITTENT key for a second time within fifty seconds, the programming is aborted and no change is made to the settings.

Wash Cycle Timings

A wash cycle comprises of a screen wash followed by an air-purge (if present in the system). Optionally the wiper will start after a delay and continue wiping during the remaining wash and air-purge.

The default wash cycle timings are as follows:

- Inclusive Wash [On]
- Wash time [10 seconds]
- Air purge time [5 seconds] (Starts after wash finishes)
- Wipe with Wash [On]
- Wipe delay [5 seconds] (Starts 5 seconds after wash starts)
- Wipe hold time [15 seconds] (Finishes after wash and purge finish)

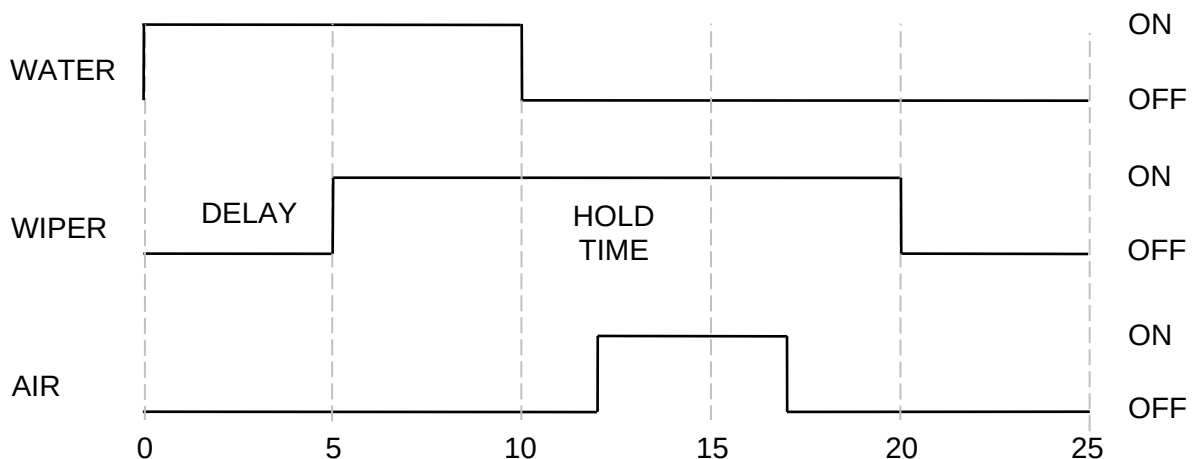

Programming the Wash Cycle Timings

A group can be programmed so that its wash cycle timings are determined by *all-inclusive* wash cycle timings, which operate on all groups, or by *individual* wash cycle timings which operate on a single group only.

By default, the wash timings of groups are determined by *all-inclusive* wash cycle timings.

NOTE

Settings are stored in the non-volatile memory of the system. They are retained even if the power is removed from the system. Previous wash cycle periods are overwritten.

Maximum period for any wash cycle parameter is five minutes. If user does not press an APPROPRIATE KEY within the five minute period, the programming is aborted and no change is made to the settings.

To Programme a Wash/Air Purge with Extended Wipe Cycle

	USER KEY-SEQUENCE	LED INDICATION	RESULTING ACTION
Step 1	DIM  & WIPER OFF 	DIM LIGHT FLASHES AMBER/OFF	Enter user set up mode.
Step 2	WASH 	WASH LIGHT FLASHES AMBER/OFF	
Step 3	GROUP  or	GROUP LIGHT AMBER WASH LIGHT FLASH YELLOW/GREEN	Wash ON
Step 3	ALL GROUPS  (Ref Note 1)	ALL GROUP LIGHTS AMBER WASH LIGHT FLASH YELLOW/GREEN	Wash ON
	<i>Wait until enough water is on the screen</i>		
Step 4	SINGLE WIPE  (Ref Note 2)	SINGLE WIPE LIGHT AMBER	Wiper ON
	<i>Wait until wiper has cleaned screen</i>		
Step 5	WASH 	WASH LIGHT FLASH YELLOW/GREEN	Wash OFF, [Purge ON]
	<i>Wait until enough air has cleared water from the wash jets</i>		
Step 6	WASH 	WASH LIGHT FLASH AMBER/OFF	[Purge OFF]
	<i>Wait until wiper has cleaned remaining water from screen</i>		
Step 7	WIPER OFF 	WASH & SINGLE WIPE LIGHTS OFF	Wipe OFF. Wash-on, Purge-on, Wipe delay, and Wipe- hold times are SAVED
Step 8	DIM  & WIPER OFF 	DIM LIGHT GREEN	User set up mode exited.

NOTE 1

ALL GROUPS  key is pressed only on multi-way keypads.

NOTE 2

SINGLE WIPE  key starts the wipers which will remain ON until the WIPER OFF  key is pressed (step 7). Its behaviour differs from that in normal operating mode.

Restoring Default Intermittent Wipe and Wash Cycle Timings

The user may restore the default settings for intermittent wipe periods and wash cycle timings.

To restore default settings

	USER KEY-SEQUENCE	LED INDICATION	RESULTING ACTION
Step 1	DIM  & WIPER OFF 	DIM LIGHT FLASH	Enter user set up mode.
Step 2	HIGH SPEED 	No further indications are given	
Step 3	SINGLE WIPE 	No further indications are given	
Step 4	HIGH SPEED 	No further indications are given	
Step 5	SINGLE WIPE 	No further indications are given	
Step 6	HIGH SPEED 	DIM LIGHT, HIGH SPEED LIGHT AND SINGLE WIPE LIGHT FLASH TOGETHER FOR 5 SECONDS	Default settings restored

IMPORTANT


If wash cycle and/or intermittent periods have been previously set to customised values, this command will override the customised settings which will be permanently lost.

8200 MODULE

Technical specifications

Input supply	115 or 230 Vac 1Ph/3Ph 50/60Hz
Maximum Input Current	15A
Total Auxiliary Output Load	10A

Module Dimensions

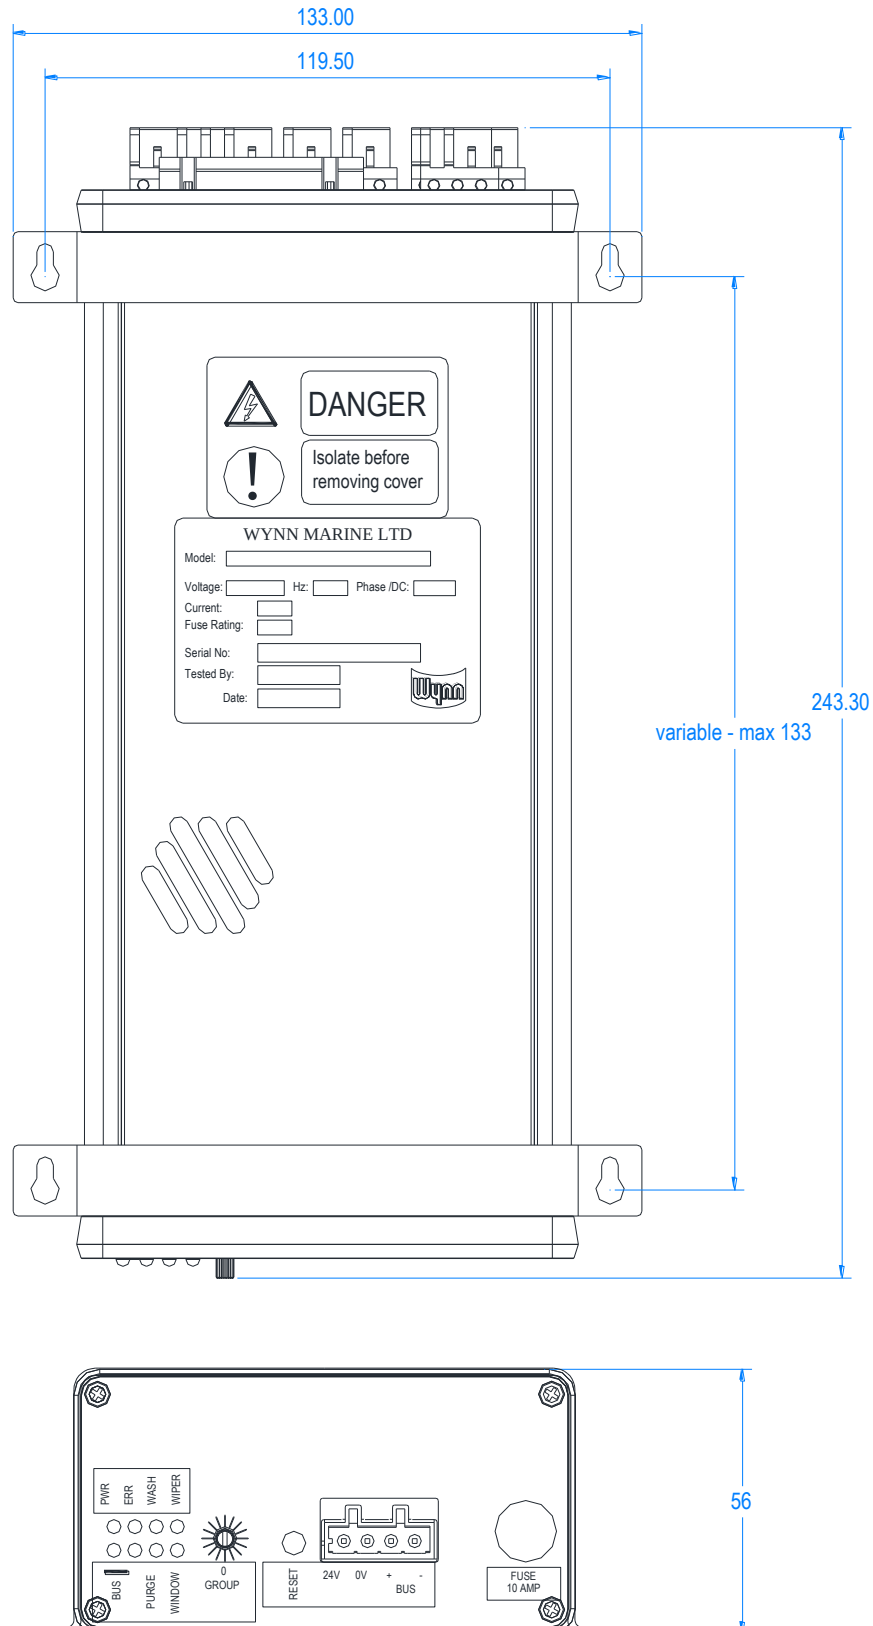

INSTALLATION INSTRUCTIONS

IMPORTANT


Wiper modules should be mounted in accordance with recommendations in IEC60945 sect 4.7.1. Care should be taken to install the units in line with the unit labelling and bridge layout drawings.

The module is supplied with the connector plugs fitted to the module sockets. The plugs can be removed for ease of installation.

A cable insertion tool is supplied for use with the single height connectors.



Rear Panel Connections

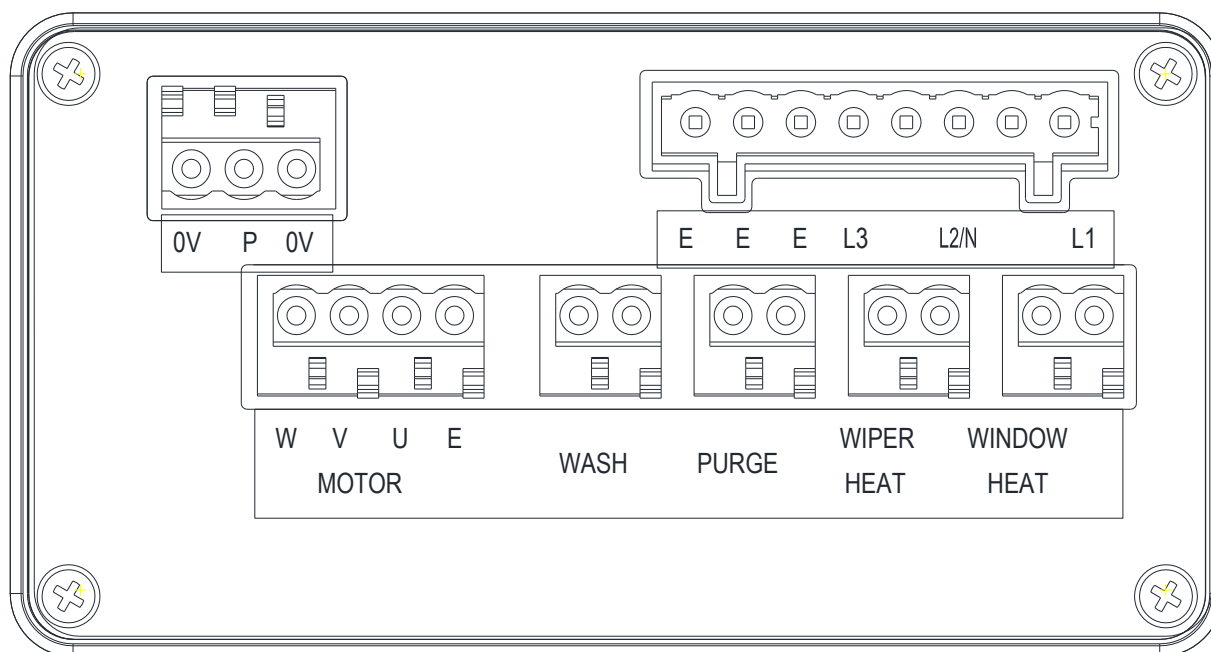

If junction boxes and shipyard supplied cables are used to extend the supplied cables, separate shielded cables must be used for wiper motor/heater/earth (6 or 7 core cable) and park switch (2 core cable).

The cable screen for wiper motor/heater/earth cable must be connected to ships earth at both ends of the cable.

The cable screen for park switch cable must be connected to instrument earth at rack/cabinet end of the cable only. (Instrument earth is a separate earth point a minimum 3m away from 230v supply earth point.)

Choose a location for motor control module so that it is within range of motor cable, wiper heat/arm heater cable and park switch cable.

1. Mount modules with fixing clamps provided.

Enough space must be left between and around the modules for cooling air and to allow room for cables and plugs at both ends of the module.

2. Connect motor cable to 4-way motor connector. *(Supplied in module socket)* In accordance with the wiring diagram.



3. Connect park switch cable to 3-way connector. *(Supplied in module socket)* In accordance with the wiring diagram.



4. *If required* - connect wiper heat cabling to 2-way connector. *(Supplied in module socket)* In accordance with the wiring diagram.




5. *If required* - connect window heat cabling to 2-way connector. *(Supplied in module socket)* In accordance with the wiring diagram.



6. *If required* - connect wash cabling to 2-way connector. *(Supplied in module socket)* In accordance with the wiring diagram.



7. **If required** - connect purge cabling to 2-way connector. (*Supplied in module socket*) In accordance with the wiring diagram.

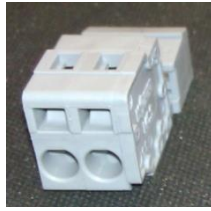


NOTE

The 8-way connector is double height to allow for continuous linking between the modules. In three phase systems the phases should be rotated between modules to balance the load.

8. Connect the power cable to 8-way connector (*Supplied in module socket*) in accordance with the wiring diagram.



Front Panel Connections

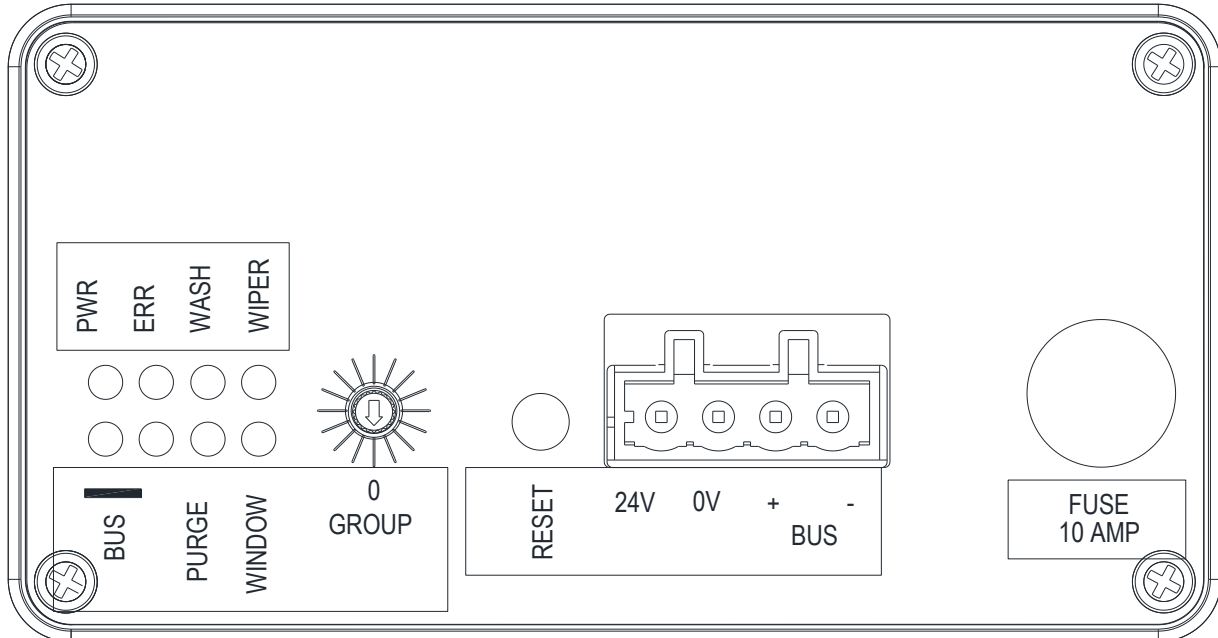


RS 485/CAN bus must be wired as one continuous bus without splitting of wiring.
The 4-way connector is double height to allow for continuous linking between the modules.

9. Connect bus cable to 4-way connector (*Supplied in module socket*) In accordance with the wiring diagram.



10. The terminating resistor module must be connected to the last module in the chain in accordance with the wiring diagram.
11. Ensure/set the Group Switch to the correct Group (see group switch drawing).
12. To change group, using a small screwdriver rotate the group switch one position to the right to go up one group, rotate the group switch one position to the left to go down one group. If the module is power up, press the reset button.


Group Switch

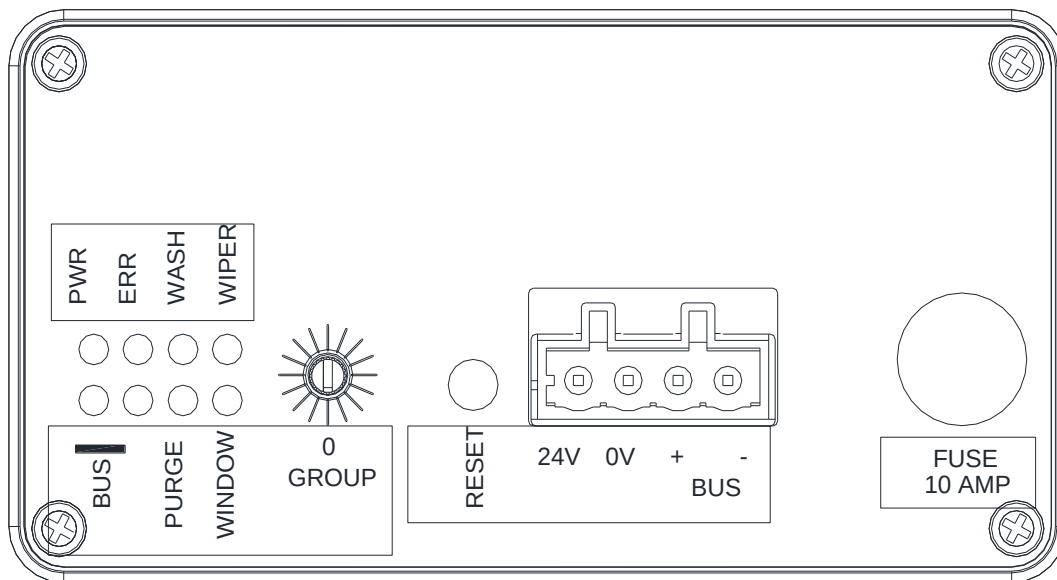


GROUP 1




GROUP 2




GROUP 3




GROUP 4




GROUP 5




GROUP 6



GROUP 7



GROUP 8

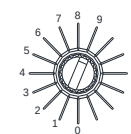


GROUP 9

Module Spares List

	Item No	Item Description	Qty Per Module
1	SP8200-PCB	SPARE 8200 MODULE PCB & COOLING	1
2	A-ELEC-267	FUSE ANTISURGE 10A	1
	10186900	WAGO CABLE INSERTION TOOL	1
	10186800	WAGO 231-602 AUXILIARY MALE CONN 2P	4
	10186710	WAGO 231-604 MOTOR MALE 4 WAY CONNECTOR	1
	10186400	WAGO 721-2104 BUS FEMALE 4P	1
	10186600	WAGO 231-603 PARK MALE 3P	1
	10186500	WAGO 721-2108 FEMALE 8P NO CODING PINS	1
	10186000	8000 MOUNTING STRAP	2

Module Spare Parts Drawing

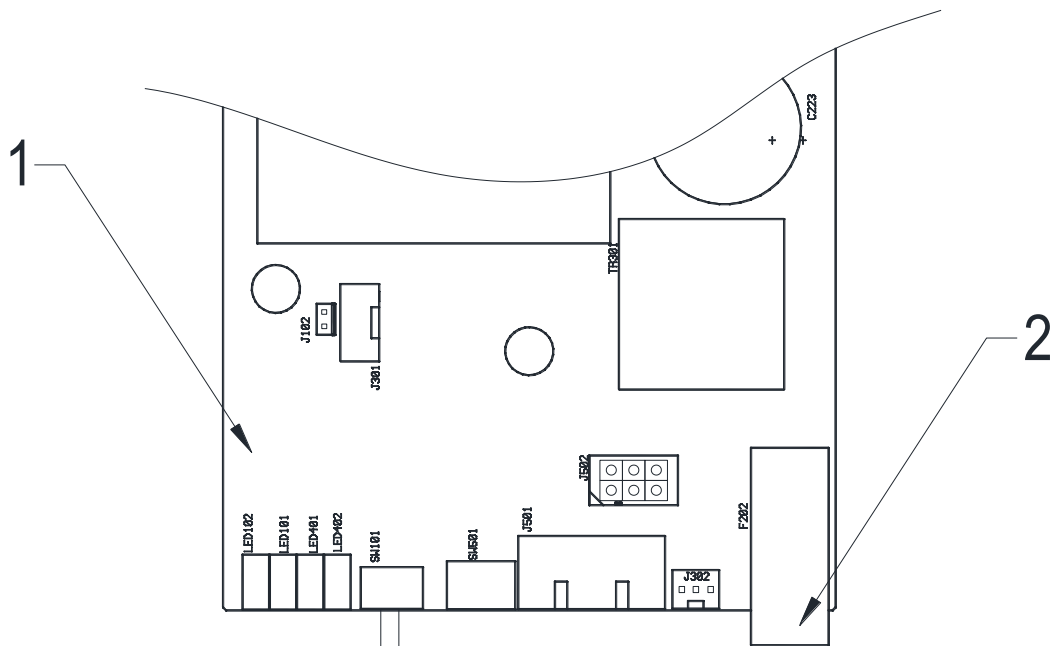

Module PCB Replacement



WARNING: Ensure that all power is disconnected whilst working on the controller.



WARNING: Shock Hazard. Board contains capacitors that may still be charged.

1. Switch off the mains power to the module.
2. Disconnect the main input, motor, park switch and any auxiliary plugs from the rear of the module.
3. Disconnect the bus plug from the front panel.
4. Loosen the 2 x module fixing clamps and remove the module.
5. Remove the 4 x screws securing the module front cover plate, and remove the cover plate and plastic surround.
6. Slide the module bottom cover out of the case.
7. Remove the PCB. Note the setting of the group switch.




8. Rotate the group switch of the replacement PCB to the same number as noted above.
9. Slide the new PCB into the module case ensuring PCB is fitted into the correct PCB guides in the case and the PCB is fully pushed into the connector at the rear of the module case.
10. Refit the module bottom cover.
11. Refit the front cover plate and plastic surround, secure with the 4 x screws.

12. Refit the module and secure in place with the 2 x module fixing clamps.
13. Refit the 4 way bus plugs to the front of the module.
14. Reconnect the motor, park switch, auxiliary and mains input plugs to the rear of the module.
The 8200 module is now ready for use.
15. Switch on the mains power.

1 2 3 4 5 6 7 8

1. JUNCTION BOX IS OPTIONAL. SEPARATE MOTOR/HEATER AND PARK SWITCH CABLES MUST BE USED.
2. MOTOR/HEATER CABLE OUTER COPPER BRAID MUST BE CONNECTED TO EARTH AT ALL POINTS, I.E. INTO AND OUT OF JUNCTION BOX, AND AT THE MODULE.
3. PARK SWITCH CABLE OUTER COPPER BRAID MUST BE CONNECTED TO INSTRUMENT EARTH AT JUNCTION BOX INPUT AND MODULE ENDS ONLY.
4. INSTRUMENT EARTH IS A SEPARATE EARTH POINT A MINIMUM 3M AWAY FROM 230V SUPPLY EARTH POINT.

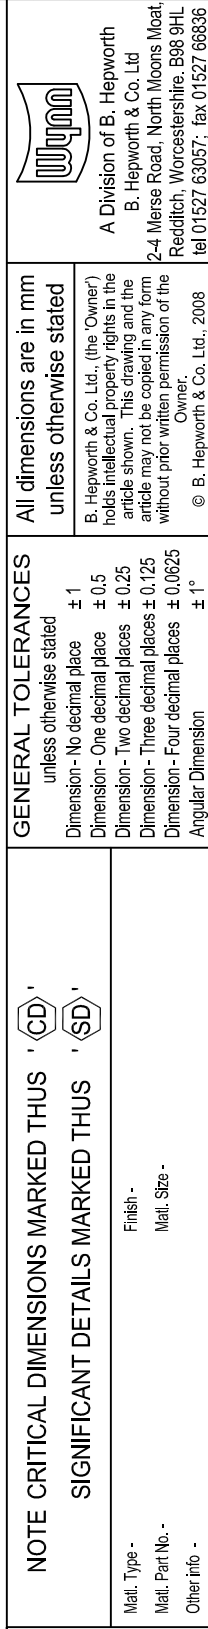


Date	Drawn by	Approved by	Drawing Log No.
30/09/13	APG		
ELECTRICAL SCHEMATIC			
8200 MODULE TO 'C' TYPE WIPER			
ISSUE			No.
828\$RX-EL-TYPE C			C

8219 19" RACK INSTALLATION

Technical specifications

Input supply	115 or 230 Vac 1Ph/3Ph 50/60Hz
Maximum Input Current	15A – Per controller card
Total Auxiliary Output Load	10A – Per controller card
Module Height	3U
Max number of cards per rack	8

Module Dimensions

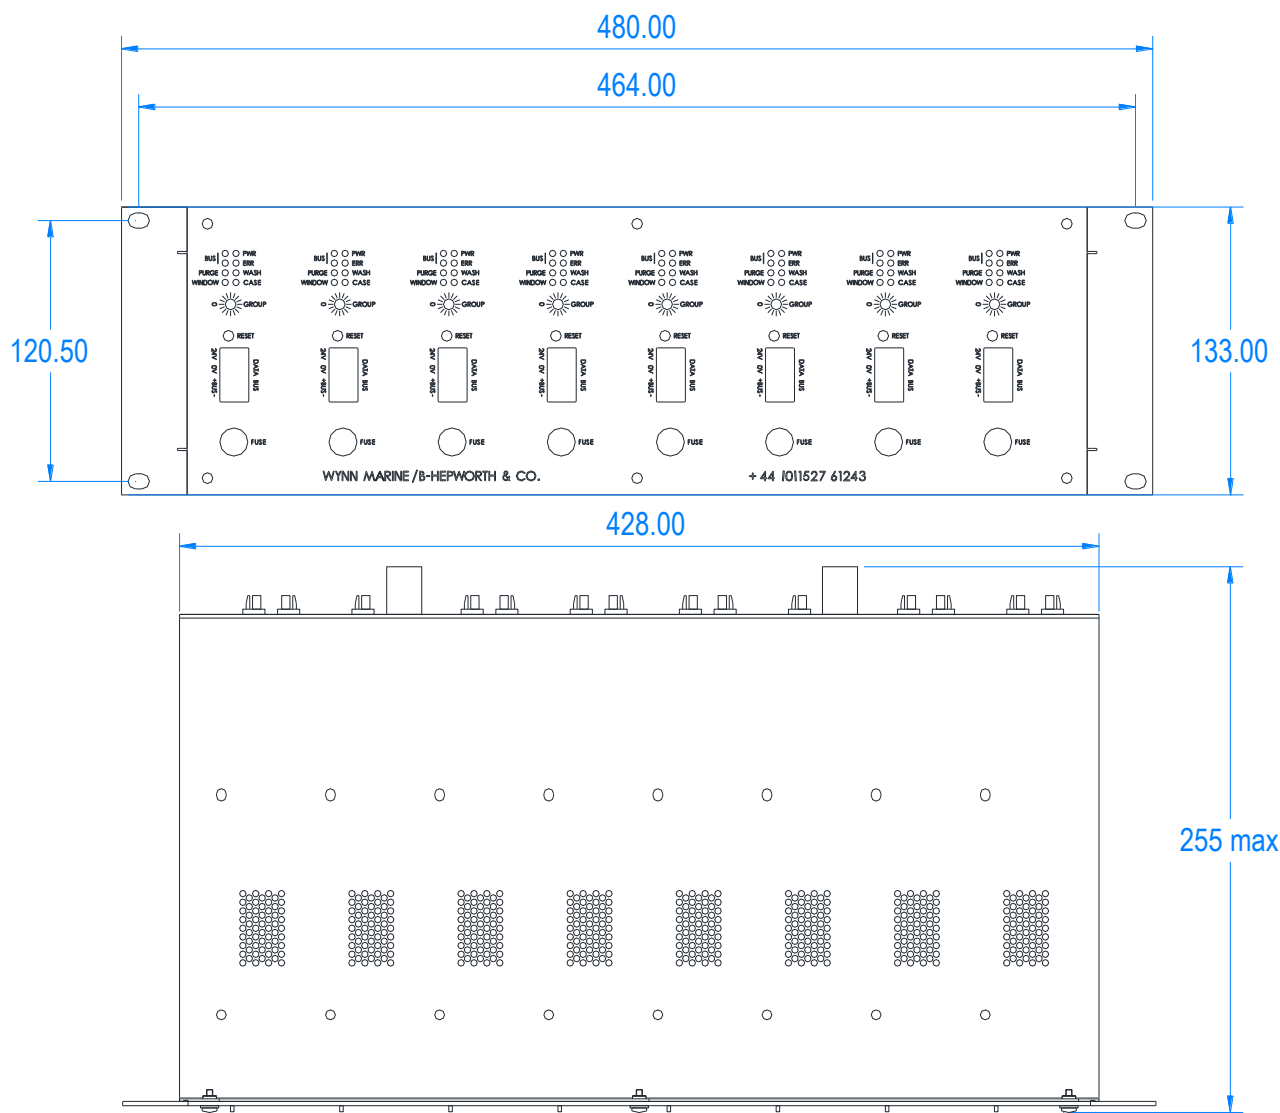

INSTALLATION INSTRUCTIONS

IMPORTANT


Wiper modules should be mounted in accordance with recommendations in IEC60945 sect 4.7.1. Care should be taken to install the units in line with the unit labelling and bridge layout drawings.

The module is supplied with the connector plugs fitted to the module sockets. The plugs can be removed for ease of installation.

A cable insertion tool is supplied for use with the single height connectors.



Rear Panel Connections

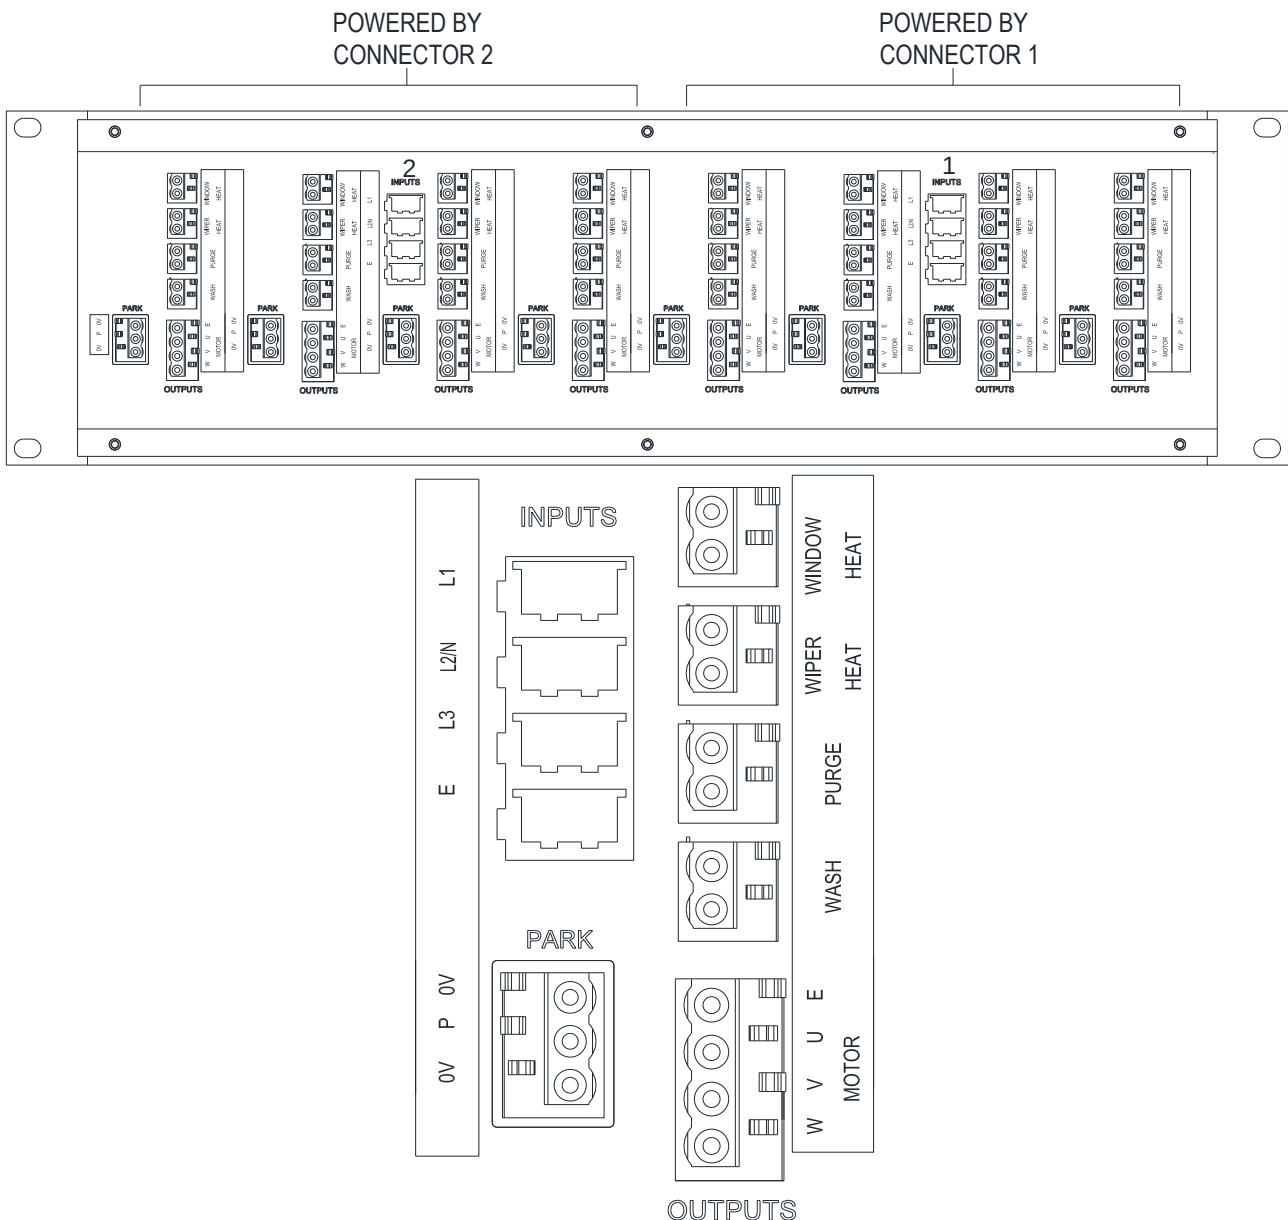

Rack units are supplied either as a separate unit suitable for mounting in a 19" cabinet or other suitable mounting position, or are supplied ready fitted to a suitable cabinet with the internal bus connections already complete.

Choose a location for the 19" Rack Unit or cabinet. The smaller units 3U to 15U can be wall mounted units, 18U to 24U units can be fitted to the floor. Motor cable and park switch cables should be fed into the enclosure. Auxiliary outputs **MUST NOT** be wired in parallel, this will cause damage to the PCB.

If junction boxes and shipyard supplied cables are used to extend the supplied cables, separate shielded cables must be used for wiper motor/heater/earth (6 or 7 core cable) and park switch (2 core cable).

The cable screen for wiper motor/heater/earth cable must be connected to ships earth at both ends of the cable.

The cable screen for park switch cable must be connected to instrument earth at rack/cabinet end of the cable only. (Instrument earth is a separate earth point a minimum 3m away from 230v supply earth point.)

Enough space must be left between and around the Rack Modules or Cabinet for cooling air.

1. Connect motor cable to 4-way motor connector. (*Supplied in module socket*) In accordance with the wiring diagram.



2. Connect park switch cable to 3-way connector. (*Supplied in module socket*) In accordance with the wiring diagram.



3. *If required* - connect wiper heat cabling to 2-way connector. (*Supplied in module socket*) In accordance with the wiring diagram.



IMPORTANT

Auxiliary outputs **MUST NOT be wired in parallel. This will cause damage to the PCB.**

4. ***If required*** - connect window heat cabling to 2-way connector. (*Supplied in module socket*) In accordance with the wiring diagram.



IMPORTANT

Auxiliary outputs MUST NOT be wired in parallel. This will cause damage to the PCB.

5. ***If required*** - connect wash cabling to 2-way connector. (*Supplied in module socket*) In accordance with the wiring diagram.



IMPORTANT

Auxiliary outputs MUST NOT be wired in parallel. This will cause damage to the PCB.


6. ***If required*** - connect purge cabling to 2-way connector. (*Supplied in module socket*) In accordance with the wiring diagram.



7. Connect the power cable to 4-way connector (*Supplied in module socket*) in accordance with the wiring diagram.



Front Panel Connections

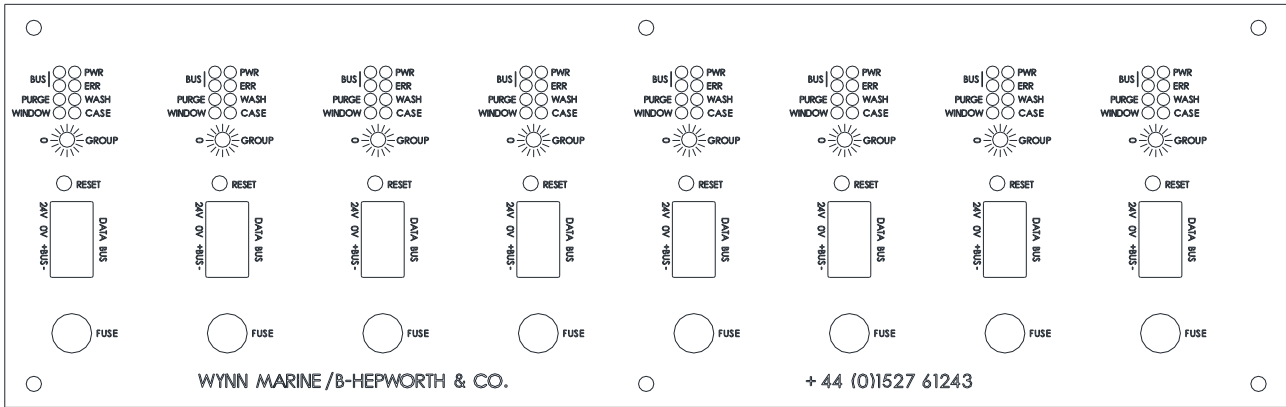


RS 485/CAN bus must be wired as one continuous bus without splitting of wiring. The bus is internally wired between all PCB.

- Connect bus cable to 4-way connector (*Supplied in module socket*) In accordance with the wiring diagram.




- The terminating resistor module must be connected to the last module in the chain in accordance with the wiring diagram.

Example of bus connections made in a 3 rack cabinet

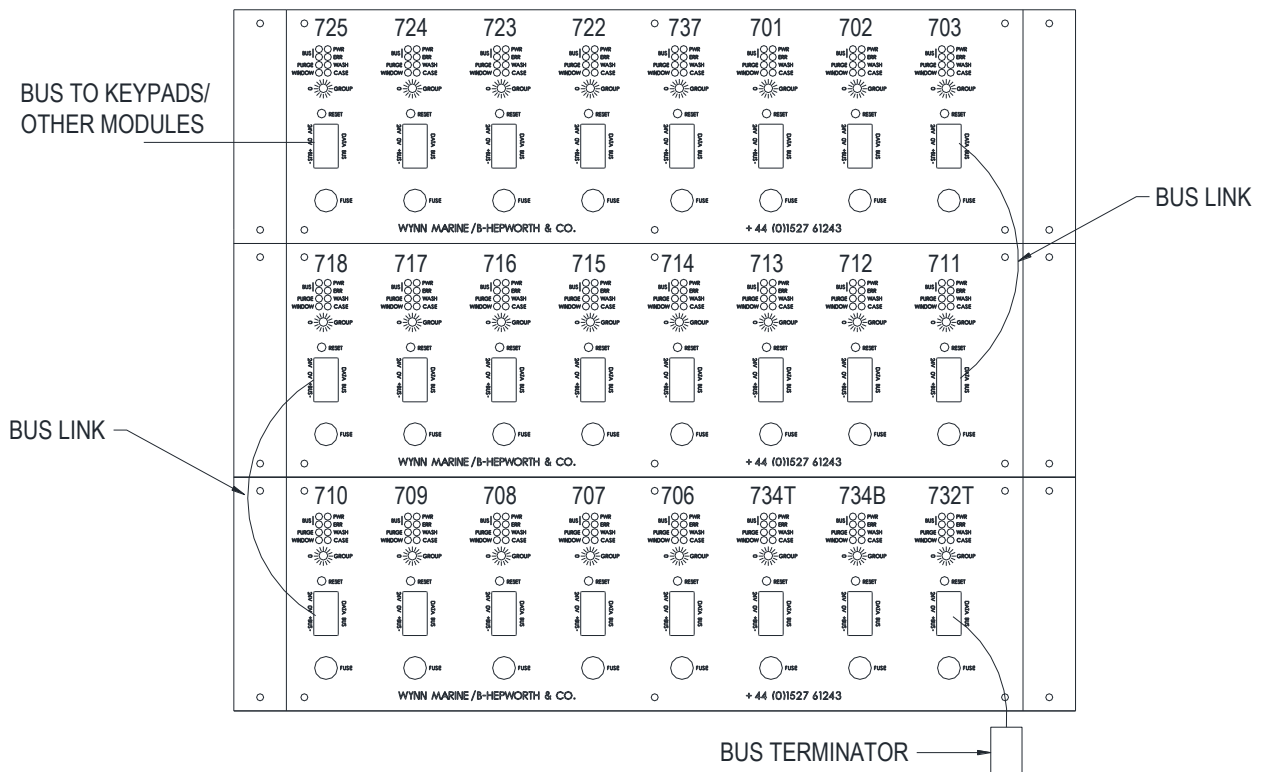

Group Switch


10. The group switch on each wiper control PCB is pre-set in the factory. Ensure/set the Group Switch to the correct Group (see group switch drawing below and bus wiring drawings when available (group number indicated in blue)).
11. To change group, using a small screwdriver rotate the group switch one position to the right to go up one group, rotate the group switch one position to the left to go down one group. If the module is powered up, press the reset button.

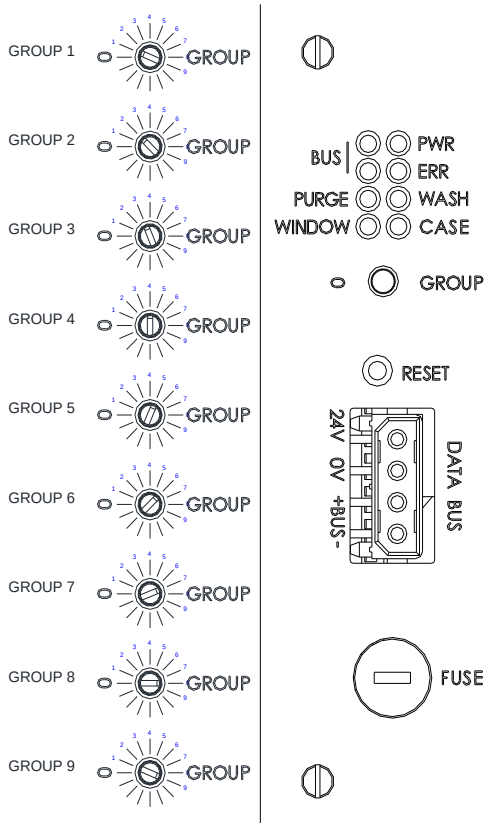

19" Rack Module Spares List

Ident	Item Part No	Item Description	Qty Per Module
1	SP8200-PCB	SPARE 8200 MODULE PCB & COOLING	1
2	A-ELEC-267	FUSE ANTISURGE 10A	1
	10186900	WAGO CABLE INSERTION TOOL	1
	10186800	WAGO 231-602 AUXILIARY MALE CONN 2P	4
	10186710	WAGO 231-604 MOTOR MALE 4 WAY CONNECTOR	1
	10186600	WAGO 231-603 PARK MALE 3P	1
	10186400	WAGO 721-2104 BUS FEMALE 4P	1
	10186510	WAGO 831-3104 POWER FEMALE 4P	2 Per Rack

19" Rack Module Spare Parts Drawing

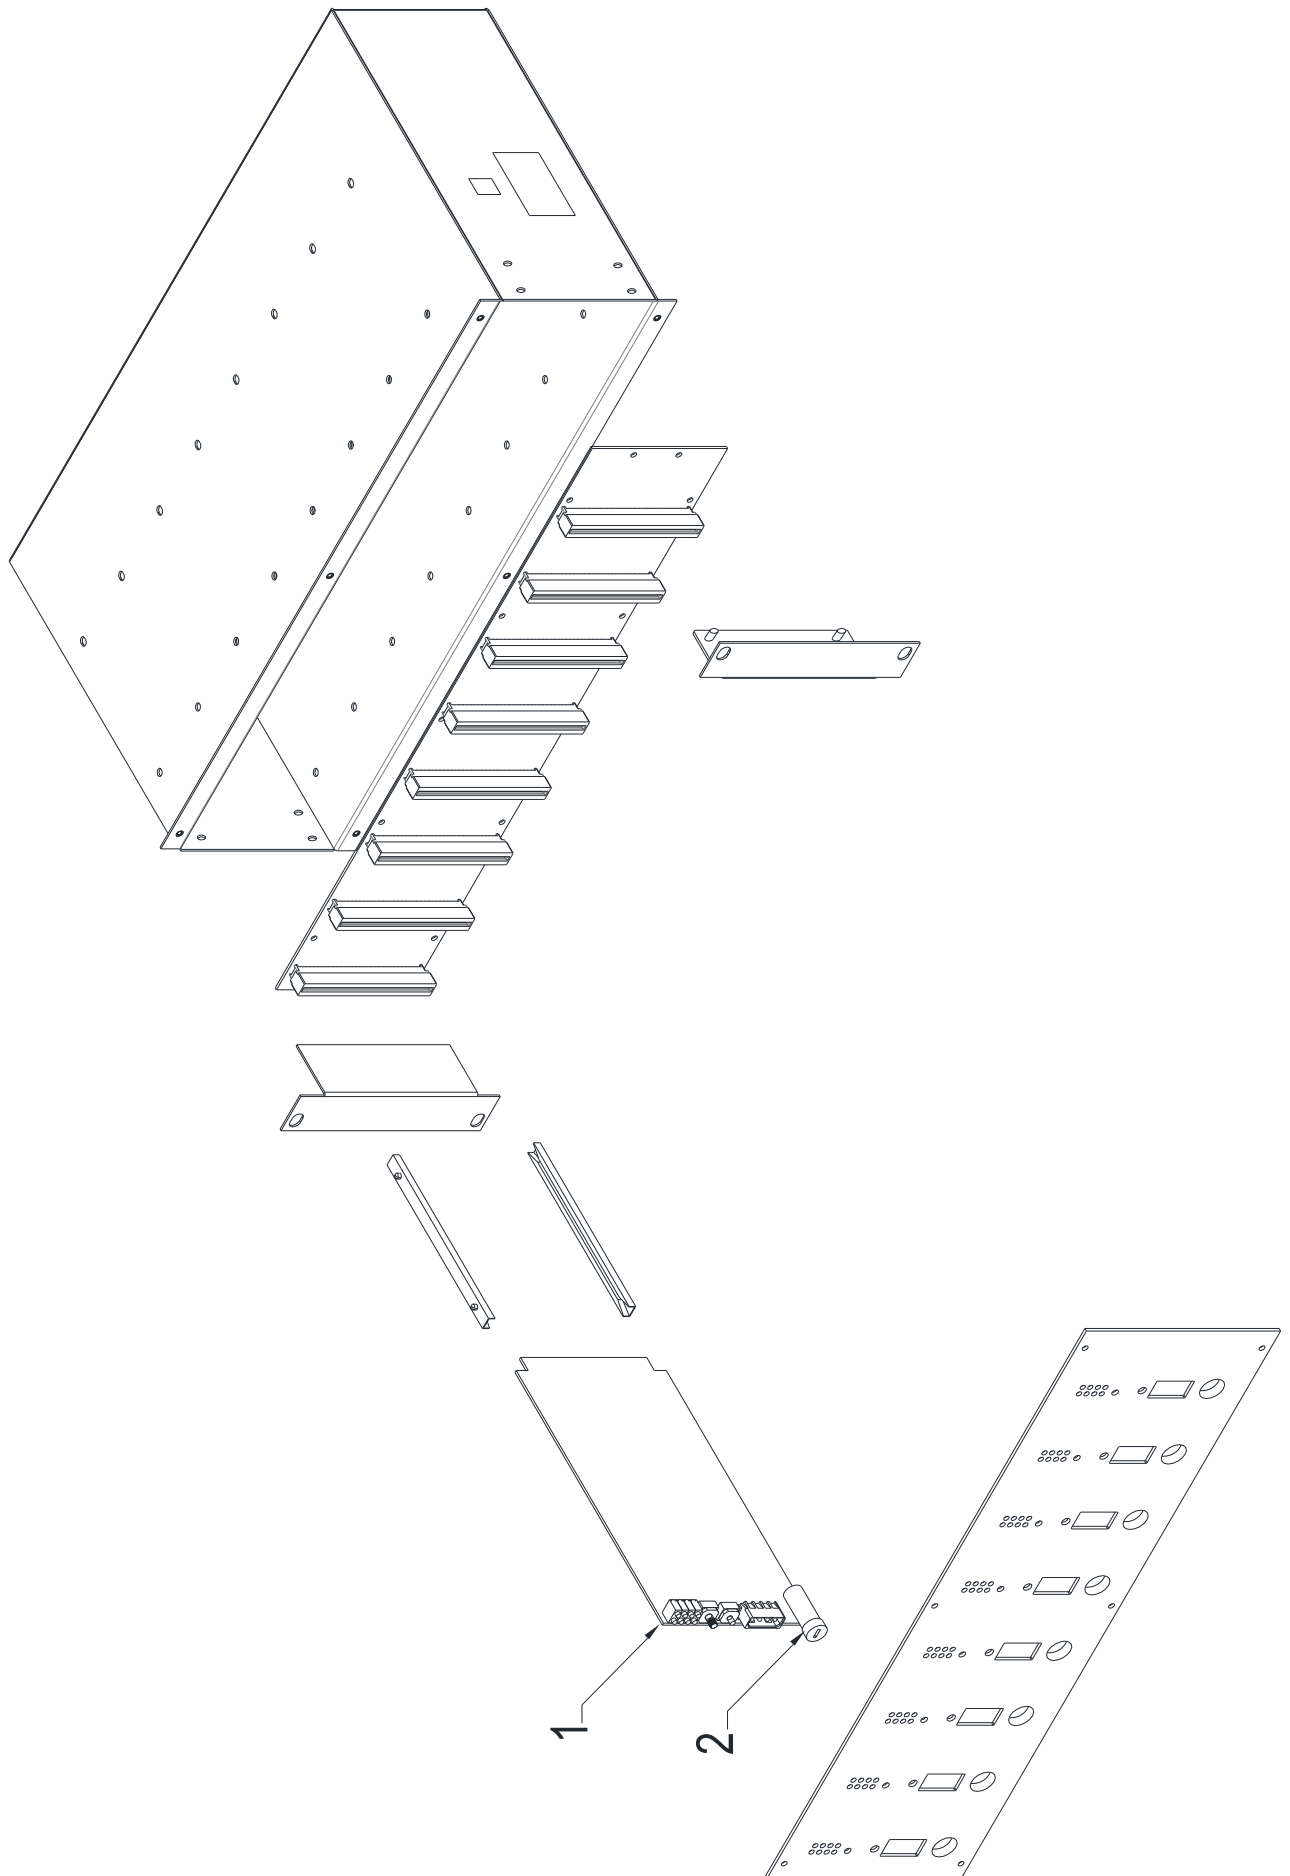

19" Rack Module PCB Replacement





WARNING: Ensure that all power is disconnected whilst working on the controller.



WARNING: Shock Hazard. Board contains capacitors that may still be charged.

1. Switch off the mains power to the rack unit.
2. Remove the 4 way bus plugs and remove the 6 screws securing the 19" rack unit cover plate, and remove the cover plate.
3. Remove the PCB to be replaced. Note the setting of the group switch.
4. Rotate the group switch of the replacement PCB to the same number as noted above.
5. Slide the new PCB into the 19" rack unit ensuring PCB is fitted into the PCB guides and the PCB is fully pushed into the connector at the rear of the 19" rack unit.
6. Refit the 19" rack cover plate with the 6 screws. Refit Bus 4 way plugs. The 8200 19" Rack is now ready for use.
7. Switch on the mains power to the rack unit.

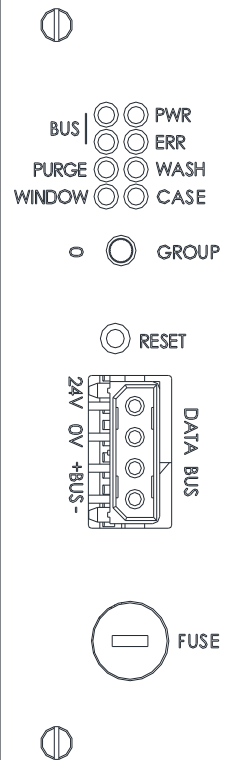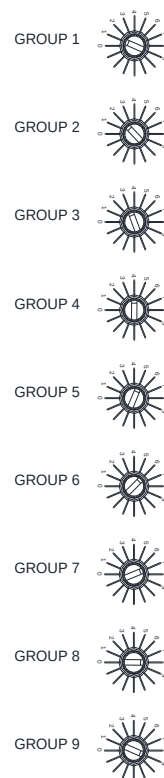




8000 system wiring diagrams for C type wipers.

These diagrams cover the vast majority of wiper installations. In the case that these diagrams do not cover your specific installation please contact customer services on +44 1527 61243

RACK REAR VIEW

POWERED BY
CONNECTOR 2

POWERED BY
CONNECTOR 1

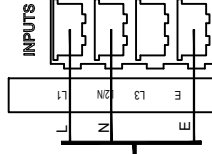
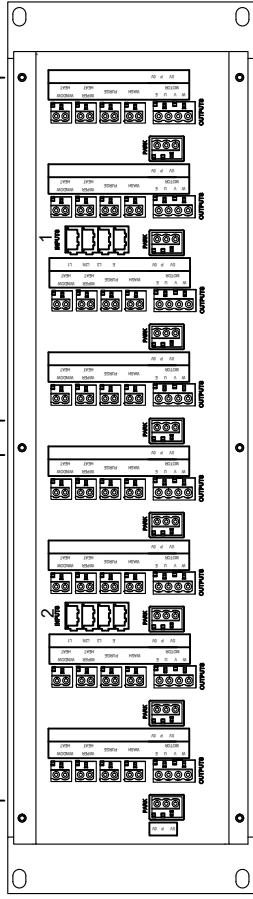


1. JUNCTION BOX IS OPTIONAL. SEPARATE MOTOR/HEATER AND PARK SWITCH CABLES MUST BE USED.
2. MOTOR/HEATER CABLE OUTER COPPER BRAID MUST BE CONNECTED TO EARTH AT ALL POINTS. I.E. INTO AND OUT OF JUNCTION BOX, AND AT THE MODULE.
3. PARK SWITCH CABLE OUTER COPPER BRAID MUST BE CONNECTED TO INSTRUMENT EARTH AT JUNCTION BOX INPUT AND MODULE ENDS ONLY.
4. INSTRUMENT EARTH IS A SEPARATE EARTH POINT A MINIMUM 3M AWAY FROM 230V SUPPLY EARTH POINT.

TO SCREEN HEATER
OR CONTACTOR

TO PURGE SOLENOID

TO WASH SOLENOID

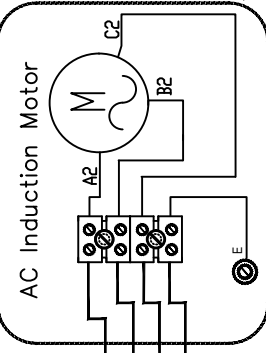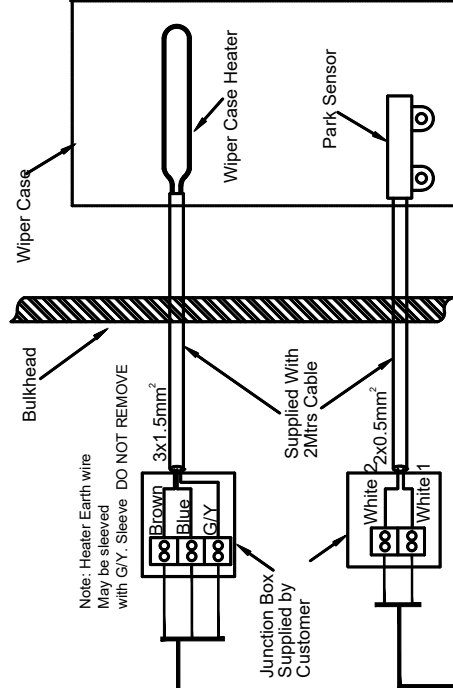

NOTE CRITICAL DIMENSIONS MARKED THUS 'CD'
SIGNIFICANT DETAILS MARKED THUS 'SD'

Mail. Type -
Mail. Part No. -
Other info -
Finish -
Matl. Size -

GENERAL TOLERANCES
unless otherwise stated
Dimension - No decimal place ± 1
Dimension - One decimal place ± 0.5
Dimension - Two decimal places ± 0.25
Dimension - Three decimal places ± 0.125
Dimension - Four decimal places ± 0.0625
Angular Dimension $\pm 1^\circ$

REMOVE SHARP EDGES

OUTSIDE LOOKING IN

3RD ANGLE

DO NOT SCALE

IF IN DOUBT ASK



A Division of B. Hepworth
B. Hepworth & Co. Ltd
2-4 Merse Road, North Moons Moat,
Redditch, Worcestershire, B98 9HL
tel 01527 63057; fax 01527 66836

All dimensions are in mm
unless otherwise stated

B. Hepworth & Co. Ltd., (the 'Owner')
holds intellectual property rights in the
article shown. This drawing and the
article may not be copied in any form
without prior written permission of the
Owner.
© B. Hepworth & Co. Ltd., 2008


ELECTRICAL SCHEMATIC

8219 RACK TO 'C' TYPE WIPER


B		CABLE EARTHING INFO ADDED		14/04/15		DCM	
Issue	Changes/Mod No.	Date	Drawn by	Approved by	Date	Name	
30/09/13	APG						
ELECTRICAL SCHEMATIC							
8219 RACK TO 'C' TYPE WIPER							
8219R-EL-CTYPE-1PH							
B							

8000 system wiring diagrams for C type wipers.


These diagrams cover the vast majority of wiper installations. In the case that these diagrams do not cover your specific installation please contact customer services on +44 1527 61243

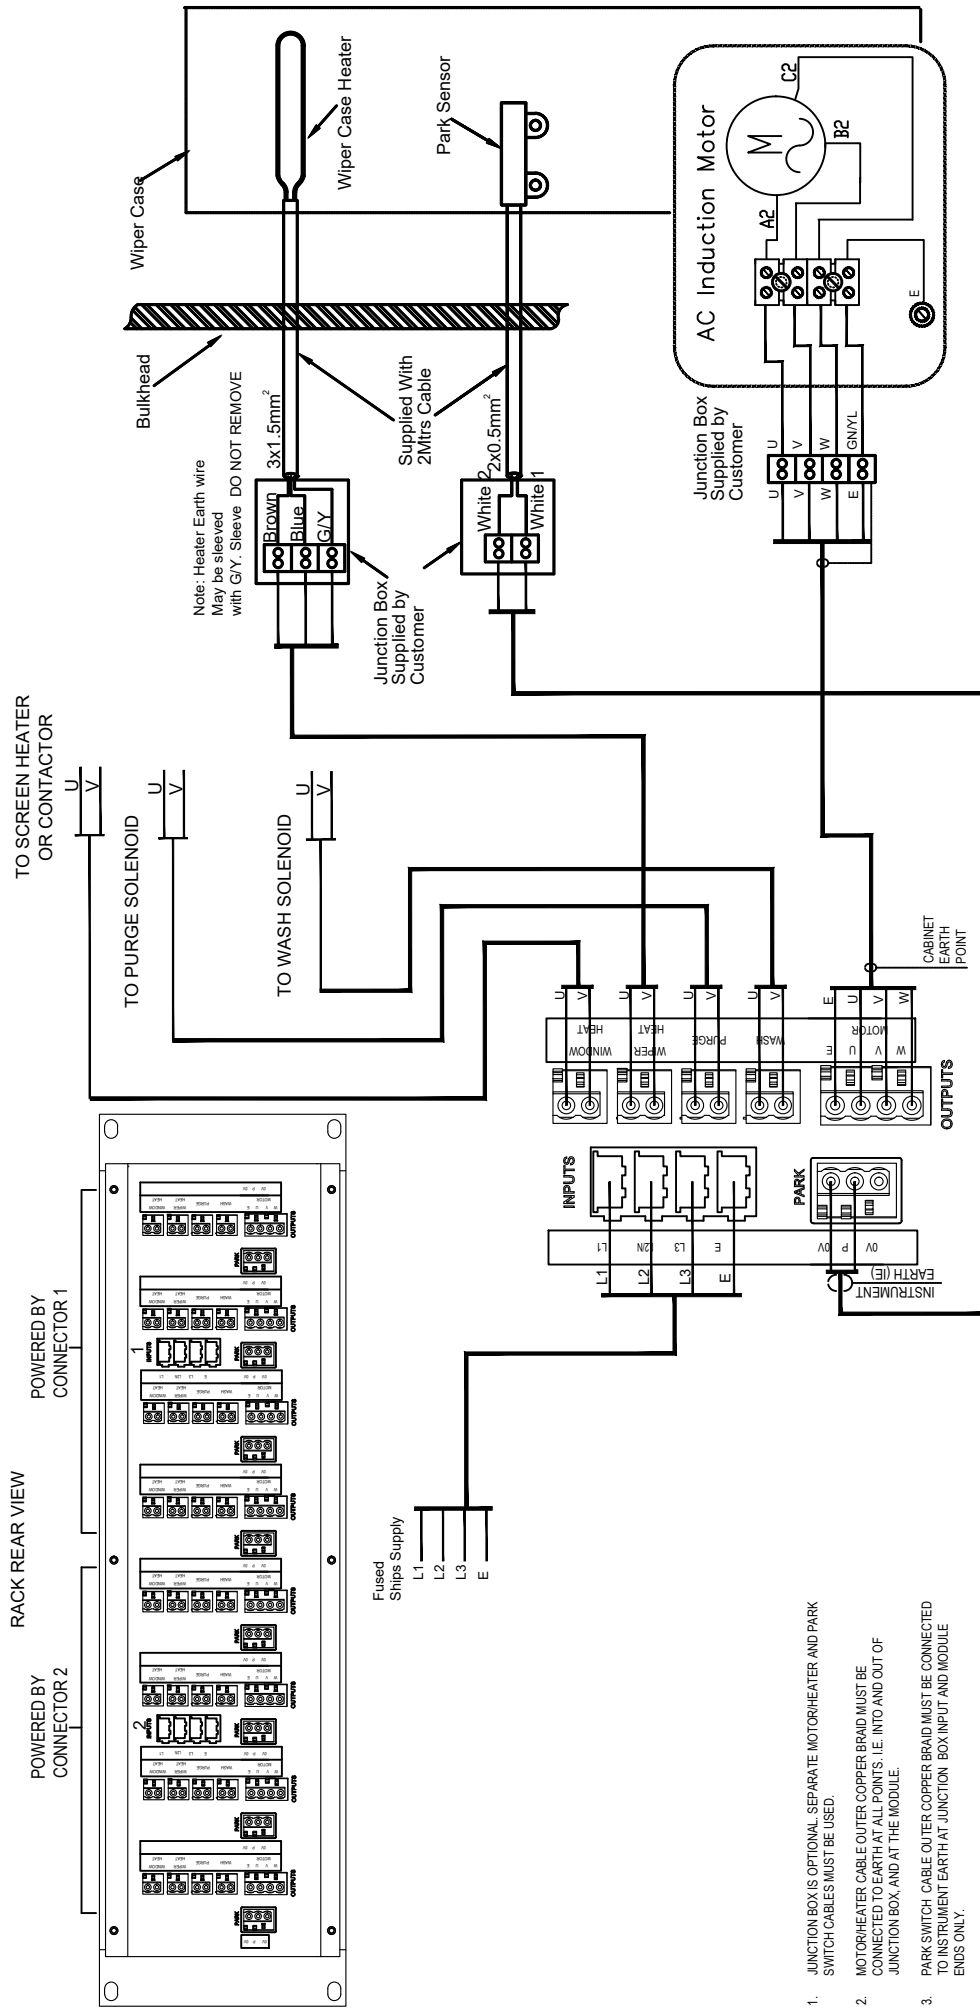


1. JUNCTION BOX IS OPTIONAL. SEPARATE MOTOR HEATER AND PARK SWITCH CABLES MUST BE USED.
2. MOTOR HEATER CABLE OUTER COPPER BRAID MUST BE CONNECTED TO EARTH AT ALL POINTS, I.E. INTO AND OUT OF JUNCTION BOX, AND AT THE MODULE.
3. PARK SWITCH CABLE OUTER COPPER BRAID MUST BE CONNECTED TO INSTRUMENT EARTH AT JUNCTION BOX INPUT AND MODULE ENDS ONLY.
4. INSTRUMENT EARTH IS A SEPARATE EARTH POINT A MINIMUM 3M AWAY FROM 230V SUPPLY EARTH POINT.

8219R-EL-CTYPE-3PH		NOTE CRITICAL DIMENSIONS MARKED THUS 		GENERAL TOLERANCES unless otherwise stated Dimension - No decimal place ± 1 Dimension - One decimal place ± 0.5 Dimension - Two decimal places ± 0.25 Dimension - Three decimal places ± 0.125 Dimension - Four decimal places ± 0.0625 Angular Dimension ± 1°	All dimensions are in mm unless otherwise stated B. Hepworth & Co. Ltd. (the 'Owner') holds intellectual property rights in the article shown. This drawing and the article may not be copied in any form without prior written permission of the Owner. © B. Hepworth & Co. Ltd., 2008	 A Division of B. Hepworth B. Hepworth & Co. Ltd 2-4 Merse Road, North Moons Moat, Redditch, Worcestershire, B98 9HL tel 01527 63057; fax 01527 66836	8219R-EL-CTYPE-3PH	B			
REMOVE SHARP EDGES		OUTSIDE LOOKING IN							3RD ANGLE 	DO NOT SCALE	IF IN DOUBT ASK
SIGNIFICANT DETAILS MARKED THUS 		Finish - Matt. Part No. - Other info - Matt. Size -									
B		CABLE EARTHING INFO ADDED		14/04/15		DCM					
Issue		Changes/Mod No.		Date		Name					
30/09/13		APG		Approved by		Drawing Log No.					
ELECTRICAL SCHEMATIC											
8219 RACK TO 'C' TYPE WIPER											
ISSUE		No.		8219R-EL-CTYPE-3PH		B					


MULTI CONNECTION SYSTEM

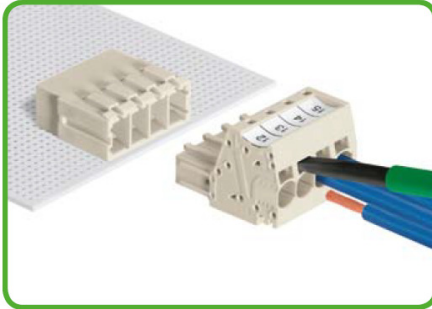

Inserting fine-stranded conductors via 5.5 x 0.8 mm screwdriver.

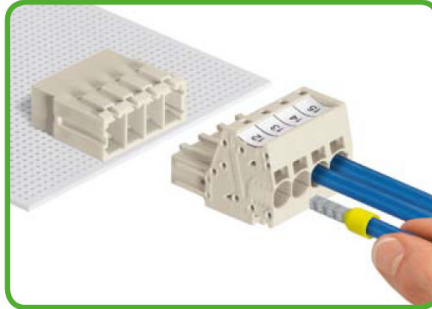


Inserting solid and ferruled conductors via push-in termination – no operating tool needed.

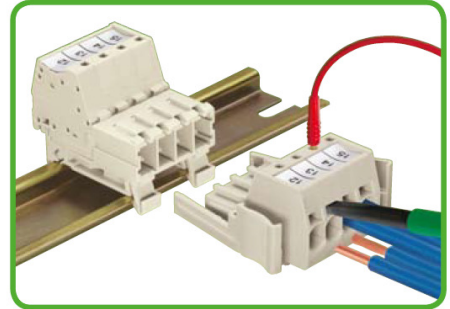

Male connector with CAGE CLAMP®S mounted on DIN 35-rail.

831 Series

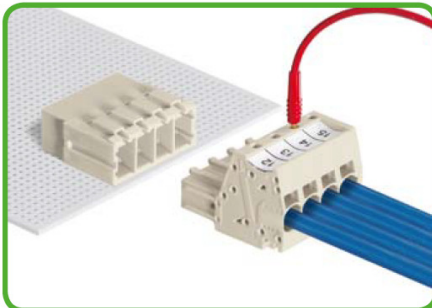


Testing with 2 mm Ø test plug.



Break or cut off coding pin from female connector . . .

100 % protected against mismatching

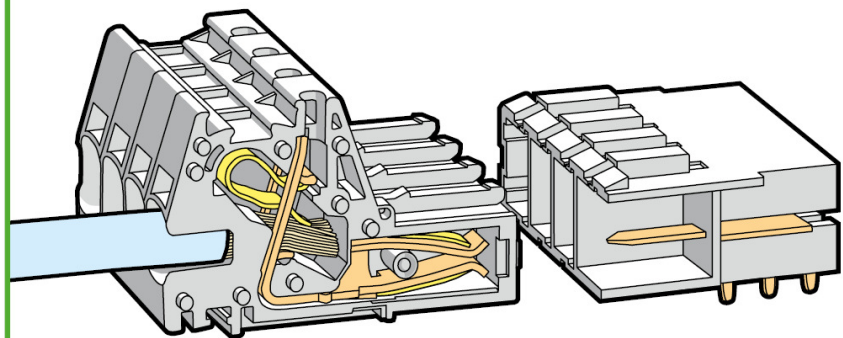

MCS-MAXI

Pin spacing 7.62 mm



. . . Insert coding pin into male connector (break first) until it engages.



Marking via WMB or miniature WSB marker strips.



Marking via factory direct printing.



CAGE CLAMP®S clamps the following copper conductors:*

solid





stranded




fine-stranded, also with tinned single strands

PAGE 1 - START

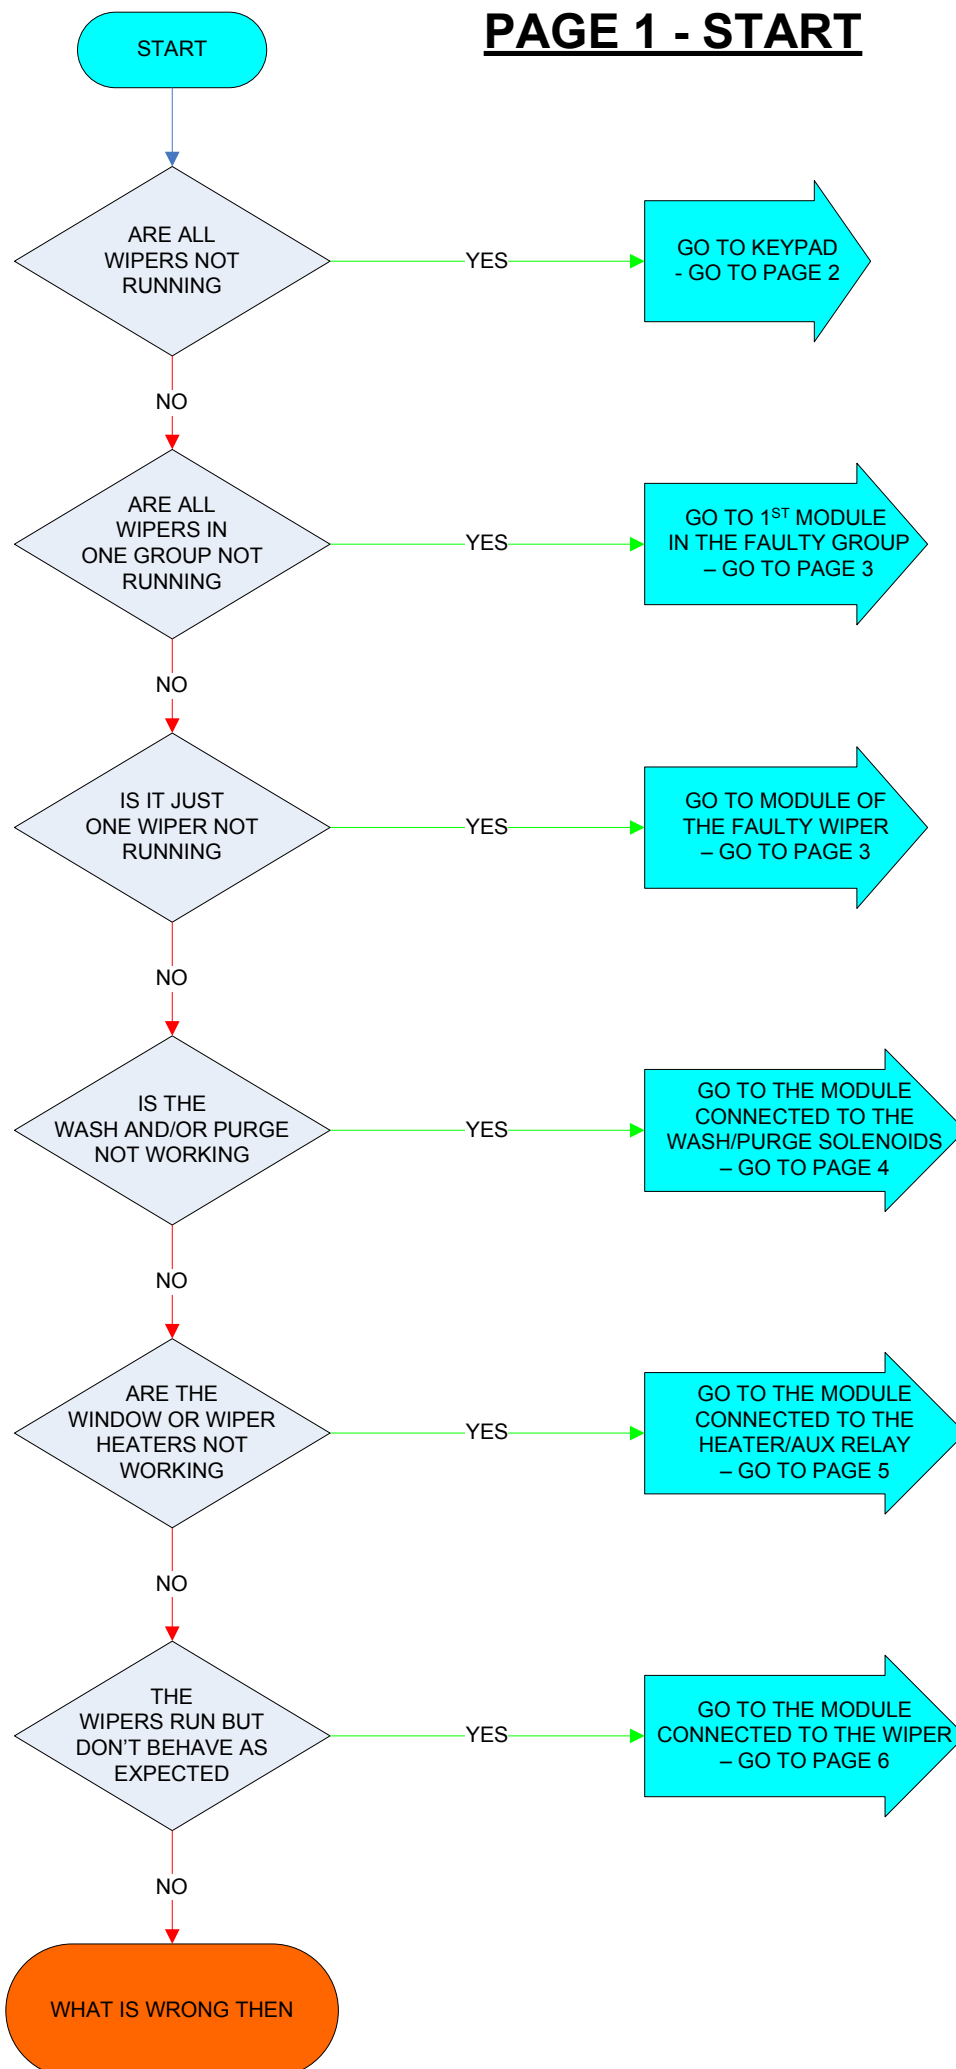


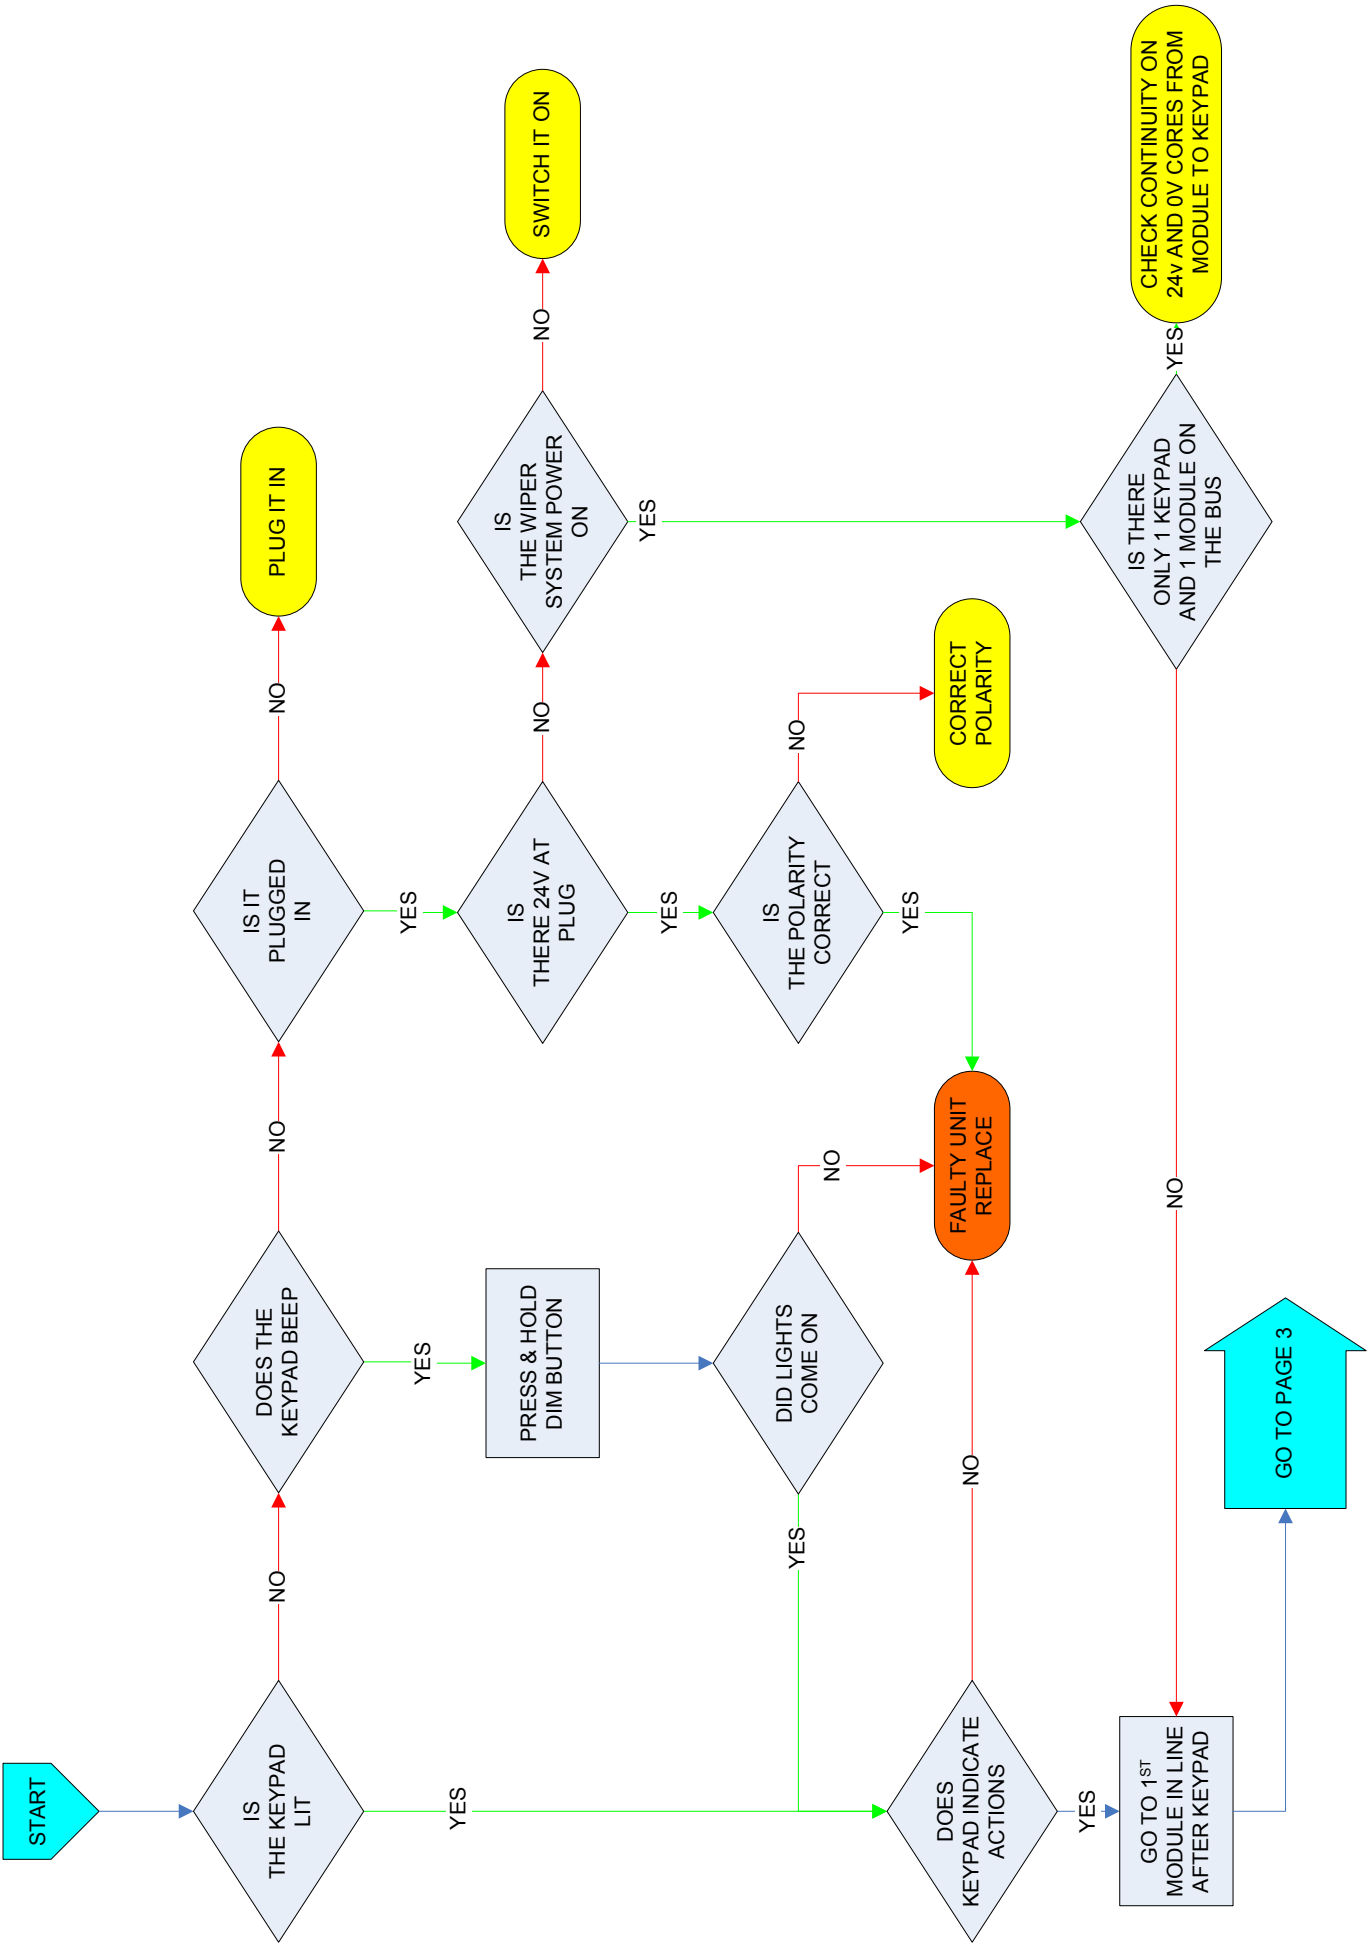


PAGE 3 - MODULE

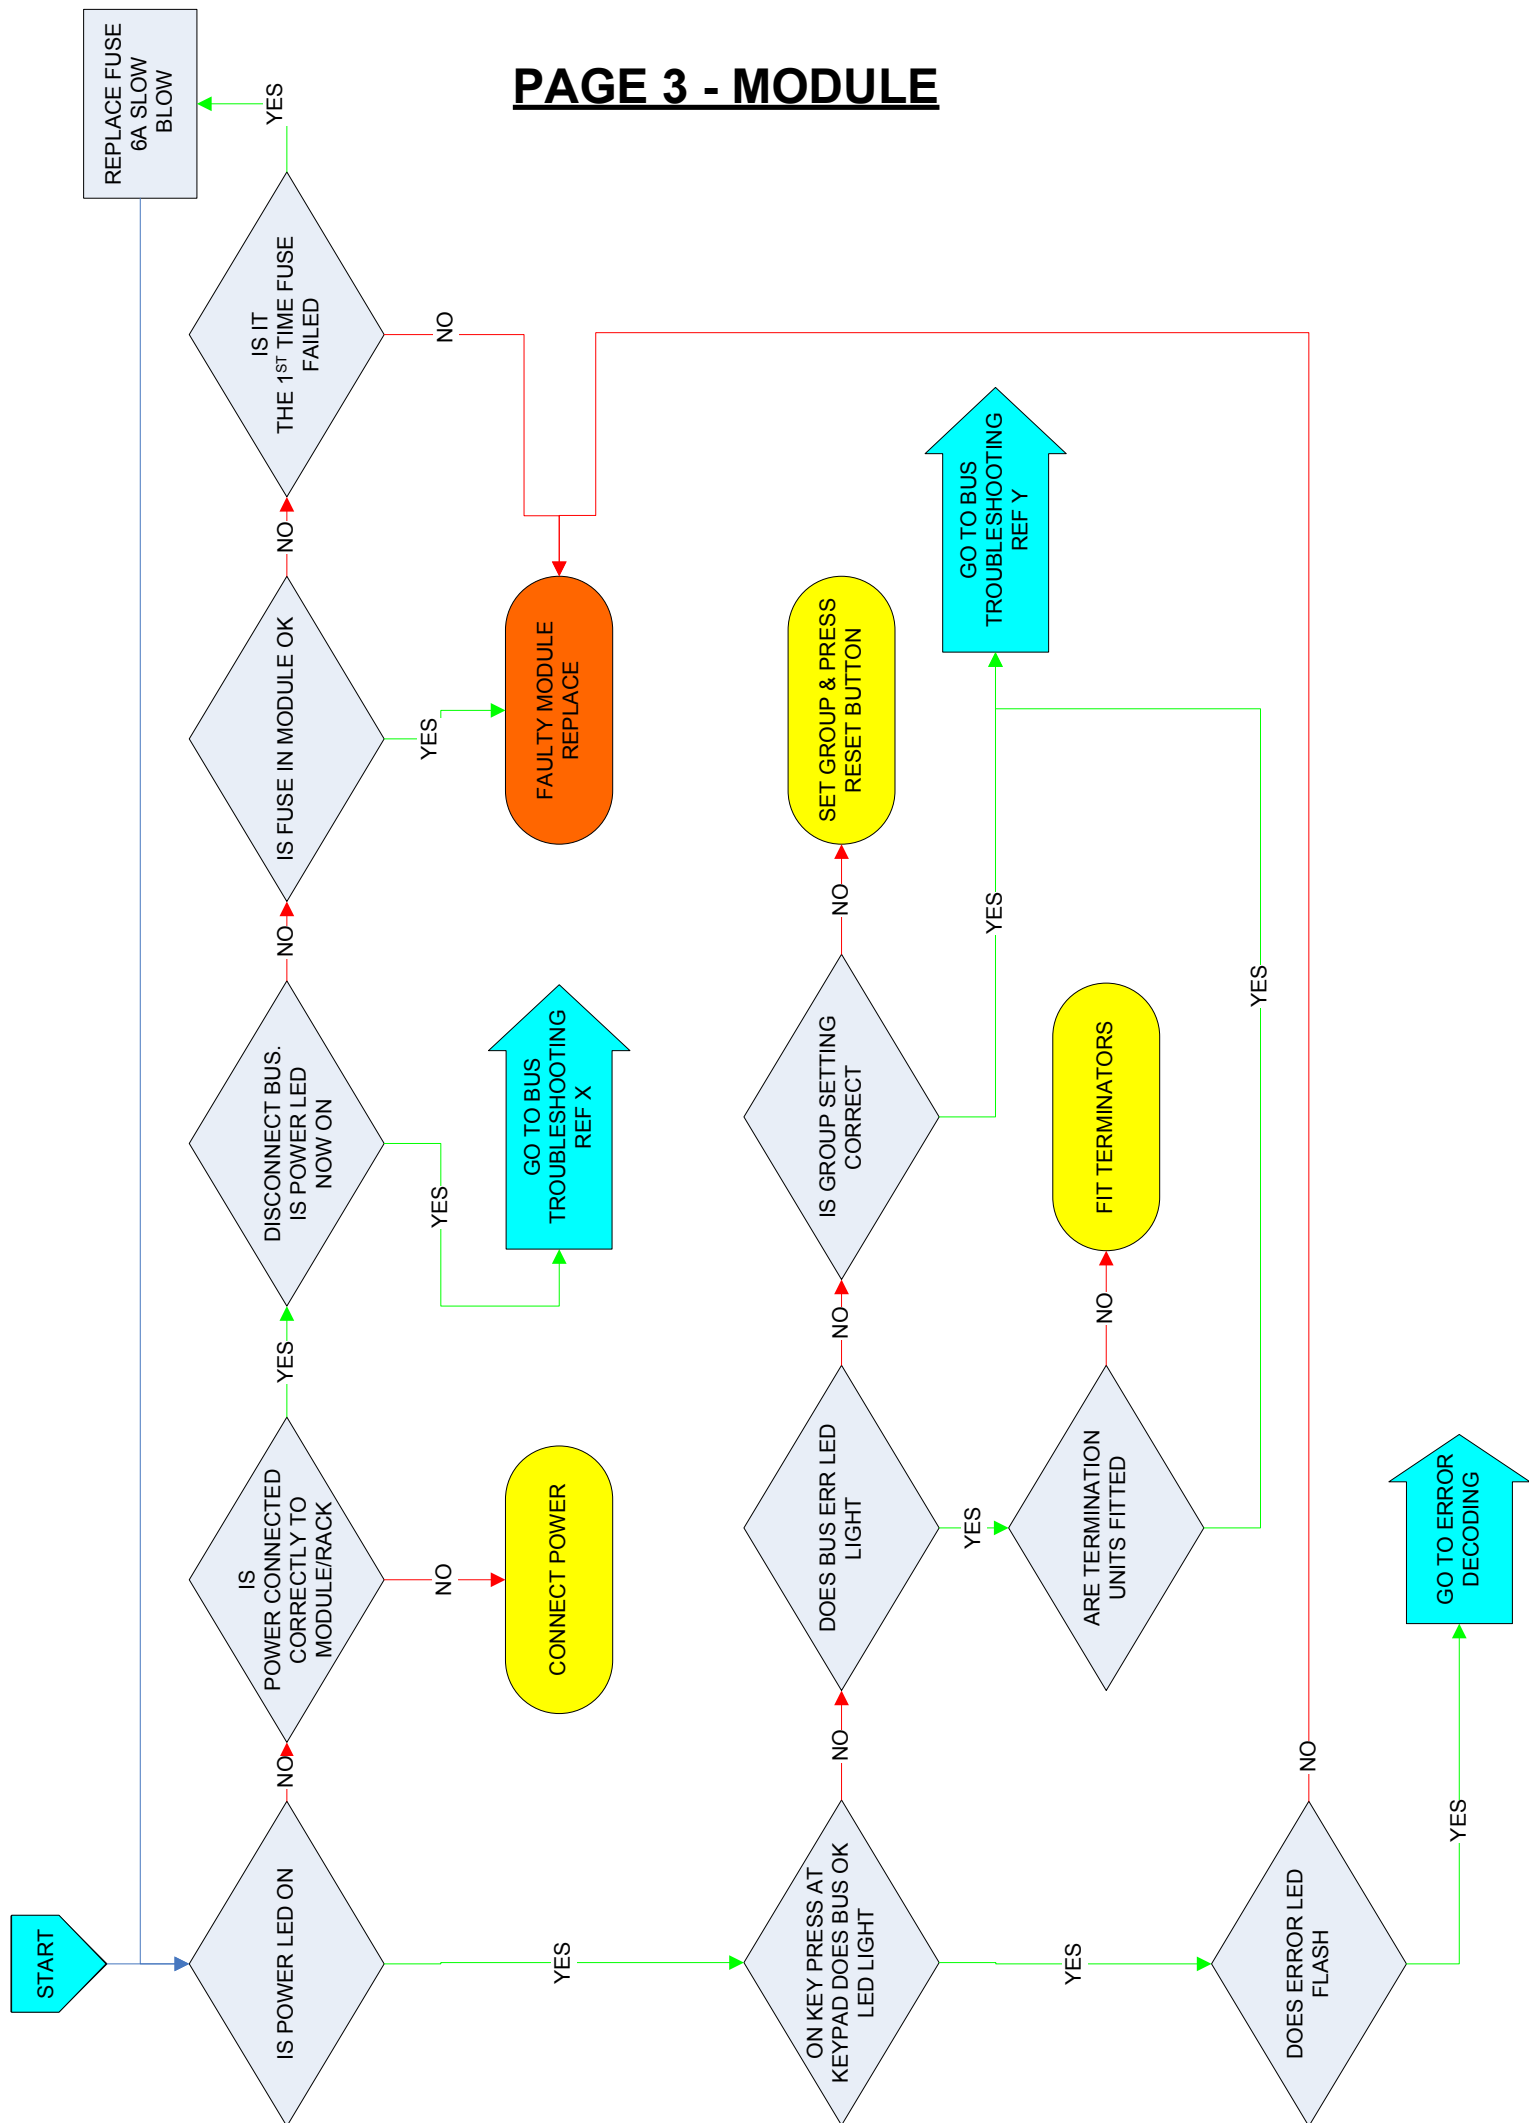


PAGE 4 – WASH/PURGE

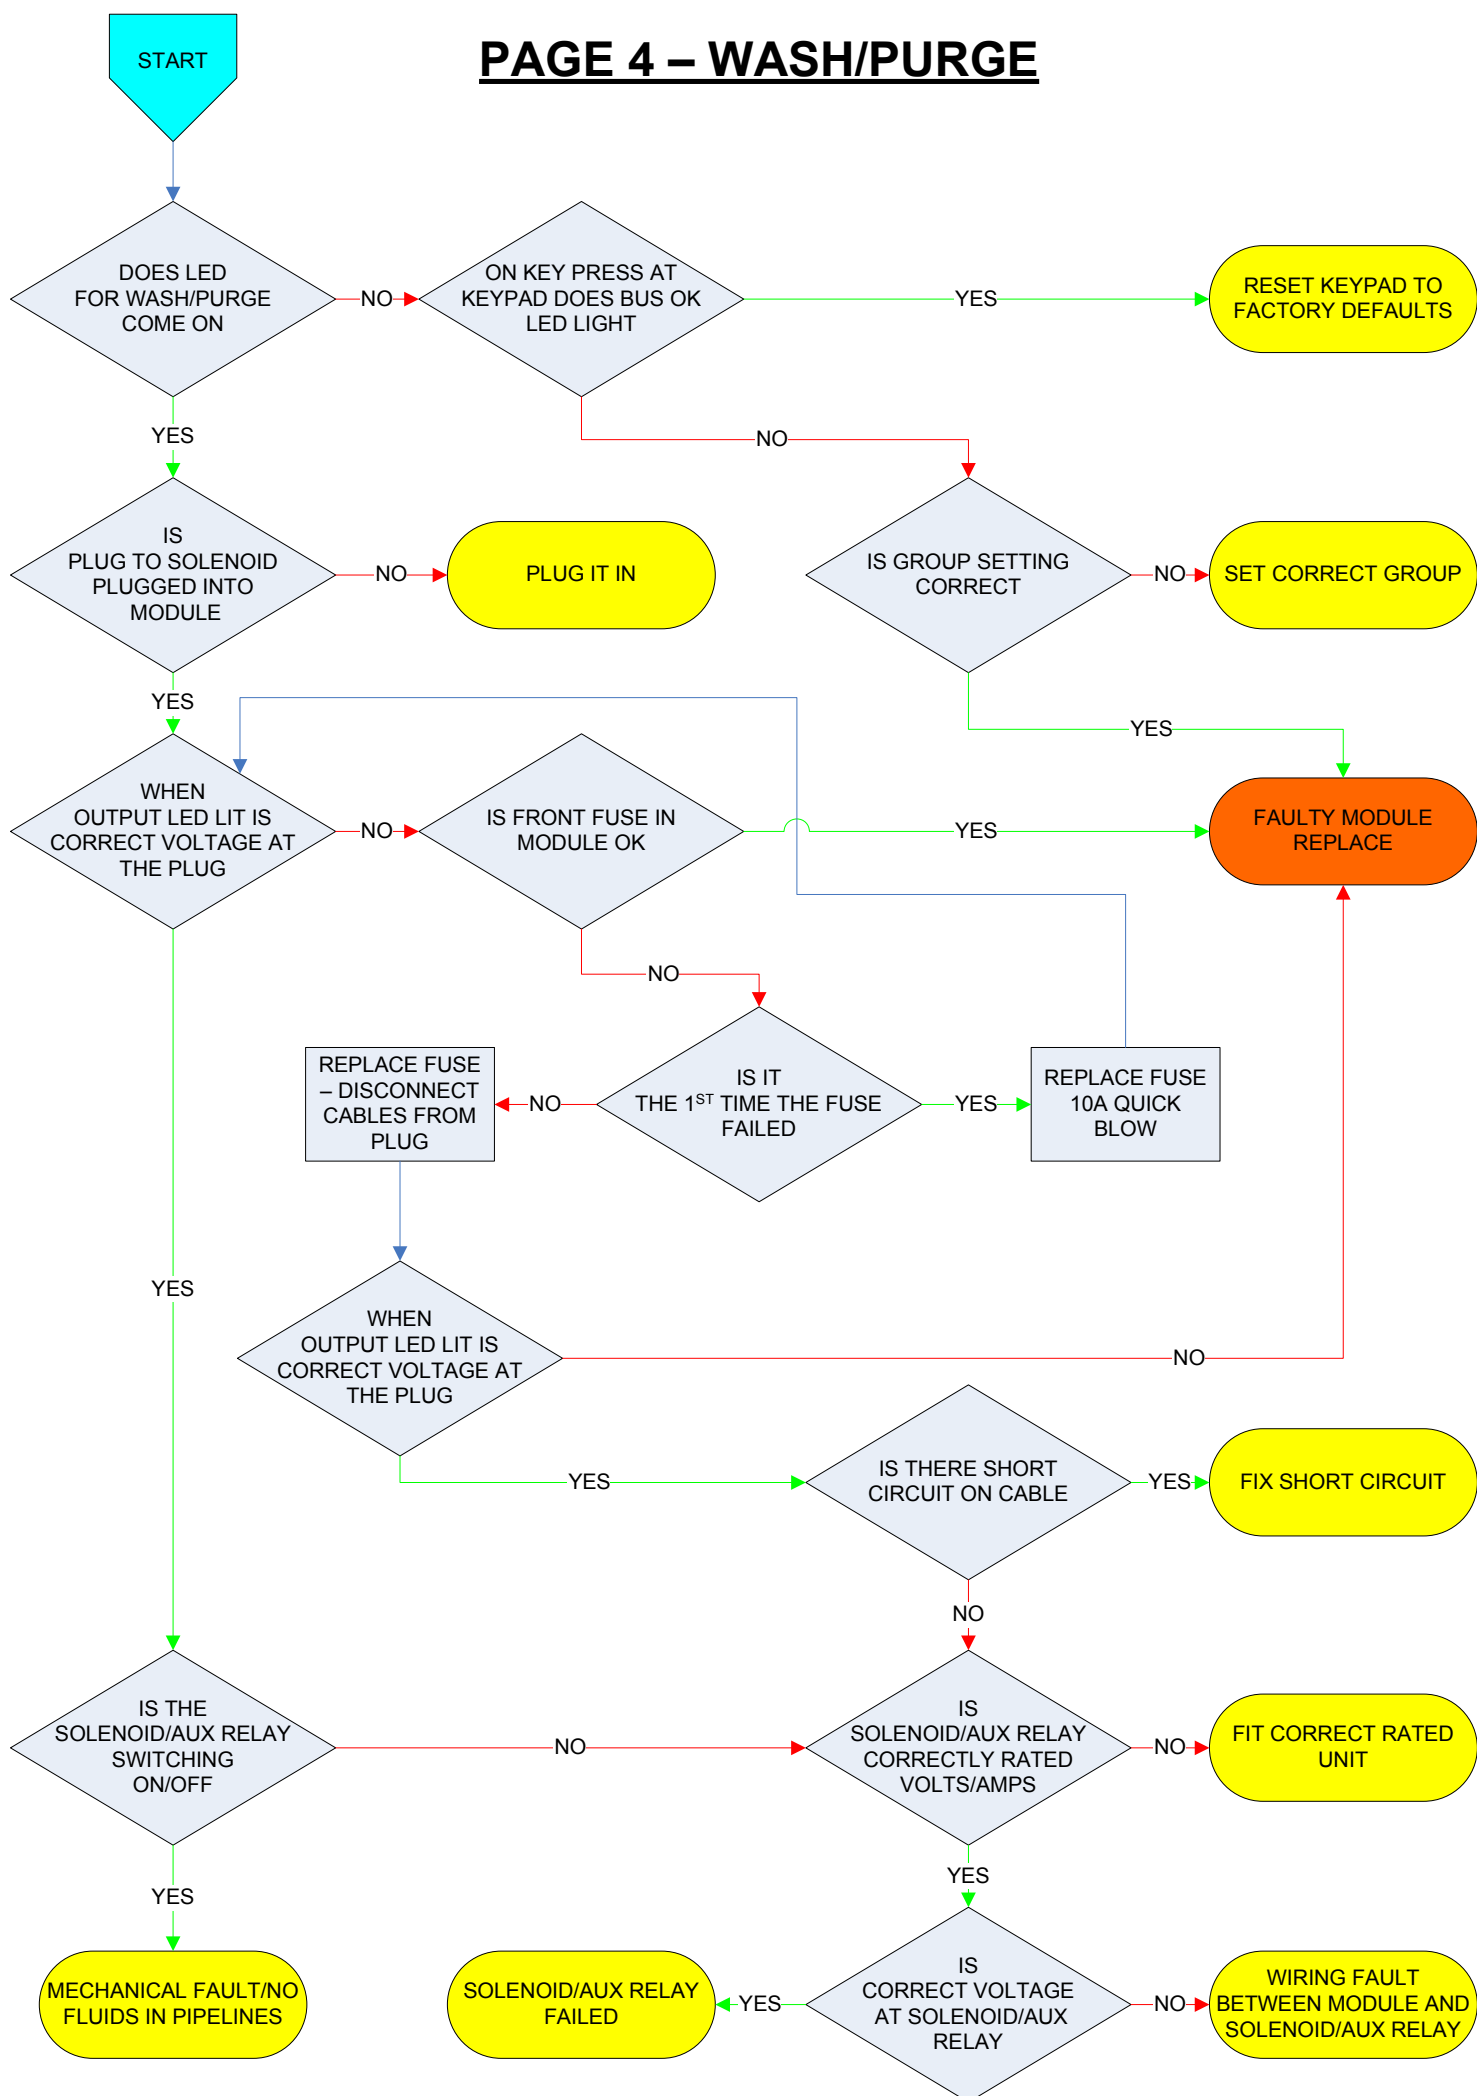


PAGE 5 - HEATERS

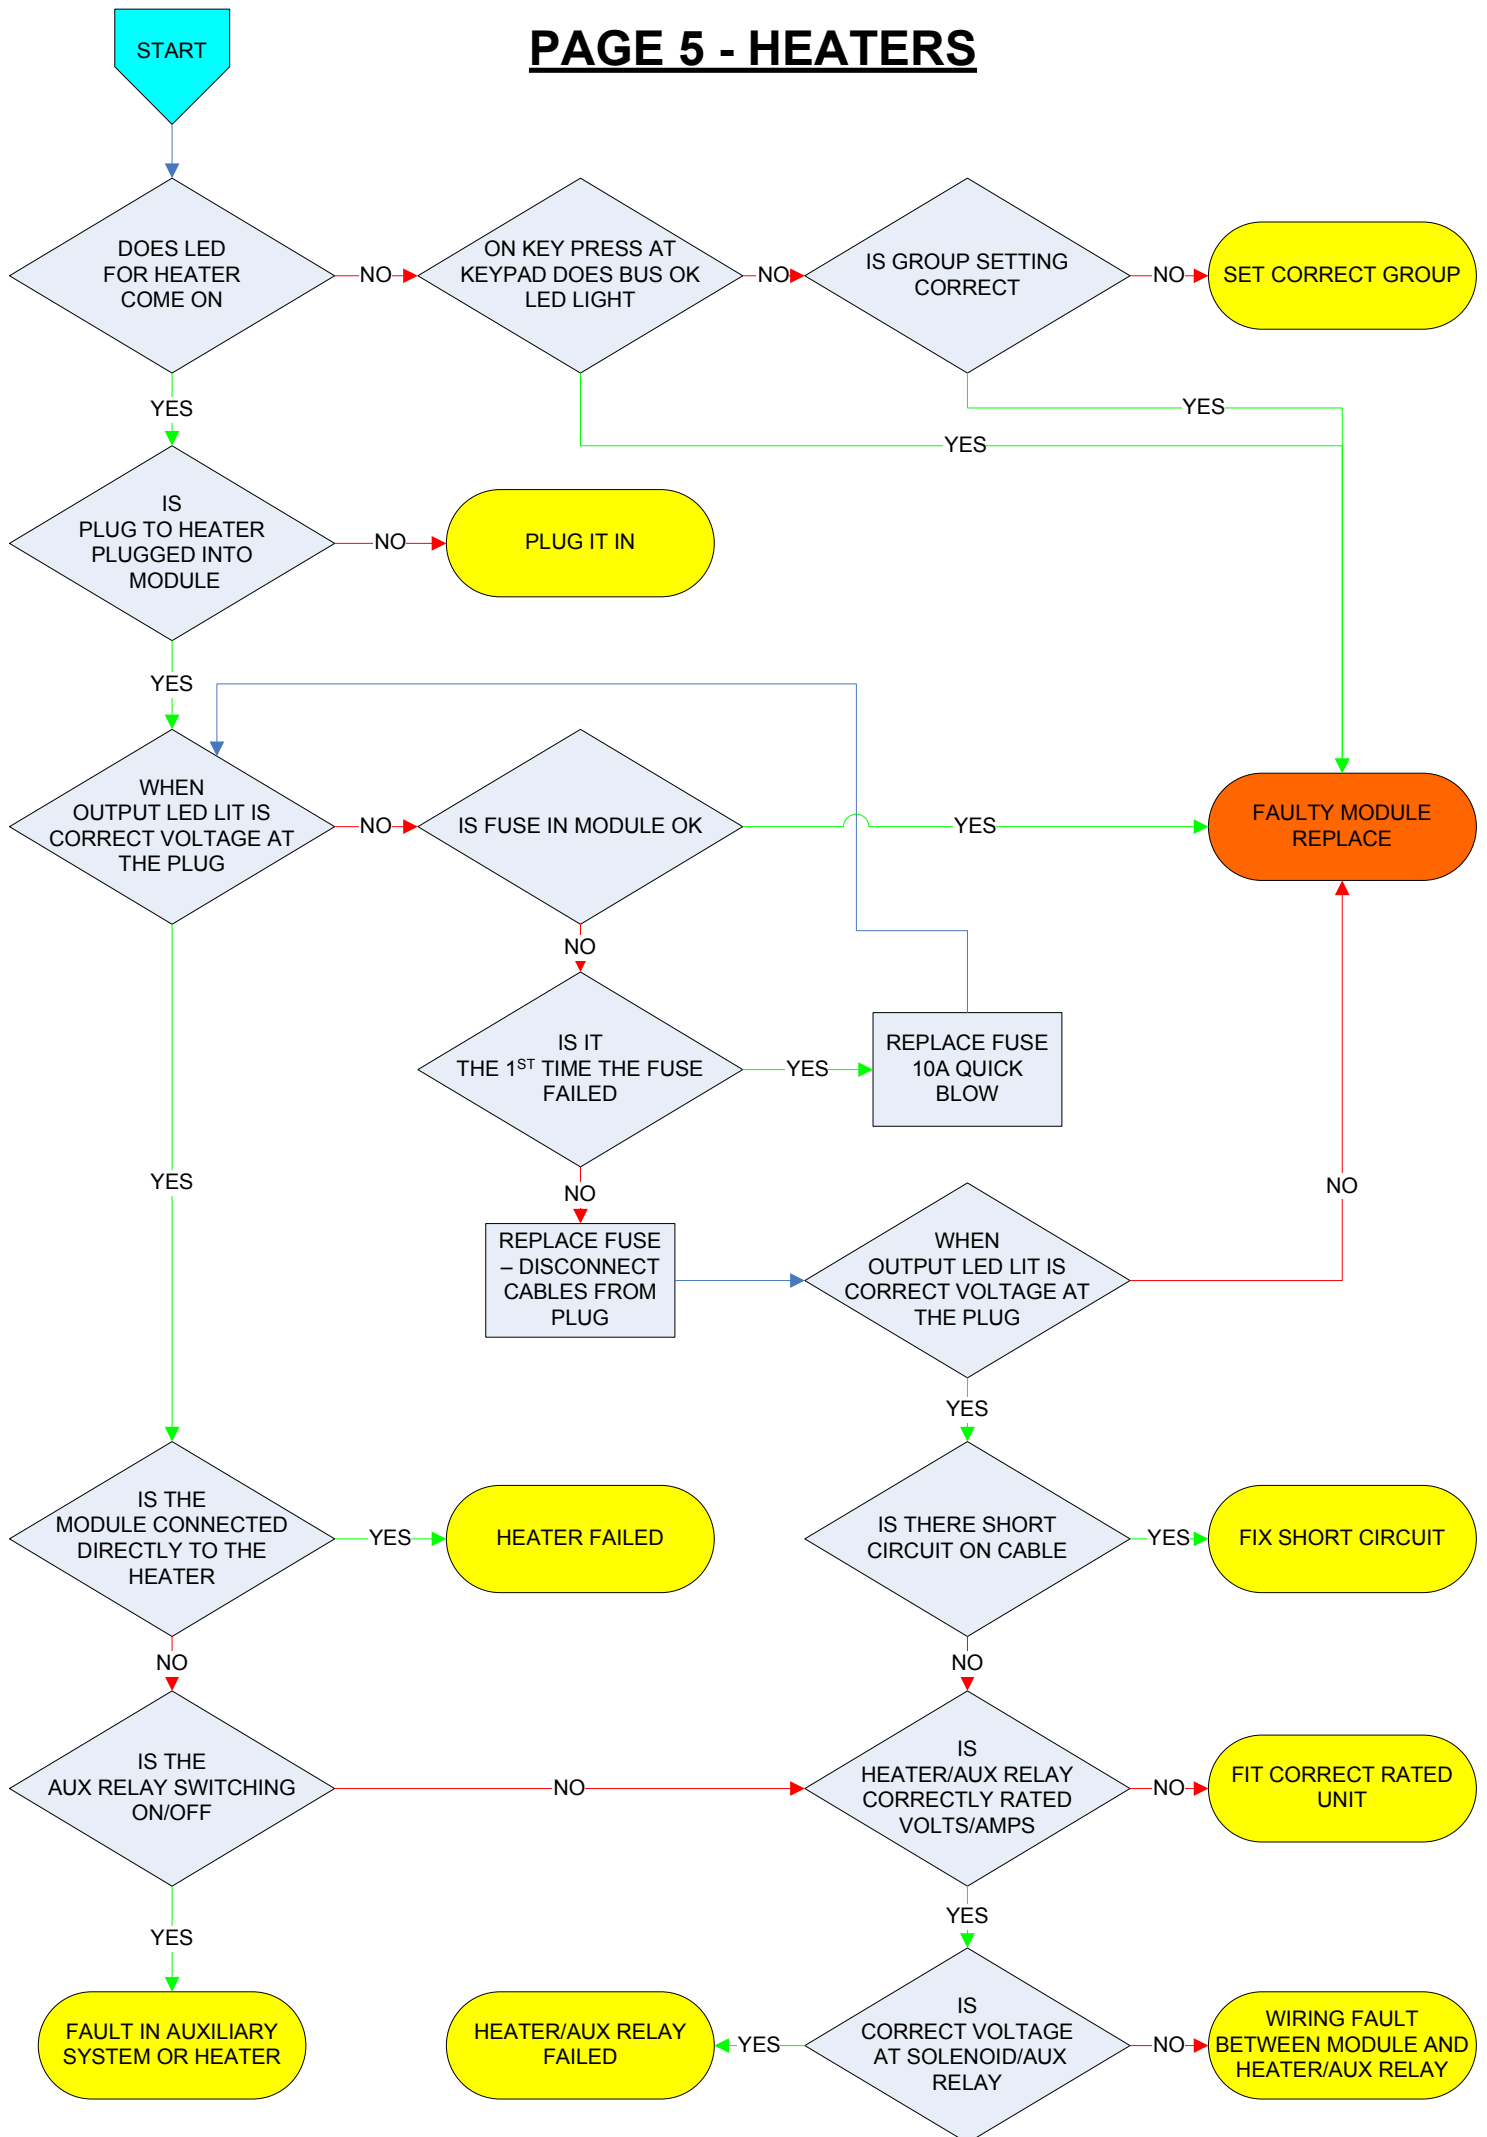


PAGE 6 – UNEXPECTED BEHAVIOUR

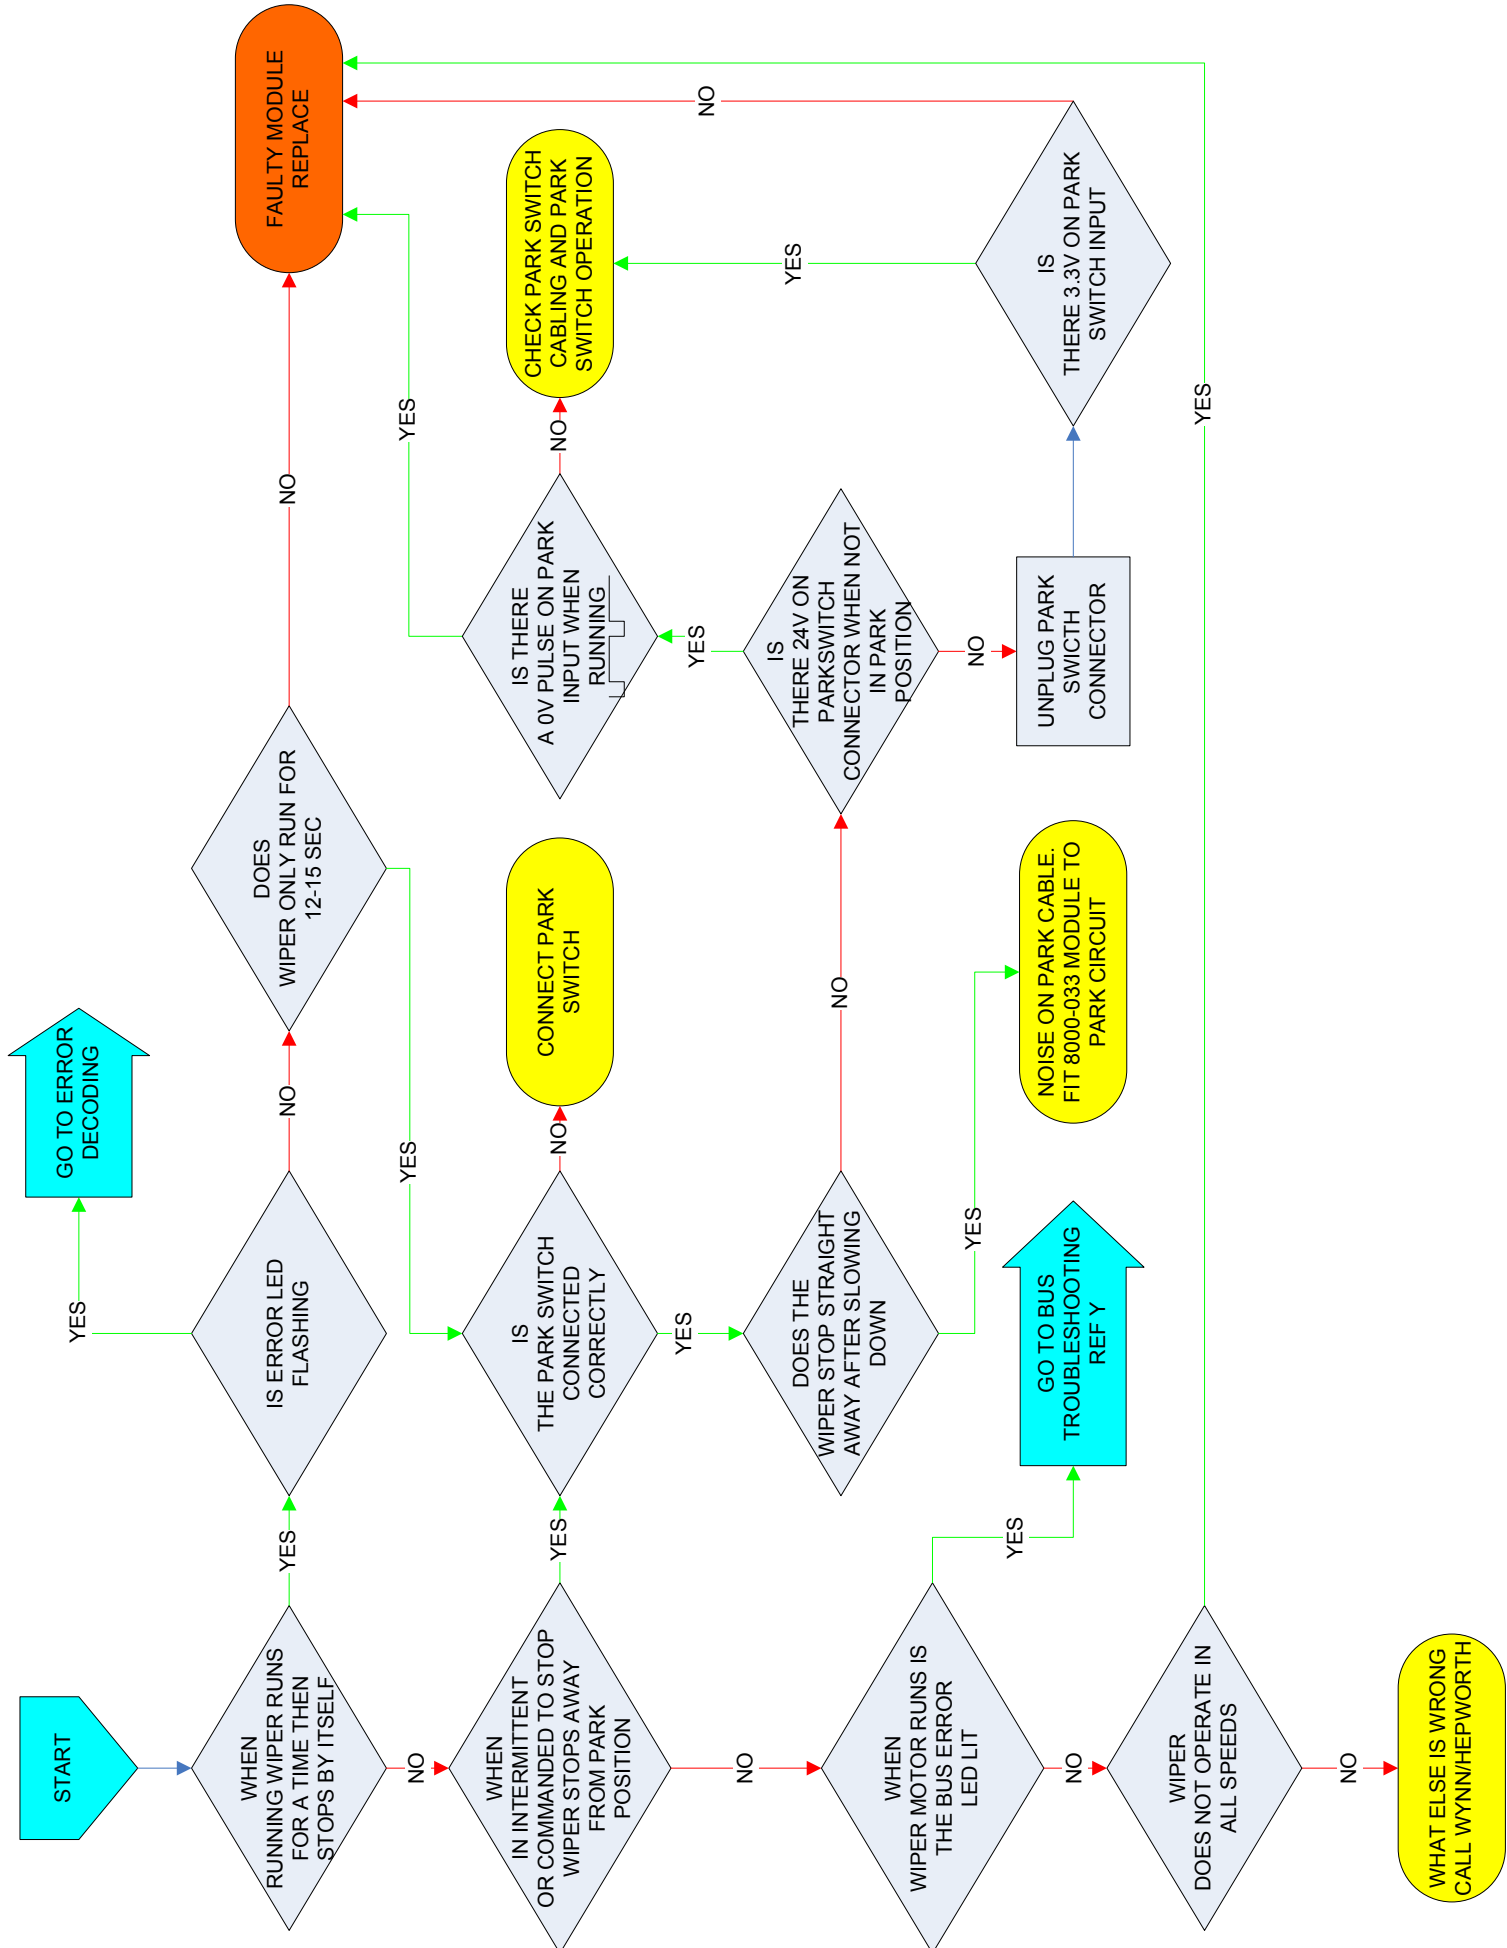

PAGE 7 – ERROR LED DECODING

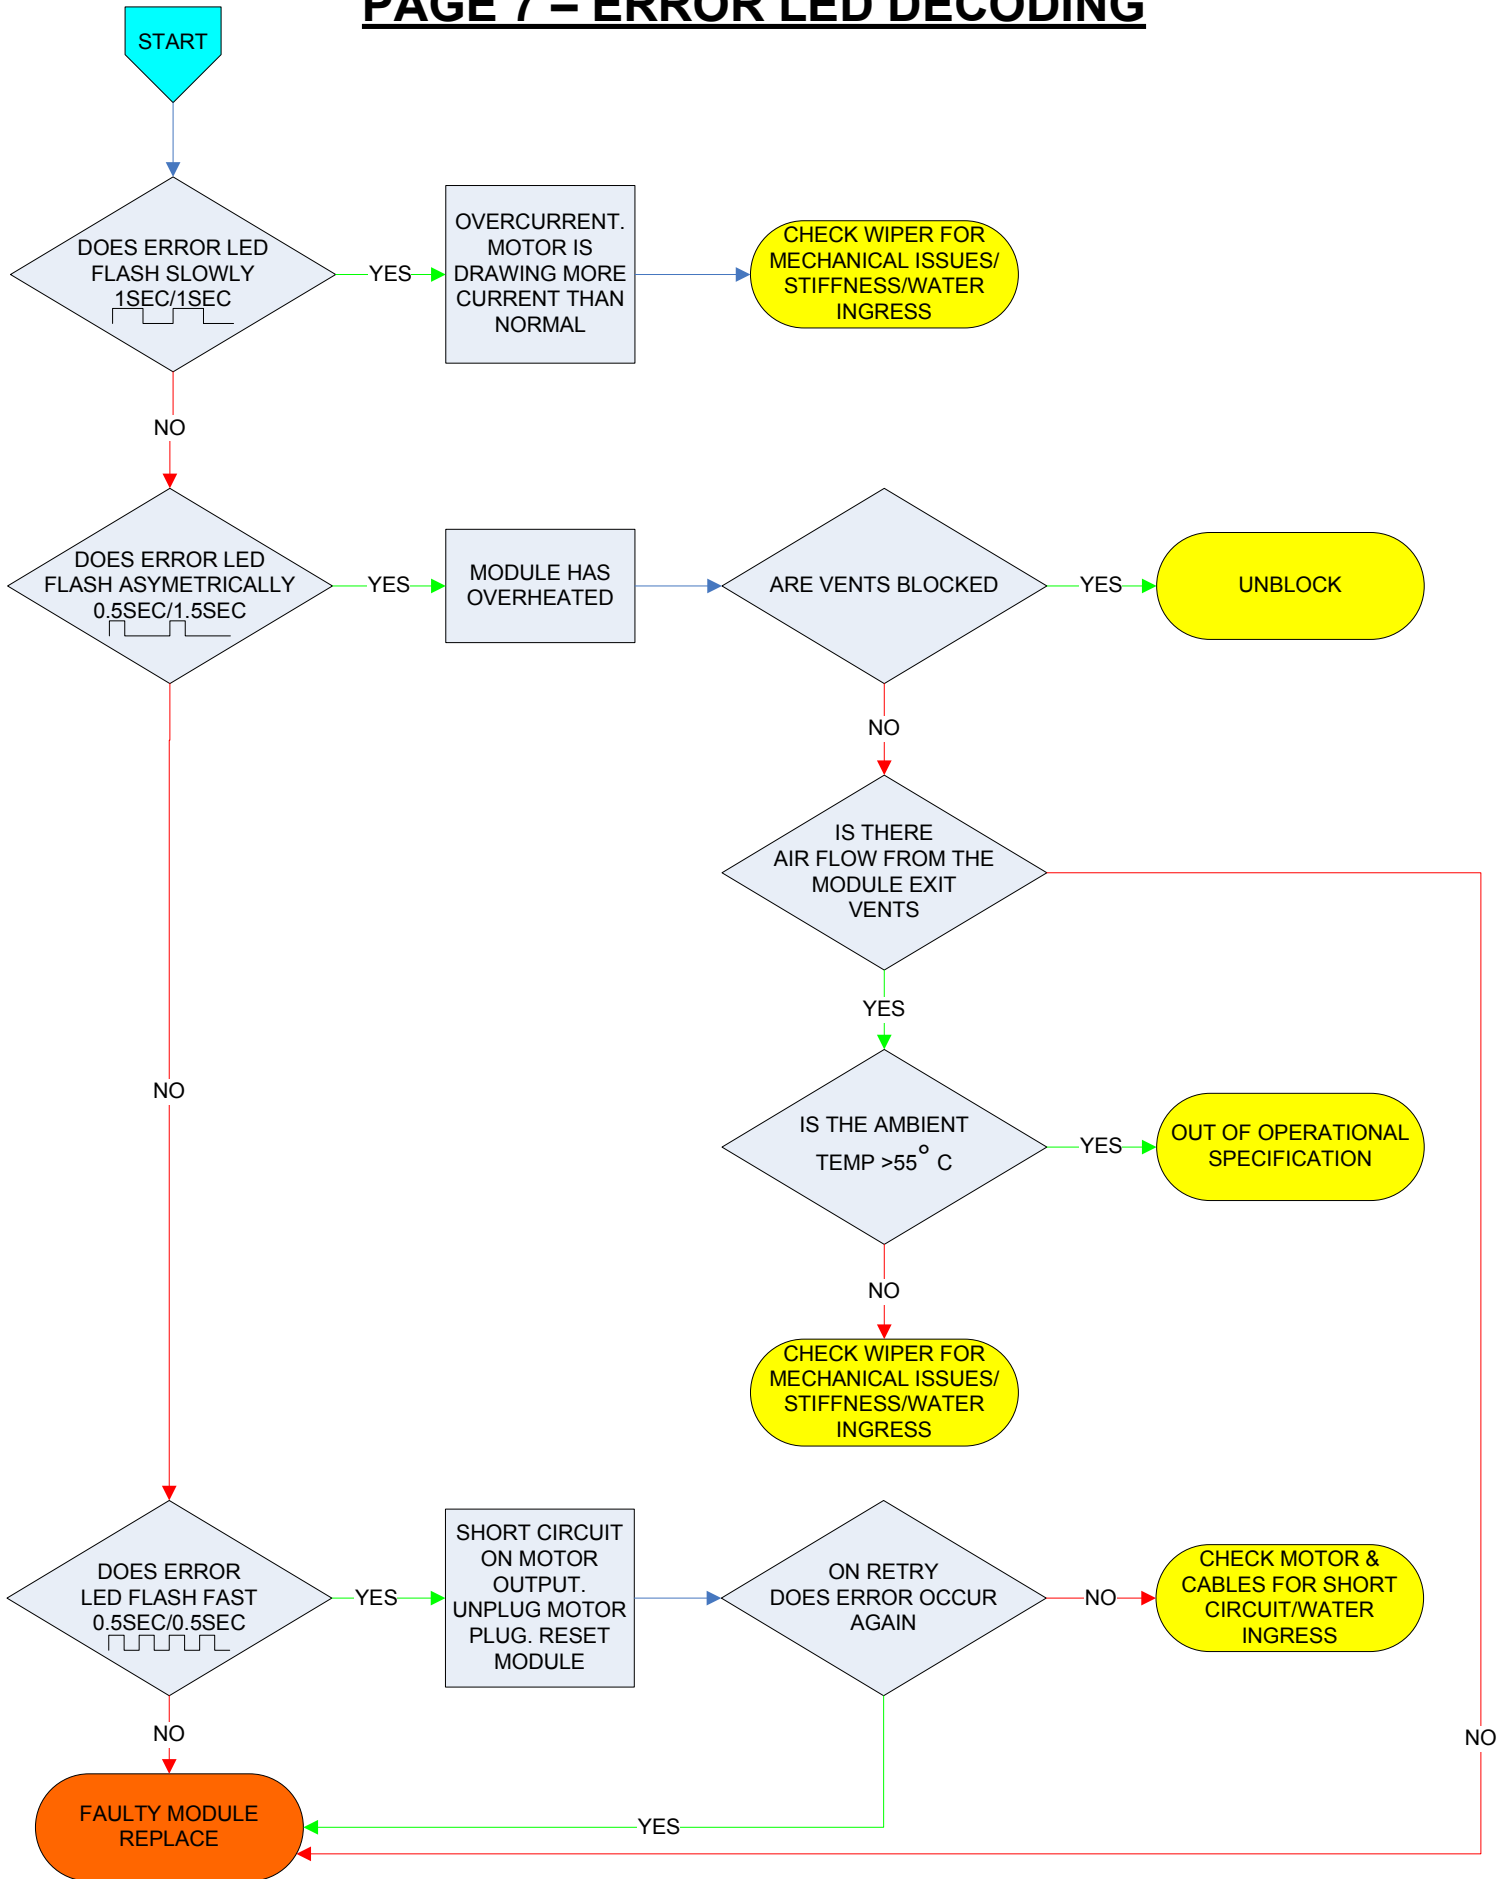

PAGE 8 – BUS

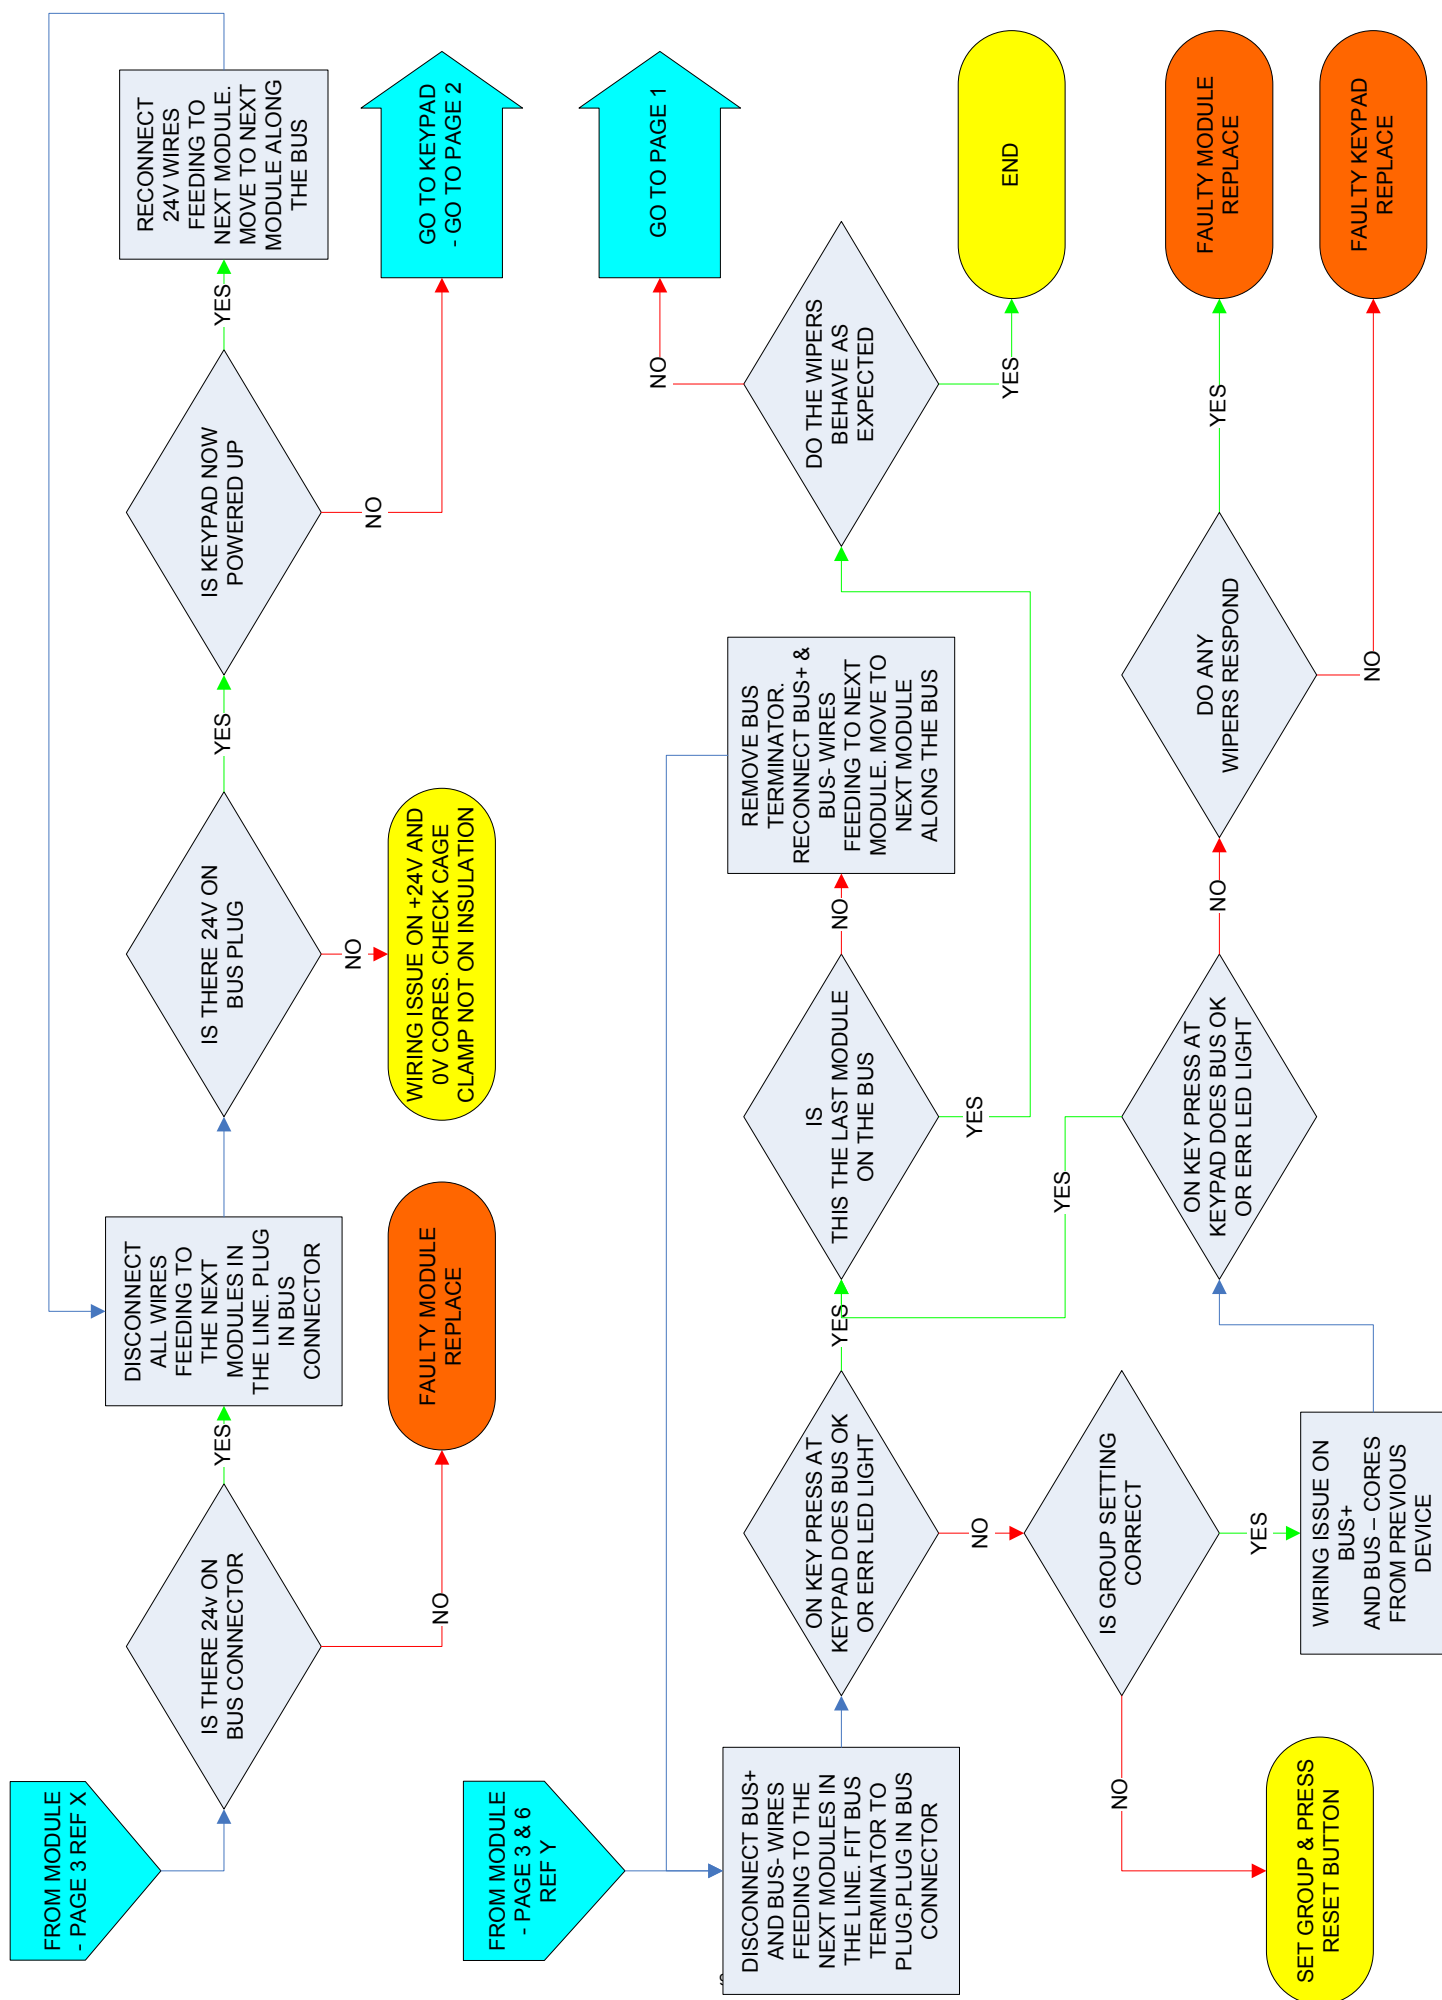

DOCUMENTATION

Whilst every effort is made to provide accurate information in good faith, no responsibility can be accepted by Wynn for inaccuracies and Wynn reserves the right to alter and amend specifications and designs without prior notice in line with our policy of continued improvement.

Spares Parts

To enable technical troubleshooting and ordering of spare parts, this manual should be kept in a safe place on board. It is also advisable to keep one set of spare parts on board for emergency use. Please contact Wynn directly or your local distributor / service centre for all order requirements.

Maintenance Schedules

Plan your maintenance work according to the schedule in this manual.

Our Commitment

We are committed to a 10 year product support programme. This ensures that any spare part will be available for any wiper at least 10 years after its purchase. It is strongly recommended that only genuine replacement parts manufactured by WYNN be used. This will guarantee that only suitable materials have been used and will ensure interchangeability of parts.

Quality and Testing

We are committed to the principles of Total Quality Management, ISO 9000. We manufacture our range of marine products to the highest standard and quality. We therefore maintain an ongoing schedule of product improvement and testing. To help us sustain such standards we maintain a salt-water test rig on which our products are taken, at random from the production line, and subjected to 3,000 hour continuous testing. We are sure you will receive many years trouble-free service from your Wynn product and hope you find this information pack comprehensive.

Guarantee

All Wynn equipment is tested before despatch from our works. The Windscreen Wiper System supplied has a 1 year warranty period provided the installation of the system and the subsequent maintenance is in accordance with the installation/maintenance instructions.

We cannot accept any responsibility for the installation of equipment, or damage to the equipment during installation, or normal wear and tear. The guarantee is negated if the equipment is not installed strictly observing the instructions set out in this manual, or not maintained as specified.

The Wiper System is very reliable but to ensure its continued smooth running we recommend that the following guidelines are adhered to:-

Monthly

- Check for wear on all parts subject to friction
- Visual inspection should be made of the blades to ensure that they are still in good condition and replace as soon as there are signs of wear or damage

Annually

- It is recommended that the blades are changed every 12 months

After the Wiper System has been operating in severe weather conditions it is advisable to thoroughly check the unit for signs of wear or damage.

This warranty excludes the wiper blades which are a consumable item and any replacements that are detailed in the manual as part of any regular maintenance requirement.

This guarantee is expressly in lieu of all other guarantees expressed or implied and of all other obligations of liabilities on our part, and we neither assume nor authorise any other person to assume for us any other liability in connection with the sale of our equipment. Faulty equipment must be returned, carriage paid, to our works for examination. Any legal action must be settled in the English courts under English law.

A worldwide network of agents supports Wynn's Marine product range. For details of the nearest Wynn agent please contact our Head Office. Wynn Agents operate in the following countries.

Algeria, Argentina, Australia, Brazil, Bulgaria, Canada, Chile, China, Columbia, Croatia, Denmark, Egypt, Estonia, Finland, France, Germany, Greece, Hong Kong, Iceland, India, Israel, Italy, Japan, Latvia, Lithuania, Netherlands, New Zealand, Norway, Peru, Portugal, Romania, Russia, Singapore, South Africa, South Korea, Sweden, Taiwan, Thailand, Turkey, UAE, U.S.A.



Wynn Marine Ltd

2-4 Merse Road, North Moons Moat, Redditch, Worcestershire B98 9HL

Tel: +44 (0) 1527 61243, Fax: +44 (0) 1527 66836

Email: customerservice@b-hepworth.com, website www.b-hepworth.co.uk